


VOYO controller quick start guide 	step 1 Download the iPhone version of the VOYO app, or use the following QR code.  Available on the App Store	step 2 Open VOYO app and select “CREATE ACCOUNT” on the Get Started screen.	step 3 After creating account and accepting the terms and conditions, select “SET UP NEW VEHICLE” on the Let’s Begin screen.	step 4 After viewing the checklist screen, locate your vehicle’s data port and plug in your VOYO OBD Device.	step 5 Turn the ignition key so that your dashboard lights turn on but do not start the engine. Select “SCAN FOR DEVICE” on the Step 1 screen of the app.	step 6 Enter your OBD device serial number into app when prompted on the Step 2 screen. Your device serial # is: [] For future reference, your VOYO serial number can also be found above the connector pins on the inside of the device.	step 7 Follow steps as directed in the VOYO app including for optional relay installation.	This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. IMPORTANT! Changes or modifications not expressly approved by Voyomotive could void the user’s authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. CAN ICES-3 (B)/NMB-3(B) This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d’Industrie Canada applicables aux appareils radio exempts de licence. L’exploitation est autorisée aux deux conditions suivantes: (1) l’appareil ne doit pas produire de brouillage, et (2) l’utilisateur de l’appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d’en compromettre le fonctionnement. This equipment complies with radiation exposure limits set forth for uncontrolled environment. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Cet équipement est conforme aux limites d’exposition aux rayonnements IC établies pour un environnement non contrôlé. L’antenne utilisée pour ce transmetteur doit être installée pour fournir une distance d’au moins 20 cm de toute personne et ne doit pas être colocalisée ou fonctionner en conjonction avec toute autre antenne ou transmetteur.
---	---	---	--	--	---	--	--	---

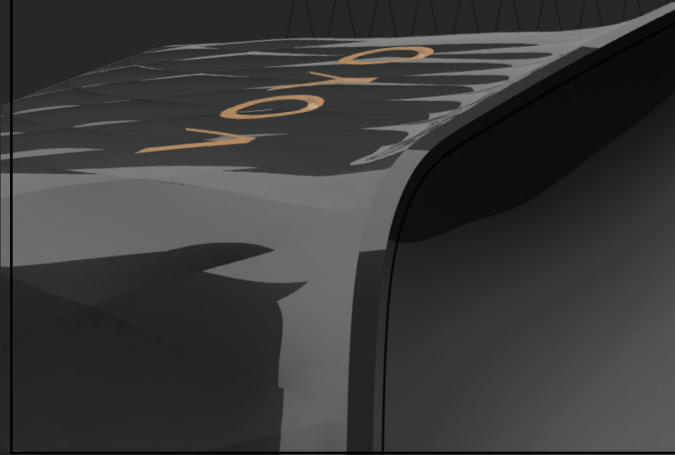