 


Homtime

HS1-qi

Wireless Charging with Bluetooth Speaker

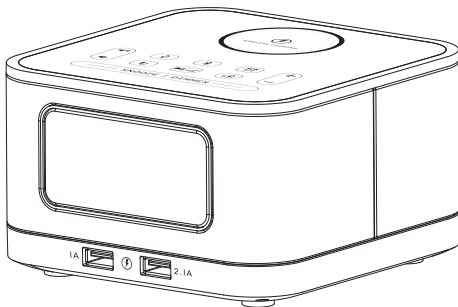

TIPS / IMPORTANT:

All safety and operation instructions should be read thoroughly before proceeding and please keep the handbook for future reference.

IMPORTANT SAFETY INSTRUCTIONS

flomtime

KNOW THESE SAFETY SYMBOLS



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electric shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

IMPORTANT SAFETY INSTRUCTIONS

- a Read these instructions.
- b Keep these instructions.

c Heed all warnings.

d Follow all instructions.

e Do not use this apparatus near water.

f Clean only with dry cloth.

g Do not block any ventilation openings.

 
Install in accordance with the manufacturer's instructions.

h Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

i Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

j Only use attachments/accessories specified by the manufacturer.

k Unplug this apparatus during lightning storms or when unused for long periods of time.

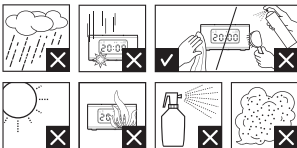

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

SPECIFICATIONS

- Bluetooth Specification: 4.2+EDR
- Bluetooth Profiles: HSP、HFP、A2DP and AVRCP
- Operating Distance: 10 meters Class II
- Output Power: 3W+3W
- Driver Unit: 40hm 3w 2in
- Frequency Range: 40Hz-20KHz
- S/N Ratio: >65dB
- Distortion Rate: <1%
- FM Frequency Range: 87.5-108MHz

 
WHAT'S IN THE BOX



Unit



Manual



AC adapter

 


AUX cable


** Product information is subject to change without prior notice.*

UNIT FEATURES & FUNCTIONS

FRONT

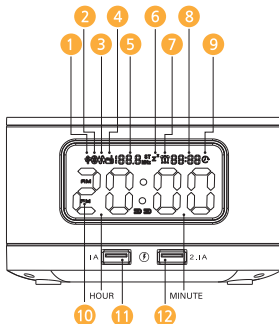

REAR

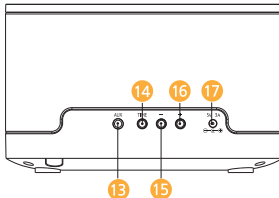 


FUNCTION

- | | |
|----|-------------------|
| 1 | USB MODE |
| 2 | BLUETOOTH MODE |
| 3 | AUX MODE |
| 4 | FM RADIO MODE |
| 5 | FM FREQUENCY |
| 6 | SNOOZE |
| 7 | ALARM |
| 8 | ALARM TIME |
| 9 | SLEEP |
| 10 | AM/PM |
| 11 | USB PLAY / CHARGE |
| 12 | USB CHARGE |
| 13 | AUX INPUT |
| 14 | TIME SETTING |
| 15 | TIME SETTING - |
| 16 | TIME SETTING + |
| 17 | POWER |

UNIT FEATURES & FUNCTIONS

 TOP

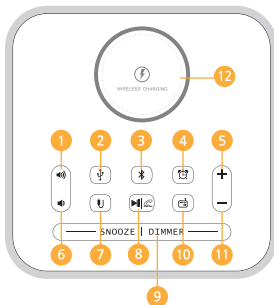

BUTTON	FUNCTION
1 VOL +	Volume up
2 USB MODE	USB Play Mode
3 BLUETOOTH	Bluetooth Mode
4 ALARM	Alarm Setting, On/Off
5 NEXT SONG/Adjusting Alarm Time	Skip Forwards Next Song/Adjusting Alarm Time
6 VOL-	Volume down
7 AUX IN	AUX IN Mode
8 PLAY/PAUSE,TALK,SCAN FM	Bluetooth&USB, Play/Pause, Answer the phone and Hang up, Auto scan FM station
9 SNOOZE, LED	SNOOZE, Display Brightness Level (4 Level : 1-2-3-4)
10 FM	FM Mode
11 BACKWARD SONG/Adjusting Alarm Time	Skip Backwards last song/Adjusting Alarm Time
12 Wireless Charging	Wireless Charging Station

POWER ON

Connect the power cable into the jack on the back of HS1-qi labeled "DC 5V", and then plug the power cable into the socket. The LCD display turns on.

SET TIME

Under any mode, press "TIME" to set time. Press "+" or "-" to switch the Hour mode between 12-Hour and 24-Hour. Press "TIME" to confirm it. Then Hour figure and MINUTE figure begin to flash. Press "+" or "-" to adjust the HOUR and press "TIME" to confirm it, then press "+" or "-" to adjust the MINUTE and press "TIME" to confirm the setting. It exits the setting in 5 seconds if no operation on any key.

SET ALARM TIME

When alarm is off, press "🔔" to set alarm time. Press "+" or "-" to adjust alarm time. It will confirm and exit setting in 5 seconds if no operation on any key.

ALARM FUNCTION

- 1) When alarm is on, icon is flashing in the LCD and the alarm ring tone is becoming larger and larger. Press " Snooze | REMIND " to activate the Snooze function. " Z " icon appears in the LCD. Alarm will be on again in 9-minute snooze.
- 2) To stop alarm, press "🔔" or press and hold snooze. Alarm is one-off alarm.
- 3) The alarm can last for 30minutes at most if no button is pressed.

PLAY MUSIC FROM MOBILE VIA BLUETOOTH**OPERATION**

Press "🔗" to put Bluetooth on. Go to mobile setting, turn on Bluetooth and search Bluetooth devices. Connect "HS1-qi". When it is successfully paired, you will hear a sound of "DU". Play music from your mobile now. (When Bluetooth is connected, press "🔗" or other mode key to switching it to other mode, Bluetooth will be OFF automatically and get disconnected with mobile. When switching it to Bluetooth mode again, connect "HS1-qi" manually or automatically.)

ANSWER THE PHONE

When a phone call is coming, press "📞" to answer the phone.

HANG UP

Press "📞" to hang up when having a phone call.

PLAY MUSIC

When playing music, press "⏸" to pause the music. Press "⏮" to skip backwards last song; Press "+" to skip forwards next song.

 
FM RADIO OPERATION

Press "📻" to put FM Radio on, "📻" appears on the LCD display. Press and hold "📻" to auto scan radio station and store the scanned stations

accordingly. The frequency starts from 87.5MHz to 108MHz and skips at every 0.1 MHz in scanning process. Once catching a station, it stops a second and store it, then continues the auto-scanning. When it scans from 87.5MHz to 108MHz, it will stop scan automatically. Press “+” or “-” to select the station.


PLAY MUSIC FROM AUX JACK

Press “” to put AUX IN on, “” appears on the LCD display. Plug in the 3.5mm audio cable into the AUX IN jack. Play music now.

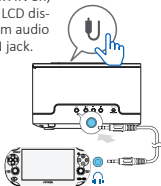


USB PLAYBACK & CHARGING

 Supports USB memory music playback and enables fast charging of smartphones and other digital devices.

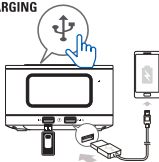

Back-up the lithium battery

 The 3.7V lithium battery is to retain the clock/alarm in case of a power failure. It can not display the alarm/clock time when battery is low, need charge.

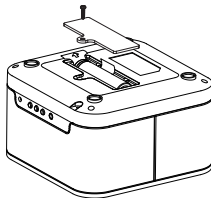

Infrared remote control (Option)

Install the battery: Unscrew the back cover of the remote control, open the screws, install 3 pieces AAA battery, lock the screw and screw the back cover.

Sync time with phone: Unscrew the back cover of the remote control, connect the remote control's lightning connector to the iPhone interface. In this way, the time will be synced with iPhone.

Sync time with the remote control: Align the remote control with the alarm screen, press the sync button on the remote control, the time of the remote control will be transmitted to the alarm clock and turn off the alarm, reset the alarm.

CAUTION

a Wireless charging covers are sold separately.

b Do not place the wireless charging cover solely on the wireless charger. Doing so may overheat the wireless charger and cause a fire. It may also result in serious burn or device malfunction.

c To charge a mobile device that does not have a built-in wireless charging coil, attach a wireless charging cover to the mobile device. Then, place the mobile device on the wireless charger.

d Do not place foreign materials, such as metal objects, magnets, and magnetic stripe cards, between the mobile device and the wireless charger. The mobile device may not charge properly or may be damaged due to overheating.

e When the mobile device is fully charged, remove it from the wireless charger.

f When the mobile device is not placed on the charging surface properly, or depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.

g Depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.

h Wireless charging may not work properly if you have attached a thick case to your mobile device. If your case is thick, remove it before placing your mobile device on the wireless charger.

i If you use the wireless charger in areas with weak network signals, you may lose network reception.

j If you connect a charger to the mobile device during wireless charging, the wireless charging feature will be unavailable.

k The wireless charger is compatible with Wireless Power Consortium (WPC) certified devices.

CARE AND MAINTENANCE

Read the following recommendations before using the unit . Following these you will be able to enjoy our product for many years.

1. *Keep the product dry and don't put it in the damp place to avoid the product's internal circuit being affected.*
2. *Keep the product away from direct sunlight or hot places. High temperature will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.*
3. *Don't expose the product to cold areas as it may damage the internal circuit board.*
4. *Don't try to disassemble the product as it may get damaged if you are not professional.*
5. *Don't let the product fall down onto the floor or other hard surfaces. The internal circuit might get damaged.*
6. *Don't use intensive chemical products or detergent to clean the product.*
7. *Don't scratch the surface with sharp things.*

FAQs

What to do when there is no sound when making a call with the unit ?

1. *Ensure **the unit** connects well with Bluetooth mobile phone*
2. *Ensure the volume has already been properly adjusted*

3. *Make sure the audio input of car audio system is adjusted to AUX.*

What to do when my mobile phone can not search and find the unit ?

*If **the unit** is not in pairing mode, your mobile phone can't find it. Please make sure **the unit** is in pairing mode and in the effective working range.*

What to do when the voice is not clear?

1. *Ensure your mobile phone is in strong-signal areas.*
2. *Ensure **the unit** is in the effective working range.*

How far is the effective range between the unit and Bluetooth mobile phone?

According to the Bluetooth standard, the max. controllable range of Class II handsfree kit is 10 meters. But it varies with different environment and paired mobile phone.

Poor radio reception?

1. *Keep the clock radio away from other electronic devices to avoid radio interference.*
2. *Fully extend and adjust the position of the FM antenna.*

No response from the clock radio

Disconnect and reconnect the power cavlllllllee, then turn on the clock radio again.

Clock/alarm setting erased

- 1. Power has been interrupted or the power plug has been disconnected.*
- 2. Reset the clock/alarm.*
- 3. Backup battery was low, so please charge it.*

** Please comply with the actual product if there is any discrepancy between the product and the content of the manual*



Homtime Group LTD

info@homtime.com

www.homtime.com

www.facebook.com/homtime.global