



TRANSFORMING RC MISSILE LAUNCHER



**BATTERY
OPERATED
PLAY VEHICLE**

AGES 8 AND UP

**⚠ WARNING
CHOKING HAZARD**

Small parts. Not suitable
for children under 3 years.




**WIRELESS
RC
ACTION!**

**SHARPER
IMAGE**

» MORPHS INTO ASSAULT VEHICLE! »



SHARPER IMAGE

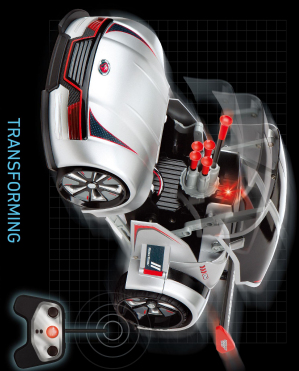

TRANSFORMING RC MISSILE LAUNCHER

 
TRANSFORMING RC MISSILE LAUNCHER

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your car.
- Do not submerge car or controller in water.
- Never operate your car on the street or highway.
- Adult supervision is recommended when operating this car.
- Remove all batteries when not in use to avoid accidental operation.
- Never operate your car in a confined or crowded area, and do not use people or animals as obstacles.
- Do not run your car into furniture, objects or hard surfaces, as this will cause damage to both the objects and the car.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the car is switched to "ON".
- Do not leave car or transmitter near sources of heat or under direct sunlight for long periods of time.
- Do not leave car or transmitter outside overnight. Dampness is harmful to interior components.



Requires 6 "AA" batteries (not included)



Requires 2 "R4" batteries (not included)

BATTERY INFORMATION

Operation requires 6 "AA" batteries (not included) for car and 2 "AA" battery (not included) for radio controller.

- Carefully remove items from packaging.
- Refer to the diagram on the right for battery installation. **Unscrew the battery door located on the roof of the car with a Phillips screw driver.**
- Insert 6 "AA" batteries while observing the correct polarity.
- Close and screw back to close the battery door.
- Slide open the battery compartment door on the back of the controller. Insert 2 "AA" battery following the correct polarity. Replace the battery compartment door.

SAFETY WARNINGS - PLEASE READ BEFORE USING PRODUCT

- *Not recommended for children under 8 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electrical shock.
- *Inspect the product before every use. If the product appears damaged in any manner, discontinue use and discard immediately.

BATTERY WARMING:

- Do not mix old and new batteries.
 - Do not use alkaline, standard (carbon-zinc), or rechargeable batteries.
 - Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
 - Remove batteries when not in use. Regularly dispose of exhausted batteries according to table 8, state, and local laws. Do not dispose of batteries as a fire. They may leak or explode.
 - Only use manufacturers specified standard, charged or under charge. If applicable, open to the manufacturer.
 - Always use, replace, and recharge (if applicable) batteries under adult supervision.
- KEEP THIS PROCEDURE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION**

The *Journal* is published quarterly by the American Psychological Association, 750 First Street, N.E., Washington, D.C. 20002-4242. Second-class postage paid at Washington, D.C. and at additional mailing offices. Postmaster: Send address changes in U.S.A. to *Journal of Experimental Psychology: Applied*, c/o American Psychological Association, 750 First Street, N.E., Washington, D.C. 20002-4242. Outside the U.S.A.: Send address changes to *Journal of Experimental Psychology: Applied*, c/o H.K. Lewis, Ltd., 30 Abchurch Lane, London EC4N 3DF, England.



16" L x 10" H x 10" W