 




TECH SUPPORT
support@ovtin.com
www.ovtin.com


VTIN

True Wireless Stereo Bluetooth Speaker

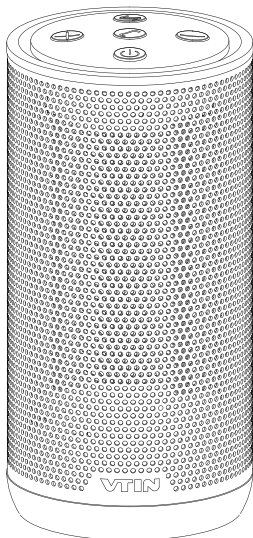

User Manual

English	-----	2 - 7
Deutsch	-----	8 - 13
Français	-----	14 - 19
Español	-----	20 - 25
Italiano	-----	26 - 31
日本語	-----	32 - 37

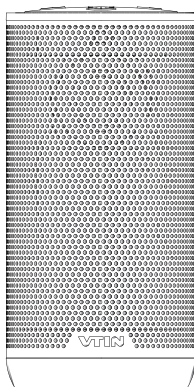

EN

- ① Micro Usb Charging Cable
- ② Aux Audio Cable
- ③ User Manual

FR

- ① Micro Câble De Charge Usb
- ② Aux Câble Audio
- ③ Manuel D'utilisateur

IT

- ① Micro Usb Cavo Di Ricarica
- ② Aux Audio Cavo
- ③ Mauale D'uso

DE

- ① Micro Usb Ladekabel
- ② Aux Audiokabel
- ③ Benutzerhandbuch




ES

- ① Cable De Carga Micro Del Usb
- ② Cable De Audio Aux
- ③ Manual Del Usuario

JP

- ① Micro USB 充電ケーブル
- ② AUX オーディオケーブル
- ③ 説明書

DIAGRAM

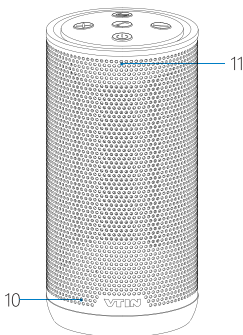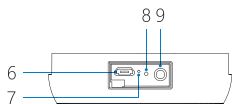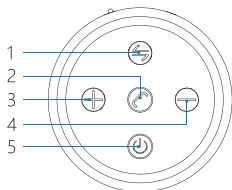

1. TWS Interconnection Control
2. Call/Play or Pause/Pairing/
Remove the pairing
3. Volume Up/ Next Song
4. Volume Down/Previous Song
5. Power On/ Power Off

6. USB Charging Port
7. Charging Light
8. Reset
9. AUX Input Port
10. Mic
11. Indicator Light

SPECIFICATION

Bluetooth Standard : V4.2
Battery : 2200mAh/3.7V
Input Voltage : DC 5V

Power Out : 6Wx2
Playing Time : Up to 18H (70% volume)
Water Resistant : IPX5

DIAGRAM

1. Power On/Off: long press the  for three seconds to turn on the speaker with a voice prompt. The speaker will enter pairing mode automatically with the red and blue indicator lights flashing alternately at the first use, so that your Bluetooth device can search for and connect to it. It will connect the mobile phone automatically next time if your phone has been paired.
2. Searching and Connection: turn on the Bluetooth function of the mobile phone and search the Bluetooth device. From the Bluetooth list, click the "VTIN B1" to connect the Bluetooth device with a voice prompt. When it is connected successfully, the blue indicator light will flash once every 10 seconds.
3. After the connection, it can play the music on your phone.
4. Phonecall Function: When the speaker is connected to your phone, it will play the ringtone (Preset ringtone in IOS system) of the incoming call and read the phone number.

Call Status as the following:

- A: Answering a call: When a call is coming, short press .
- B: Rejecting a call: When a call is coming, long press  for two seconds.
- C: Hanging up a call: During the call, short press .
- D: Audio source switch: During the call, long press  for two seconds (The audio source can be switched between the speaker and the mobile phone).
- E: Answer the other call while holding the current call: During the call, when the other call comes, short press  to answer while holding the current call.
- F: Reject the other call: During the call, when the other call comes, long press  for one second to reject.

5. Play or Pause: When you are playing music on the mobile phone from the speaker, short press  to play or pause.
6. Volume Up: During the music playing or phone call, short press  to increase the volume.
7. Volume Down: Short press  to decrease the volume when playing music or during a call.
8. Next Song: Long press  for two seconds, then the music will be switched to next song when playing music.
9. Previous Song: Long press  for two seconds, then the music will be switched to the previous song when playing music.
10. Enter Pairing Mode Manually: If you want to disconnect the current pairing, long press  for three seconds. With a voice prompt, the speaker will enter the pairing mode with the red and blue indicator light flashing alternately. Then, other Bluetooth devices can search and connect to VTIN B1.
11. Clear the Paired List: To remove all the paired information, long press for   6 seconds until the speaker gives out a voice prompt when the speaker begins to pair. Although the mobile phone has paired to VTIN B1, it needs pairing again (IOS system needs ignoring the VTIN B1 device first)

12. TWS Interconnection

A: Interconnection before Bluetooth Pairing:

Turn on TWS speakers, then long press  separately for 3 seconds. With a voice prompt, the speakers enter interconnection and complete connection automatically in 10 seconds. At this moment, long press  of one speaker in one of the speakers for 3 seconds to enter the pairing mode. With a voice prompt, the mobile phone can search and connect to the speakers. You can play the music through TWS speakers.

B. Bluetooth Pairing before Interconnection:

Turn on one speaker and pair it with the mobile phone. Before playing music, turn on the other TWS speaker and long press  of the speakers separately to complete interconnection. You can play the music through TWS speakers when connecting successfully.

If the TWS speakers connect successfully, the TWS speaker will interconnect automatically next time when you turn on them.

13. AUX Input Function: You play music from those audio devices without Bluetooth function via AUX input function, such as MP3, CD and DVD. Insert the attached AUX cable  into , so the speaker will switch to AUX play mode automatically. The  and  can only increase or decrease volume but not select song at this mode.
14. Low Battery Alarm and Power Off: when the speaker battery is lower than 20%, a voice prompt will appear; when it is lower than 5%, the speaker will power off automatically.
15. The output capacity of the adapter should be higher than 5V/1A to charge. During the charging, the charging indicator light  is red and it turns green when finished charging.

DIAGRAM

1. The mobile phone can't search VTIN B1.

After long press  for three seconds, the speaker will enter pairing mode. Then, pair it with your phone.

2. VTIN B1 is in the Bluetooth paired list, but it can't be connected.

Long press  and  simultaneously for 6 seconds to delete all paired list. Meanwhile, delete the VTIN B1 from the paired list in the mobile phone, then, restart pairing.

3. The charging time is too long.

Maybe the output ability of the adapter is weak, it can't support the maximum current to charge. Please charge the speaker with the adapter that has the output ability higher than 5V/1A.

4. During the call, the other side can barely hear your voice.

The MIC is located near the Logo. Please rotate the speaker until the MIC faces to you to improve the quality of voice.

5. TWS interconnection fails.

Owing to the accidental errors of the paired memory, they can't conduct interconnection. Please delete the paired list. Long press  and  simultaneously for 6 seconds until you hear the voice prompt, then, restart connecting.

CONSIDERATION

1. It's normal that the speaker bottom will be warm during working or charging.

2. To avoid damage, please use the provided cable when charging or activating the AUX function.

3. Please prevent the speaker from clashing, high dropping and corrosive materials.

4. If the speaker needs cleaning, neutral detergent is good for cleansing after the speaker is turned off.

5. During the usage, ensure the interface silicon cover is sealed to guarantee the waterproof effect.

6. When the speaker is laid idle, store it after it is fully charged. Ensure it is fully charged once every month to prevent from over discharge, which will influence the speaker service life.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for could void the user's authority to operate the equipment.