

VanDerWaals

VAN-DER-WAALS.COM | November 2016

SMART HANDBAG

USER MANUAL



Compatibility

The VanDerWaals smart handbag is compatible with iPhone 5 and newer, and Android devices running Android 4.3 or above.

 
What's included



Smart handbag
VanDerWaals charging pad
Wall adapter

Getting Started

The VanDerWaals smart handbag is compatible with iPhone 5 and newer, and Android devices running Android 4.3 or above.

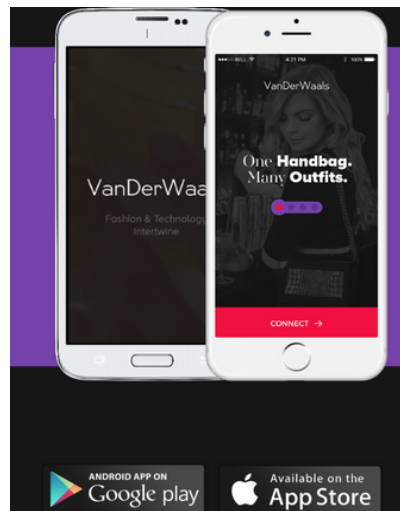


Before You Begin

Your Smart Handbag must be fully charged before the first use. Place the VanDerWaals charging pad onto the backside of your bag. Then connect the USB side of the VanDerWaals charging pad to the USB wall adapter.





Download and Install the VanDerWaals APP

 Device pairing and setup requires the download of VanDerWaals APP from the APPLE iOS App Store or Google Play store. Once you have the app installed on your device, make sure you have the latest version installed.

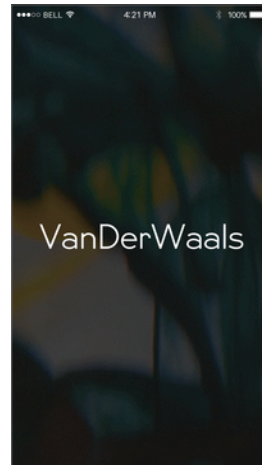


Pairing with your device

  Your Smart Handbag must be fully charged before the first use. Place the VanDerWaals charging pad onto the backside of your bag. Then connect the USB side of the VanDerWaals charging pad to the USB wall adapter.

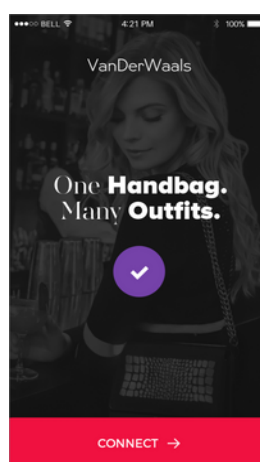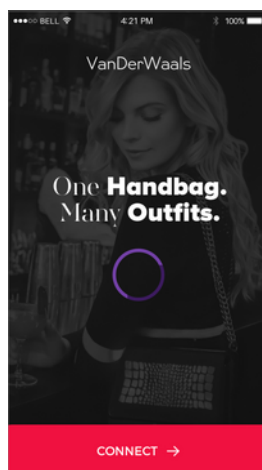

Choose your color

 Name your color racks based on occasion, mood, or your surroundings
Drag and move the color blocks to organize them according to your theme

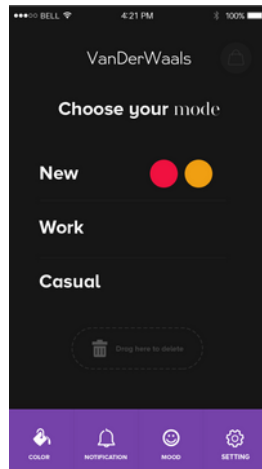

Recharging

The green LED on the VanDerWaals charging pad light up as plugged into the wall charger

Move the charging pad close to the back of the handbag

The pad is automatically aligned to the handbag, and starts recharging

A blue LED light means fast recharging mode or a red LED light means stable charging mode

REGULATORY AND SAFETY NOTICES

USA: Federal Communications Commission (FCC) Statement Name:

Smart Handbag

Model: CCXXXXXXXXXX

FCC ID: 2AIOT-CC16B

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help. FCC Warning:

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings
- Follow all instructions
- If you notice any signs of skin irritation or experience any discomfort, please discontinue use.
- Do not attempt to open the bag. Substances contained in this product and/or its battery may damage the environment and/or human health if handled and disposed of improperly.
- Do not tamper with your bag.
- Do not use abrasive cleaners to clean your bag.
- Do not place your bag in a Dishwasher, Washing Machine or Dryer.
- Do not expose your bag to extremely high or low temperatures.
- Do not wear your bag in the shower, sauna or steam room.
- Do not leave your bag in direct sunlight for an extended period of time.
- Do not leave your bag near open flames.
- Do not dispose of your bag in a fire. The battery could explode.
- Do not attempt to disassemble your bag; it does not contain serviceable components.
- Do not attempt to replace your bag battery. It is built-in and not changeable.
- Charge the battery in accordance with the instructions supplied with this guide.
- Use only the charger that shipped with your product to charge the battery.
- Charge your bag using a certified ed computer, powered hub or power supply
- Do not attempt to force open the built-in battery
- Never allow children to play with the bag; the small components may be a choking hazard!

LEGAL

Please consult your device packaging to determine whether this device is compatible with your particular mobile device. Manufacturer is not responsible for any damages to any mobile device incurred through the use of this product.

Manufacturer shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this battery in conjunction with any device or accessory other than the appropriate mobile device for which this battery is designed. If you are responsible for battery use with an unintended mobile device and damages result from such use, you agree to indemnify the Manufacturer for any resulting injuries to any third parties.

© 2015 Flying Frog Inc. All Rights Reserved. VanDerWaals is a trademark of Flying Frog Inc. All other trademarks are properties of their respective owners. Design and Technology by Flying Frog in New York. Assembled in China.