

(Fold Inward)

Using the FM Radio
Change input modes until you enter FM radio mode.

- In FM radio mode, all playback will be controlled by the buttons on the speaker.
- Press the [MI] button to start or stop automatically scanning & saving available radio stations. If it is not stopped, the radio will make a complete scan of and save all nearby radio stations with good reception.
 - Press the [K</MIC V-] and [▶▶I/MIC V+] buttons to skip through saved stations.

Using a Microphone
A microphone may be used in any mode.

- Plug the 1/4" connector of a wired microphone (not included) into the microphone input port on the top of the speaker. Switch the mic ON.
- Press and hold the [▶▶I/MIC v+] button to **increase** mic volume.
 - Press and hold the [K< / MIC V-] button to **decrease** mic volume.
 - Adjust overall volume with the [**POWER /VOL**] dial on the speaker.

Note: In order to avoid loud feedback, keep the microphone behind the speaker and pointed away from the speaker, and switch it off when not in use.

FCC Statement
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

(Back Cover)

(Front Cover)



Instruction Manual

Before You Begin...


READ CAREFULLY AND KEEP THIS MANUAL

- A Caution**
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.
- **THIS DEVICE IS NOT A TOY**, keep away from children and pets.
 - Do not disassemble, modify, or repair the device.
 - Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
 - **Do not submerge in water.**
 - Low power may cause poor Bluetooth connection or sound distortion.
 - Do not overcharge battery.
 - If using with a USB adapter, make sure the adapter is not damaged.
 - Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
 - The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

In the Box

- **Wireless Speaker** (x1)
- Shoulder strap (x1)
- USB Charging Cable (x1)
- User Manual (x1)

Location of Controls

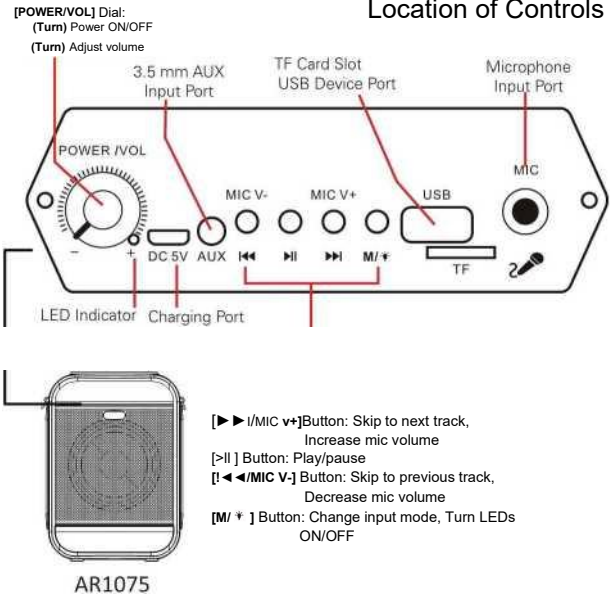


Getting Started

Charging the Speaker
Plug the small connector of the included charging cable into the charging port on the top of the speaker. Plug the large connector into the USB port on a computer, or into a **5V USB adapter** (not included) and plug into a wall outlet.

The LED indicator will **turn RED** while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

 Powering ON/OFF
• Turn the [**POWER /VOL**] dial clockwise until it clicks to power the speaker ON.
• When powered ON, the speaker will enter Bluetooth pairing mode, and may automatically re-pair to any available previously-paired device nearby.
• Turn the [**POWER /VOL**] dial counter-clockwise until it clicks to power the speaker OFF



Adjusting Volume
In all modes, overall volume can be adjusted by turning the [**POWER /VOL**] dial on the top of the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected device.
• Turn the [**POWER /VOL**] dial clockwise to increase volume.
• Turn the [**POWER /VOL**] dial counter-clockwise to decrease volume.

Adjusting Playback
In Bluetooth, FM Radio, TF and USB modes, playback can be controlled by the buttons on the top of the speaker.

- Press the [**MI**] to pause playback. Press again to resume.
- Press the [**▶▶I/MIC V+**] button to skip to the **next** track/station.
- Press the [**I<◀/MIC V-**] button to skip to the **previous** track/station.

Changing Input Modes
Press the [**M/ ***] button on the top of the speaker to switch input modes.

A TF card or USB device must be inserted or connected to switch to these modes.

Using the LED Lights

- Press and hold the [**M/ ***] button on the top of the speaker to turn the LED lights ON and OFF

Bluetooth Pairing

1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode.
2. Set your mobile device to search for Bluetooth devices. When the list appears, select **PARTY STAR** from the found devices.
3. After a successful pairing, a tone will be heard and you will be able to play music on the speaker.

Using the AUX Input
Insert one end of a 3.5 mm auxiliary cable (not included) into the AUX input port on the top of the speaker. Insert the other end into the headphone jack or 3.5 mm aux output port on your media-playing device.

The speaker will automatically switch to auxiliary input mode.
In AUX mode, all playback will be controlled by your connected device.

Using a TF Card or USB Device
To insert a TF card, insert a TF card into the TF card slot on the speaker with the metal contacts facing down, and push in until it clicks.

To insert a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB device port on the top of the speaker.

Change input modes until you enter TF or USB mode. The speaker will automatically begin playing music off the device. **Note:** "You must have a TF card or USB device inserted to switch to TF or USB input mode.

In TF card and USB mode, all playback is controlled by the buttons on the speaker.

- Press the [**▶▶I/MIC V+**] button to pause and resume playback.
- Press the [**▶▶I/MIC V+**] and [**I<◀/MIC V-**] buttons to skip tracks.