 


1. Turn the **[Mode]** Dial to Tape.
2. Insert a cassette into the cassette deck.



-

- ## Using the Audio Outputs

While connected, audio will be heard from the connected speakers instead of the AR4002.

While connected, audio will be heard from the connected speakers instead of the AR4002.

Using the Headphone Input

To listen to audio from the AR4002 with headphones, insert the 3.5 mm connector from your headphones into the headphone jack on the front of the speaker.

READ CAREFULLY AND KEEP THIS MANUAL

Caution: Any changes or modifications not express

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

— Direct current symbol

 The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Southern Telecom is under license.



- [illegible]

POSITIONING THE UNIT

- A minimum distance of 6 INCHES must be maintained to provide sufficient ventilation.
- Do not use adequate ventilation for the unit. Ventilation should not be impeded by covering the ventilation openings with items such as blankets, coats, duff, curtains etc. Do not stand in front of a plug, electric cord, or install it in a place with poor air flow.
- Do not use the unit on a wall even when the unit is mounted.
- Do not use the unit in extremely hot, cold, dusty, damp, or humid place.
- Condemnation may result from the use of the CD player in the unit left anywhere warm and damp, or if you move the unit somewhere cold like a car hood to a warm room. In this case, let the unit stand for 12 hours, or more.
- Do not place items on top of the unit.
- Do not place it where it could be subjected to vibration.
- Do not place it where it could be misinterpreted by a magnet or speaker since there are magnets in the speaker.
- Do not place items in or near the unit that could be damaged and data could be erased.
- When this unit is used near a TV, the TV picture could be distorted. If this happens, move the unit away from the TV. This does not occur with all TVs.
- Keep the CD door closed so the lens is not contaminated by dust. Do not touch the lens.



This set employs an optical laser beam system in the CD mechanism designed with built-in safeguards. Do not attempt to disassemble. Exposure to this invisible laser light beam may be harmful to a human eye. This is a Class I laser product. Use of controls, adjustments or procedures other than those specified here may result in hazardous laser light beam exposure. This compact disc player should not be adjusted or repaired by anyone except qualified service personnel. The laser mechanism in the set corresponds to the stylus (needle) of a record player. Although this product uses a laser pick-up lens, it is completely safe when operated according to directions.

90-day Limited Warranty

Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:**
- Visit our website at www.southerntelecom.com
 - Click on **Product Support**
 - Select the **Brand** of your device
 - Select **Service Request** and fill out the form to begin your inquiry

Or call the Customer Support number below

1-877-668-4839 (Toll Free)
Monday - Friday: 8AM - 10PM (EST)

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

[illegible]

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

ART+SOUND™

Symphonics 6-in-1 Entertainment System



AR4002

Bluetooth speaker

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
Designed in USA
v3.05-2012

Before You Begin...

Caution

- THIS IS NOT A TOY, **please keep away from children**
- Keep away from water and extreme temperatures
- Sound quality may differ based on the condition of physical media (CDs, cassette tapes, vinyl records)
- Only use the supplied AC adapter with this product

Questions & Customer Support

For questions, troubleshooting or any other assistance, please visit our website at SouthernTelecom.com and click on **Product Support**.

In the Box

- AR4002 - **Entertainment System** (x1)
- 5V/2A Power Adapter (x1)
- 3.5 mm - RCA Cable (x1)
- User Manual (x1)

Location of Controls

 
 
(Back - Input Panel)

1. Radio Antenna
2. DC 5V Power Jack
3. Audio Output (RCA)


(Front - Control Panel)

4. [⏮] Button: Pause/resume playback
5. [⏪] Button: Skip to previous track
6. [⏩] Button: Skip to next track
7. [■] Button: Stop playback
8. [FM/AM] Button: Switch between FM/AM radio
9. [▶] Button: Open/close CD tray
10. [Tuner] Dial
11. LCD Display
12. [Vol] Knob
13. [Mode] Knob: Change input modes
14. 3.5 mm Auxiliary Input Jack
15. [Power] Switch
16. Headphone Jack
17. CD Tray

Location of Controls (cont'd)

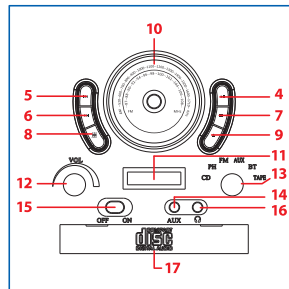

Location of Controls (cont'd)

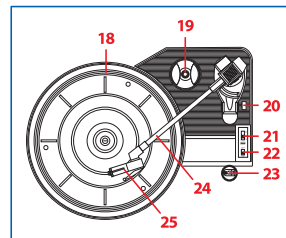 

Location of Controls (cont'd)

(Turntable)

18. Turntable Platter
19. 45 RPM Adapter
20. Control Lever
21. [Speed] Switch: Set to 33 RPM / 45 RPM / 78 RPM
22. [Auto] Switch: Enable/disable turntable platter auto stop
23. Tone Arm Lock
24. Tone Arm
25. Stylus

Getting Started


Powering the Speaker

1. Find a suitable location for the speaker near a working wall socket.
2. Select the pin of the supplied AC adapter into the DC power jack on the back of the speaker. Plug into a wall socket.
3. Move the [Power] switch to the ON position.

Changing Input Modes

Turn the [Mode] dial to your preferred input:

- CD - CD Player
- PH - Turntable/Record Player
- FM - AM/FM Radio
- AUX - Auxiliary/Line-In audio
- BT - Bluetooth Input
- Tape - Cassette Deck

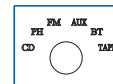

Adjusting Volume

- Use the [Vol] knob to adjust volume in all input modes.

Using the CD Player

1. Turn the [Mode] dial to CD.
2. Press the [▶] button to open the CD tray. Insert a CD with the label facing up.
3. Press the [▶] button again to close the CD tray.

CD Player Controls

- Press the [⏮] button to pause/resume playback.
- Press the [⏪] and [⏩] buttons to skip tracks.
- Press the [■] button to stop playback.

Using the Turntable

1. Lift the lid of the record player and place your record on the turntable platter.
2. Select the speed for your record using the Speed switch on the right of the turntable platter.
3. Turn the [Mode] dial to PH.
4. Remove any guard or protective piece from the stylus, unlock the tone arm, and release the control lever.
5. Position the cartridge and stylus over your record and move the control lever back down to gently let the cartridge and stylus fall onto the record.

Turntable Controls

- To pause playback, lift the control lever so that the tone arm raises.
- Adjust volume with the volume knob.
- Set the speed of the turntable appropriate for the record you are playing with the speed switch (33 RPM / 45 RPM / 78 RPM).
- Enable/disable auto stop with the [Auto] switch. While enabled, the turntable will stop spinning if the tone arm is moved away from the turntable platter.

NOTE: If the sound coming from the speaker sounds sped-up, high-pitched, slowed-down, or low-pitched, double check that you have the speed switch set to the appropriate speed for your record.

When finished, return and lock the tone arm into place and cover the stylus with any protective piece.

Using the AM/FM Radio

1. Turn the [Mode] dial to FM.
2. Extend the antenna cable on the back panel of the speaker toward an open space with a clear view of the sky.
3. Press the [FM/AM] button to toggle between FM and AM frequencies.
4. Use the [Tuner] knob to select radio stations.

Using the Auxiliary Input

1. Turn the [Mode] dial to AUX.
2. Insert one connector of a 3.5 mm auxiliary cable into the AUX jack on the front of the speaker.
3. Insert the other connector to the headphone jack or audio output jack on your media-playing device.

Volume can be adjusted with the [Vol] knob or with the controls on your connected device, playback can be controlled with the controls on your connected device.

Bluetooth Pairing

1. Turn the [Mode] dial to BT. "Blue" will flash on the LED display.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **AR4002** from the list of found devices.
3. When the speaker is successfully paired, a tone will be heard and the LED display will read "Blue."

Bluetooth Controls

- Press the [⏮] button to pause/resume playback.
- Press the [⏪] and [⏩] buttons to skip tracks.
- Press the [■] button to stop playback.