



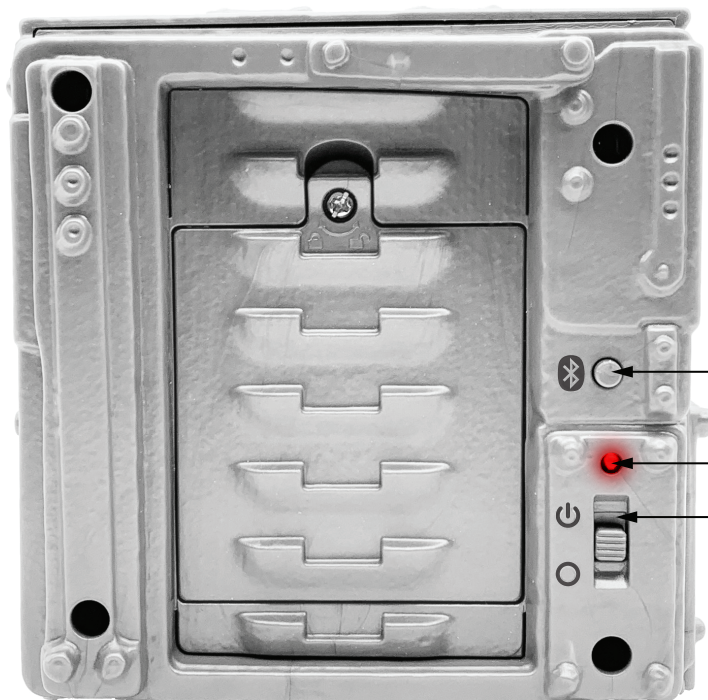

1. Slide switch to "ON" 
2. Red LED will start blinking signifying speaker is ON
3. Look on your device for the speaker name "Groot Speaker" to confirm pairing with speaker.
NOTE: If speaker has already paired once, it will remember and pair automatically after a few seconds. Can skip to step #4.
4. Once paired successfully, you will hear a sound play from the speaker signifying connection with device.
5. Speaker is now ready to play sounds and songs from your device.
6. To disconnect your paired device, press and hold down the pairing button for 2 seconds. You will hear a sound play from the speaker to signify the speaker has been disconnected from your device successfully.

BATTERY REPLACEMENT

1. Remove the screw to access the battery compartments
2. Open battery door.
3. Exhausted batteries are to be removed.
4. New batteries are to inserted with correct polarity.
5. Replace the battery door and secure with screw.

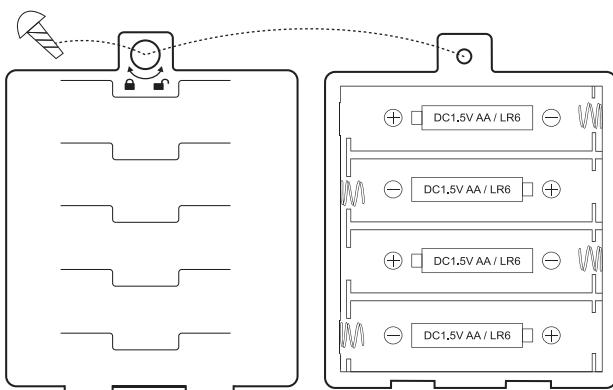

Requires 4x AA 1.5V Batteries (included)

BATTERY INSTRUCTIONS

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
Non-rechargeable batteries are not to be recharged.
The supply terminals are not to be short circuited.
Do not use rechargeable batteries.
Remove batteries when not in use or discharged.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or experienced radio / TV technician for help.



The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth*® SIG, Inc. and any use of such marks by Disney Worldwide Services Inc, is under license. Other trademarks and trade names are those of their respective owners.

REQUIRES (4) (AA) (1.5V) BATTERIES, INCLUDED.
SONO NECESSARIE (4) (AA) (1.5V) BATTERIE, INCLUDE.
NECESITA (4) PILAS (AA) (1.5V), INCLUIDAS.
FONCTIONNE SUR BATTERIES (4) (AA) (1.5V), INCLUSES
REQUER (4) PILHAS (AA) DE (1.5V), INCLUIDAS.
VEREIST (4) (AA) (1.5V) BATTERIJEN, INBEGREPEN.
BENÖTIGT (4) (AA) (1.5V) BATTERIEN, SIND ENTHALTEN.
KRÆVER (4) (AA) (1.5V) BATTERIER, INKLUDERET.
(4) (AA) (1.5V) PIL GEREKTIRIR, BIRLIKTE VERILMIŞTİR.
KRÄVER (4) (AA) (1.5V) BATTERIER, INKLUDERADE.
KREVER (4) (AA) (1.5V) BATTERIER, INKLUDERT.
VAATII (4) (AA) (1.5V) PARISTOA, SISÄLTYY PAKKAUKSEEN.
需要 (4) (AA) (1.5V) 電池, 已包含。
電池 (4) (AA) (1.5V), 使用, 同梱。



MADE IN CHINA
FABRIQUE EN CHINE



© MARVEL © DISNEY