

Aitkenson®

MODE NO.:B122

BLUETOOTH SPEAKER INSTRUCTION MANUAL

Functional Brief Description

ON/OFF	Power Switch
MODE	Mode Switch
⏮/CH	Repeat/Bluetooth Device Remove / FM Channel and Frequency Switch
EQ/ECHO	Mute Switch/Long press to reverberation adjustment
REC	Record (short press in random mode to record)
LIGHT	RGB Light Effect Switch
AUTO SCAN/📶	FM Auto-scanning / Play and pause
FM+ 🎵	Last Song / Backward FM Channel or Frequency
FM- 🎵	Next Song / Forward FM Channel or Frequency
-MIC VOL+	Microphone Volume Control up/Down
-VOLUME+	Volume Control up/Down
TF CARD	TF Card Socket
🔌 DC 5V	Micro USB Charge Socket
MIC	Microphone Socket
AUX	External Audio Input Socket
USB	USB Socket

Press "MODE" button to Switch "BT-; USB-; TF-; LINE" mode.(Non human voice version warning tone)
The first time booting will enter into Bluetooth mode by default, booting again will enter the mode before power off.(shutdown mode memory ,volume and channel search memory)

Press MODE button to switch Bluetooth mode (Warning Tone: BT_MODE) The Bluetooth signal light quick shining;

Mobile Phone or other device open the Bluetooth function , searching: **0122** , Click it and to connect (the first time or connect mismatch) After connect successfully (Warning Tone: BT_CONNECT) The Bluetooth signal light slow shining, then you play the Music (Bluetooth signal light slow shining when playing);

Music pause, Bluetooth signal light slow shining! If you want to connect a new device to disconnect the current connection, and then according to the above steps to search the connection.

Bluetooth Player Under "Press BT mode", press **▶** can play/pause music, short press **▶** for next song; short press **◀** for last song; Press **▶** for pause, press once again to replay, long press **▶** and **▶** useless.

Force Disconnect Bluetooth Device: Under in Bluetooth mode, long press **◀** , can force disconnect the current Bluetooth device (Warning Tone: BT_DISCONNECT), the Bluetooth signal light will shining, at the same time, the Bluetooth device will disconnect.

Warning Tone off: Under in Bluetooth mode, long press **MODE** 5 second and the screen show .

 can off the warning tone for mode switch, digital button useless .

1. MP3 Player (USB/TF)
 1. Insert USB or TF card (Warning: Mode: USB-TF), will enter MP3 mode; It will play music from USB or TF card automatically, short press **PR** **US** (when pause, long press **US**)/uses/press once again to replay, long press **US** "the music time fast forward, long press **US** "the music time fast rewind. When insert USB or TF, the last insert device will play priority.

2. Switch Player Mode: short press button to switch player mode: **RL** **L** loop playback, **DN** **E** repeat playback, **RD** random playback (LED screen Auto-exit after model name displaying for 2 seconds, default setting to complete.)

1. **Auto Scanning** : Long press **⏻** "for auto scanning from 87.5MHz—106MHz", then the scanned channel can be auto saved channel from CH01—50. And the screen will display: **CH 01** "After auto scanning, short press **⏻** "button to switch the channel (Display **CH 05** **CH 06** ; short press "O" button to switch the frequency) **107.1** **107.2** .

2. **Semi-automatic Channel Selection** : after auto scanning, in FM mode short press "CH" button to switch channel and frequency, press **⏻** "button to switch the channel to semi-automatic Channel Selection, channel and frequency display forward or backward.

In random mode, the microphone can insert into the device (open the wireless microphone also can use)the microphone volume and reverberation size can be adjusted by independent.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.