



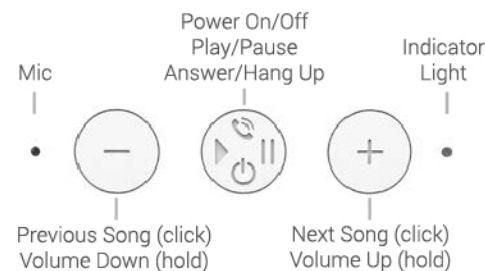

Front of Forte

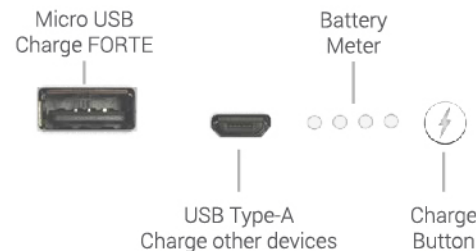

Back of Forte



Caution: Battery cannot be replaced. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Recharging FORTE

When your speaker is running low on battery, using the included charging cable, insert the micro-USB end into the Charging Port of FORTE and the larger USB end into a USB power source (computer, USB charger, etc.)

Charging other devices

Use the USB charging cable that came with the device you'd like to charge and plug it into the back of FORTE in the USB charging port.

Press the Charge button to begin charging.



Wirelessly Charging your smartphone

FORTE features a wireless charging surface on top of the speaker. Simply place your wireless charging capable smartphone on top.

Press the Charge button to begin charging.



? QUESTIONS?

Email us at
support@powerstick.com

Part Number 804300
Communication Bluetooth® 4.2
Range Up to 30 ft
Speaker Output (2) 5-watts
Playback Time ~15 hours
Battery Capacity 4,400 mAh
USB Output 5V, 1A Wireless Output 5V, 1A
Input 5V, 1.5A
Designed by PowerStick.com in Canada.
Made in China.

Pairing FORTE

1. Press and hold the Power Button for 3 seconds to power on. You will hear a startup chime. The Indicator Light will begin flashing red and green. You are now in Pairing Mode.

(Note: if no devices are paired within 5 minutes, FORTE will automatically turn off. Turn FORTE back on to re-enter Pairing Mode.)



2. Go to your phone/device Settings. Find your Bluetooth settings.
(Note: if you are having trouble, please refer to your devices support manual.)



3. You should see FORTE listed in the list of nearby Bluetooth devices. If you do not see FORTE, make sure that you are in Pairing Mode (Indicator Light will flash red and green on FORTE).

4. Tap on the device named FORTE to pair by Bluetooth. Once paired, you will hear a sound indicating a successful pairing and the Indicator Light will flash green.

5. Go ahead and play your favorite tunes on FORTE!

6. When you're done enjoying your music, press the Power Button to pause/resume or hold for 3 seconds to turn FORTE off.



(Note: to pair FORTE with another device, you must first disconnect any devices currently paired by either: 1) turning off the first devices Bluetooth, 2) forgetting FORTE as a paired device, or 3) not having the paired device within range.)

Using the Speakerphone

While your speaker is playing music and you receive a phone call, you will hear the ring through FORTE. You can press the Answer button on FORTE to pick up the phone call. When you are done, press the same button again to hang up. You can also pick up and hang up phone calls using your smartphone.



Product Temperature Range : 0°C -45°C

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.