



USER MANUAL PROFESSIONAL SPEAKER

Model No.: MS-S2106

FCC ID: 2AIUCMS-S2106

 


MULTIMEDIA
PLAYER



**PLEASE READ THIS USER MANUAL
CAREFULLY BEFORE OPERATING THIS UNIT**

1-1 Remote control:

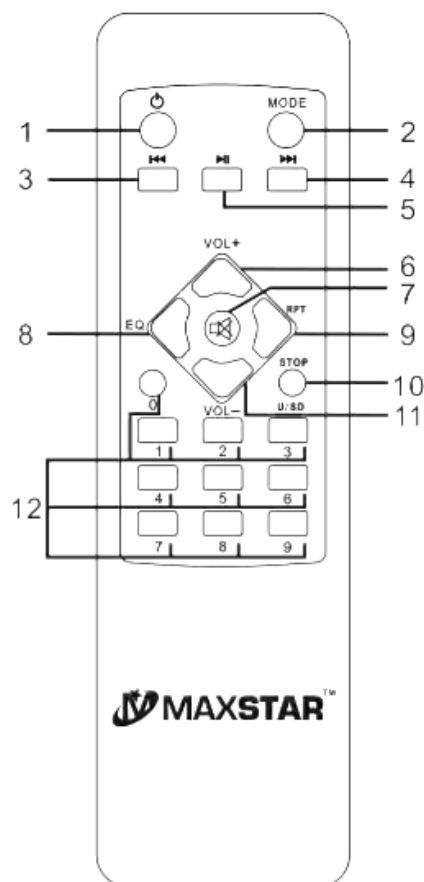

1. Power on/off

2. Mode USB/SD/FM/LINE.

3. 

Previous song/Volume down

4. 

Next song/Volume up

5. 

Play/Pause

6. VOL+ volume up.

7. MUTE

8. EQ Choose from several Equalizer presets.

 
9. Repeat: Press this button to repeat the current track on the USB/SD Card input (ONE or ALL).

10. STOP/U(SD)

11. VOL- volume down.


12. Number Keypad select song.

2-1 PANEL FUNCTION DECLARATION

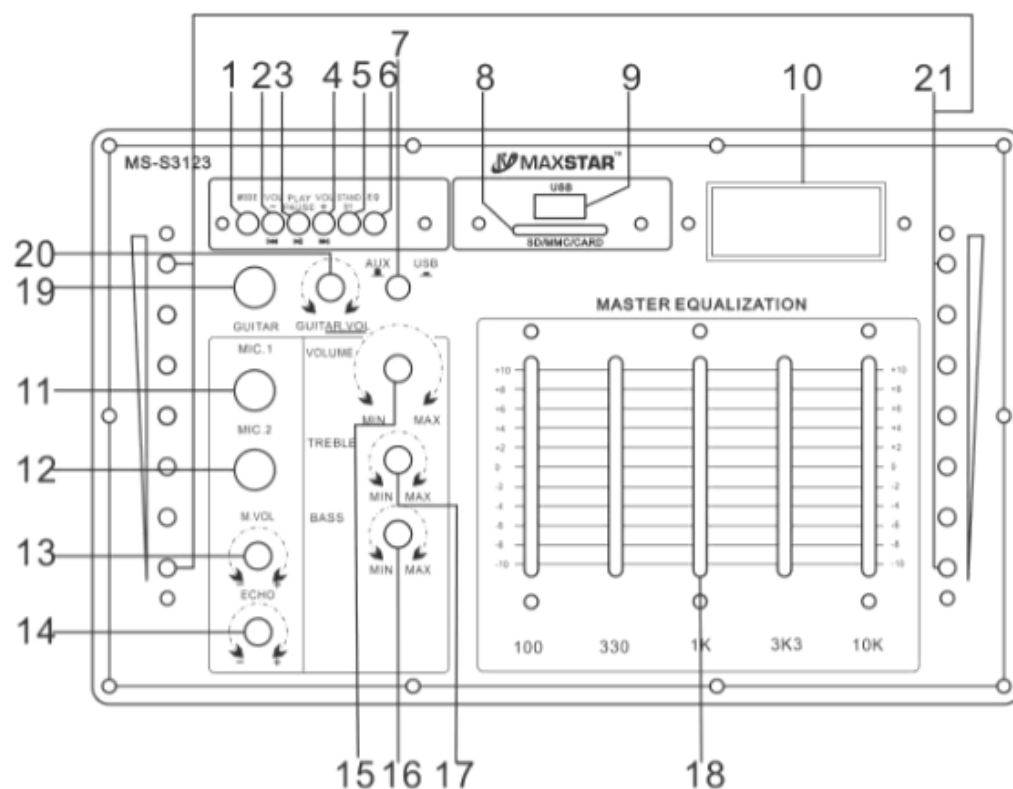

- 1.Mode USB/SD/FM/LINE.
- 2.Previous song/Volume down
- 3.Play/Pause
- 4.Next song/Volume up
- 5.STAND BY
- 6.EQ
- 7.AUX/USB
- 8.SD/MMC card
- 9.USB input
- 10.LED display
- 11.MIC 1
- 12.MIC 2
- 13.MIC VOL
- 14.EchoVOL
- 15.Main volume
- 16.Bass
- 17.Treble
- 18.5 Band equalizer
- 19.Guitar input
- 20.Guitar VOL
- 21.LED indicator

 3-1 BACK PANEL CONNECTION DIAGRAM

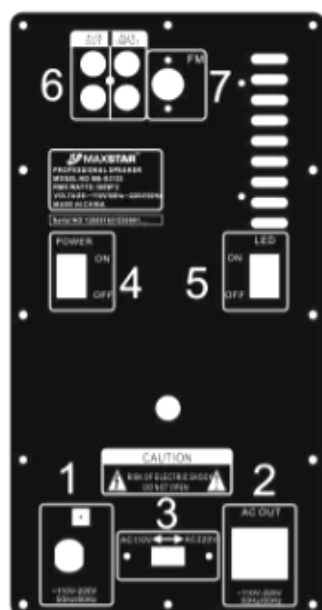

- 1.AC in
- 2.AC out
- 3.AC 110V/220V Power switch
- 4.Power switch
- 5.Led light power
- 6.Aux output/Aux input
- 7.FM Antenna

4-1 PRECAUTION

In order to prevent operating problems or serious damage to the device, please comply with the following remarks:

1. Hold the electric outlet while pulling out the plug. Do not pull the wire.
2. Operating audio appliances should be kept away from heating facilities.
3. Do not attempt to fix or revise the circuit.
4. Do not touch the internal parts, otherwise electric shock or serious damage to the device might cause.
5. Pull out the plug if not in use for long.
6. Ensure the audio product in a ventilated dry condition with about 20mm Space around as for heating dispersion.

Warning: Do not expose this appliance to rain or moisture, and vessel containing liquids, such as a cup, vase, is not supposed to be placed on or above the appliance.

5-1 TROUBLESHOOTING

Symptom	Possible Problem	Solution
No Function Light & No Sound	1.Plug is not well connected	Insert the plug into electric outlet
	2.Speaker power button is not turned on	Turn on the button
Function Light on but No Sound	1.Cable misconnected	Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack
	2.Audio signal is not transmitted to Speaker	Check all the speakers if there is audio signal output
If the problem exists after checking related procedures above, please refer to the appointed service agent or professional technician to fix it. Do not attempt to open the cover, otherwise we assumes no responsibility.		

* Design and specifications of products are subject to change without notice. please noted!

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.