



PLEASE READ ALL INSTRUCTIONS CAREFULLY
& RETAIN FOR FUTURE USE

2

1	Skip Backward / Decrease Volume	6	TF Card Slot
2	Skip Forward / Increase Volume	7	USB Charging Port
3	Mode Button	8	USB Slot
4	Play & Pause		
5	ON/OFF Switch		

3

4

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the iHip button(4) once to answer an incoming call.
End Call	Incoming Call	After your phone conversation, short press the iHip button(4)
Volume Increase	During a call	Long press on the + button will increase the volume
Volume Decrease	During a call	Long press on the - button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the iHip button(4) twice

Function	Operation	Button
Increase Volume	Playing music	A long press on the + button(2) once will increase the volume
Decrease Volume	Playing music	A long press on the - button(1) once will decrease the volume
Pause	Playing music	Short press iHip button(4) once to pause the music
Play	Pause	Short press iHip button(4) once resume the music

5

Previous track	Playing music	Short press the - button(1) to the previous track
Next track	Playing music	Short press the + button(2) to the next track

6

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.

No sound at all.	Source (Tablet, Mobile Phone, Laptop) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.
-------------------------	---	---

7

8

9

10