





Outdoor CDMA Femto Serial Number Label Details

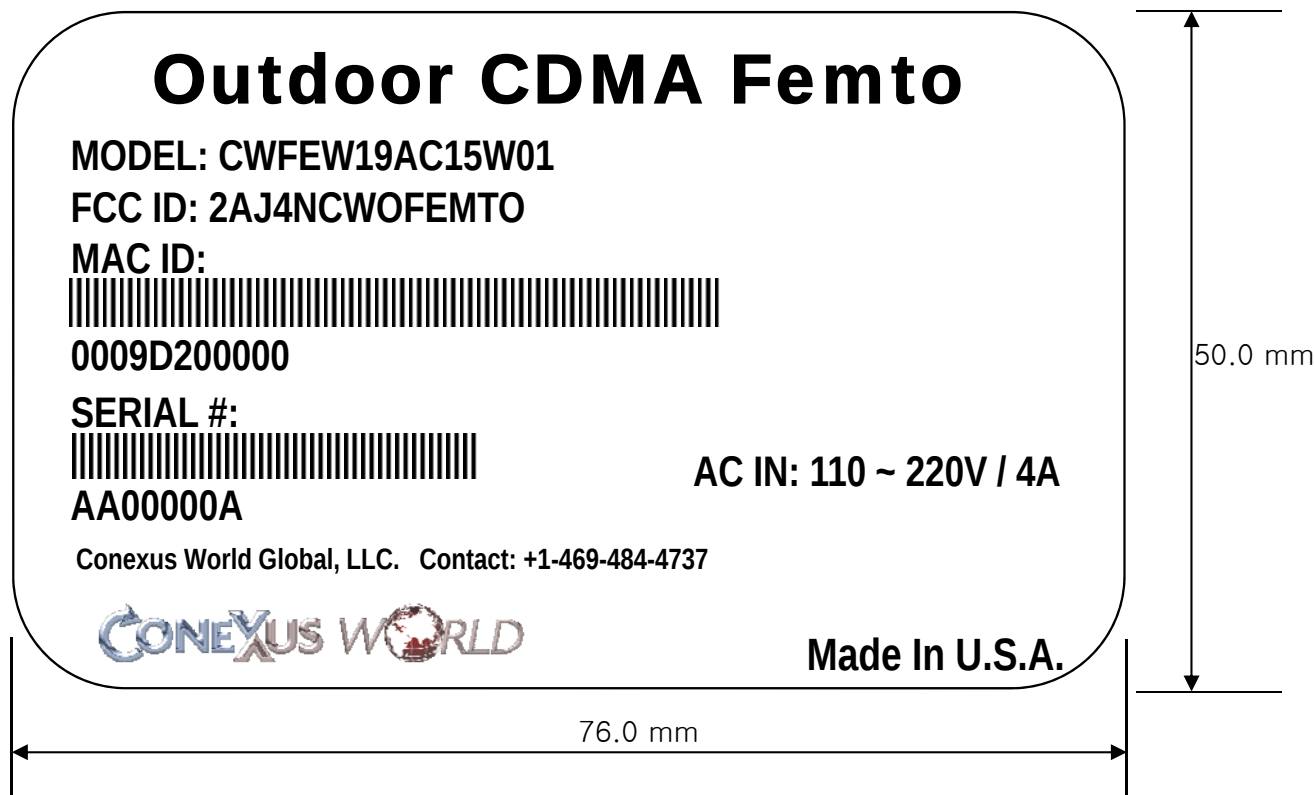

Applies to chassis and external packaging box

External Label Location

Label placed on right side of unit close to the bottom panel

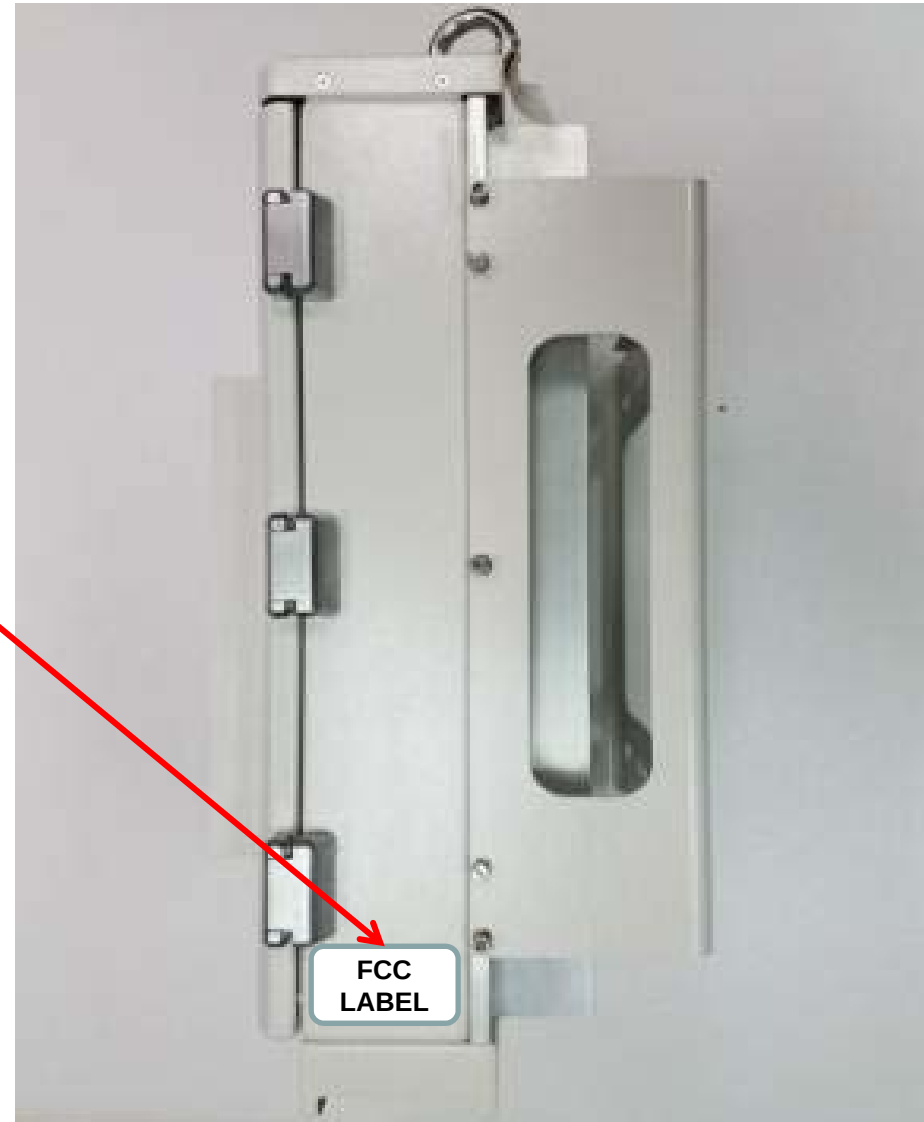

Internal Label Location

Label placed on right top side
of the unit door

