 


WIRELESS FM TRANSMITTER

USER MANUAL

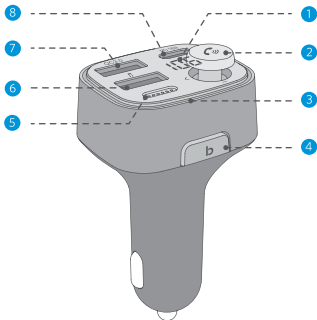

- 1 Digital Display Screen
- 2 Multifunctional Button: Short press to pause/play/hands-free Call (Answer/Hang up/Reject)

Diagram	Operation	Functions
	Short Press	Pause/Play/Hands-free Call (Answer/Hang up/Reject)
	Toggle to the Left	Previous Track/Decrease frequency in CH mode
	Toggle to the Right	Next Track/Increase frequency in CH mode
	Toggle Upward	Volume +
	Toggle Downward	Volume -
	Long press for 2s	Enter frequency tuning mode

- ③ Ring Light
- ④ **b** Button: Bass boosted sound effect
- ⑤ Microphone
- ⑥ 5V/1A; U Disk Port (Max. 64G/Format: FAT32)
- ⑦ QC3.0 Quick Charge Port: (DC 5V/3A, 9V/2A, 12V/1.5A)
- ⑧ Type-C Fast Charge Port: Max. PD 18W (DC 5V/3A, 9V/2A, 12V/1.5A)

SPECIFICATIONS

Product Name	C77
Effective Distance	5m
FM Tuning Range	87.5MHz - 108.0MHz
Support Audio Format	MP3.WMA.WAV.FLAC
Support Bluetooth Protocol	A2DP/AVRCP/HSP/HFP
Orange QC3.0 Quick Charge Port	Support DC 5V/3A, 9V/2A, 12V/1.5A
Type-C Fast Charge Port	Max. PD 18W (DC 5V/3A, 9V/2A, 12V/1.5A)
Shared Output	5V/4.8A MAX
U Disk Format/Capacity	FAT32/Max. 64G

1. Power On/Off

Power On: Start your car and plug BH478 into car's cigarette lighter. It will turn on after being electrified, and its screen will turn on automatically and flash once per second. If it's in power-off state while being electrified, long press "**b**" button for 1s to turn it on.

Power Off: Cut its power to turn it off. When it's in power-on state, long press "**b**" button for 2s to turn it off.

Note: When BH478 is turned off by long pressing "**b**" button for 2s, its charging ports are still available for charging.

 
2. Screen Display

- 2.1. After power on, the screen will flash bt.
- 2.2. After successful pairing, the screen will display bt and light on constantly.
- 2.3. Long press  button for 2s to enter FM tuning mode, and the screen will display frequency.

3. FM Tuning and Bluetooth Connection


Attention: When using it for the first time, you need to adjust the blank FM frequency of BH478 to be the same as that of your car (Not a frequency of local broadcast/A frequency without any broadcast/A frequency only with white noise). For seeking a better sound enjoyment, please make sure that the blank FM frequencies of BH478 and your car are the same when every time you use the product (Not a frequency of local broadcast/A frequency without any broadcast/A frequency only with white noise).

- 3.1. Adjust your car's FM radio to a blank frequency (A frequency without any broadcast/A frequency only with white noise), such as FM88.8.
- 3.2. Long press  button for 2s to enter FM tuning mode, and the frequency on the screen will flash. Then toggle the phone button to adjust the frequency. Toggle it to the right  to increase frequency and toggle it to the left  to decrease the frequency. Adjust the frequency to be the same as that of your car's radio, such as FM88.8. Short press  button again or wait for 3s to exit from the tuning mode.

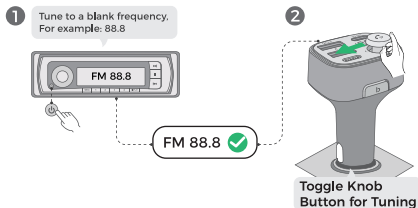

3.3. Bluetooth Connection

 - A. BH478 will display the current voltage of your car battery on the screen after power on. Then it enters into bt state (pairing state) after 2 s and waits for pairing.
- B. Turn on the Bluetooth of your smart device and search "BH478" and connect to it. The screen will display bt and light on constantly after successful connection. Now you can play music via Bluetooth. Generally speaking, they will pair up automatically for connection, but it also needs you to enter password sometimes, such as prompt - please enter original password "0000". (When used again, BH478 will reconnect the last-connected device.)
- C. Turn up your phone's volume appropriately. (When used again, BH478 will reconnect the last-connected device.)

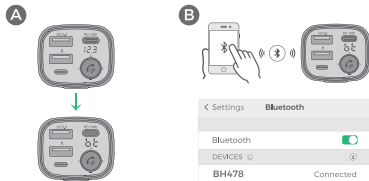

4. Bluetooth Hands-free Function

- 4.1. Answer a Phone Call: Short press "☎" button.
- 4.2. Hang Up a Phone Call: Short press "☎" button.
- 4.3. Redial Last Phone Number: Double press "☎" button.
- 4.4. Reject a Phone Call: Long press "☎" button for 2s.
- 4.5. Switch Phone Call to Private: Long press "☎" button for 2s on the phone.

 
5. Music Function (Please ensure the successful FM tuning before using this function)

5.1 Bluetooth/U Disk - 2 Music Sources

- A. Bluetooth Mode: After your smart device (eg. Phone) is connected to BH478's Bluetooth successfully, the music will be synchronized to your car speaker if you play music on your phone.



- B. U Disk Mode: Plug U disk into product's port, and it will automatically recognize the device and play the music in it.



Important Note: For better user experience, please choose only one source to play music when every time you use the product.

5.2. Music Sound Effect

 
Bass Boosted Sound Effect: Short press **b** button to enable b1 bass surrounding sound effect, and it will enhance the sound effect of surrounding deep bass. Suitable for dance music, DJ, RAP and some deep-bass songs. (Press **b** button again to exit from bass mode and the screen will display b0 at that time)

5.3. Audio Source Selection

- Use between Bluetooth and U Disk, it's by default to play U Disk device.
- Auto Play via U Disk: Plug and Play. (Only support "Repeat All", not support "Repeat One" or "Shuffle")
- In Bluetooth mode, you need to play music by manually entering music software, after power cut or you reboot it. In U disk mode, it will automatically replay the song that is played before power cut.

5.4. Music Playing Operation

- Play/Pause: Short press "⏮".
- Previous Track: Toggle "⏮" to the left to play previous track.
- Next Track: Toggle "⏭" to the right to play next track.
- Volume Up: Toggle "⏮" upward to increase volume.
- Volume Down: Toggle "⏭" downward to decrease volume.



6. Charging Description

6.1. QC3.0 Quick Charge Port Description

- For some devices that don't support QC3.0 quick charge, the maximum output is 5V/2.4A.
- For some devices that support QC3.0 quick charge and meet QC3.0 quick charge protocol, its output is DC 5V/3A, 9V/2A, 12V/1.5A.

6.2. Type-C Fast Charge Port Description

- For some devices that don't support PD fast charge, the maximum output is 5V/2.4A.
- For some devices that support PD fast charge and meet PD 18 W fast charge protocol, the output is DC 5V/3A, 9V/2A, 12V/1.5A (Please use C to C or C to Lighting data cable).

7. Note

- Do not turn up your radio's volume too loud in case of increasing its background noise.
- To ensure the best sound effect, please try to avoid adjusting to the frequency of local radio station with strong signal.
- Do not use the product in too hot/cold, dusty or damp environment.
- Do not break or throw the product to prevent surface or unit damage.
- Do not disassemble the product personally. Please contact the seller if you have any questions or problems.

8. FAQs

8.1. Noise Problems

Solutions:

- Turn down speaker's volume to its 1/3 level and turn up the volume of your smart device.
- Signal interference. Please switch to another blank frequency.
- Re-plug the product and restore it to original state to work.

8.2. You can't be heard on the Phone

Reason 1: The calling method goes wrong

Solutions:

- A. Click BH478's phone button  to answer the call via car speaker.
- B. Turn on the phone speaker to answer the call.

Reason 2: The calling volume is too low

Solutions:

- A. Turn up your phone's volume.
- B. The volume of other end on the phone is too low, ask the other end to speak up.

Reason 3: The microphone is broken

Solution: Contact the customer service for help.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.