

Instruction

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Contents

1.1Function keys interface overview

1.2Main interface function

2.NOTICE

2.1Precautions

2.2Charging

2.3Insert TF card

2.4Headphones

3.Main operations

3.1Home page

3.2Media

3.3PPTV player

3.4Pano

3.5Photo Wall

3.6Pano Photo

PACKING List

Power key: Long Press(5 seconds)the key to achieve Power on/off. short Presto achieve the Sleep/wake-up action, longer press(10secondS)to forcibly power off.

N key: the Video mode setting key. it can choose single dual setting. VR Panorama mode setting;

Volume+key: Press the volume up;

Volume-key: Press volume down;

UP: Press to select up;

Down: Press to select down;

LEFT: Press to select left;

RIGHT: Press to select right;

Ok: To Press OK;

Back: Press bsck to main menu;

2.NOTICE

2.1Precautions

pleasa use original accessories such as the power adapter;

Please keep the machine drying;

Please preview the user maunal before using the machine;

If suddenly the machine stopped work,press and hold the power button for 10seconds to force shutdown,over 10 seconds,then power on again.

2.2 Charging

Please use the original adapter for charging;

Charging when, the machine is power off, the machine will start work;

When charging,the surface show blue light;

When charging, try to keep the machine sleep, in order to efficiently charge

When the battery is lower than 4%, please charge now;such as run out of battery.when recharging, keep charging for 10 minutes, then to start again.

The face veil and fillet can split and wash, please keep it clean.

LED light turns red when machine charging.Please keep the machine charging for more 3 hours after the LED turns green to make sure the battery completely full.

2.3 How to connected to the computer

Connected to the computer by USB cable, then to find the storage disk from computer, you can transfer data freely.

2.4 insert TF card


Put the TF card to the TF slot, then the device will work

2.5Headphones

The 3.5mm standard headphone connenctor into the machone,when there is an audio output, you can hear the sound.

1.1Function keys interface overview

 1.2Main interface function

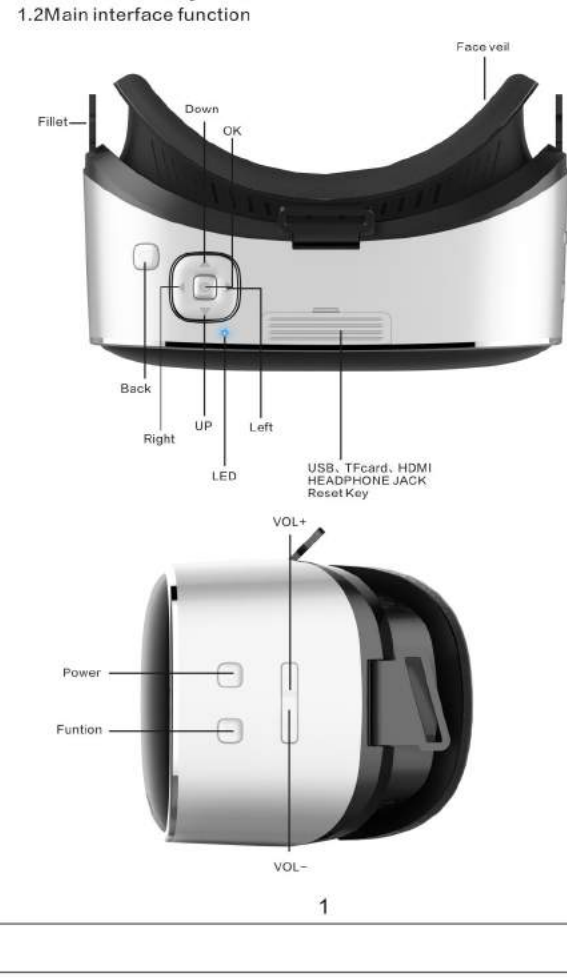

1

Enter, Back, and Nibiru button on machine

1.Press the confirm button to enter the lower page or adjust related functions;

 
2.Press the return button on the home page to exit the application; click the return button on the page to return to the parent page.

3.Press the Nibiru button to call up the system menu, including the brightness button and the application button.

4.Some application and pages support machine direction buttons to adjust the operation.

3.Home page

3.1 Hone Menu

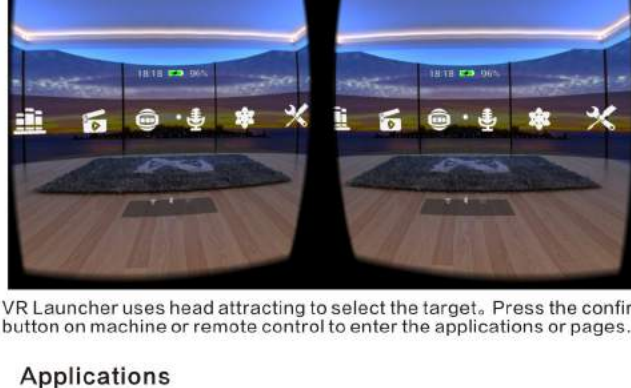

VR Launcher uses head attracting to select the target. Press the confirm button on machine or remote control to enter the applications or pages.

Applications

Applications can be achieved through three ways to switch the page, including head attracting to select enter button, press the confirm button on machine or remote control to swipe or Click on the left and right side of the page to switch.

2. There are 4 function bottoms below the list: the left and right buttons can switch the list, delete button to delete the APP, the return button can return to the home page.

3.Press the back button to return to the home page.

3

Media

Media uses head attracting to select the target. Press the confirm button on machine or remote control to determine the operation mode; a variety of buttons on the machine to play a supporting role.

Operation mode on List

1.Tool uses head attracting to select the target. Press the confirm button machine or remote control to enter the page. The page can be swiped by direction button on machine or on page.

2. There are 4 function bottoms below the list: scan button can scan the medias again, the left and right buttons can switch the list, delete button to delete the APP, the return button can return to the home page.

3.Click return button on machine to return to home page.



PPTV PLAYER

 
In PPTV Player, use head mouse to move cursor, press the confirm button of machine headset or remote to select in menu.

Video list

1.In video list, move cursor to the movie which want to watch, press the confirm button then enter detail page, move cursor to "play" or "back" button to play the video or back to video list.

2.On the bottom of video list, there are "left page" and "right page" to switch to left and right video list page.

5

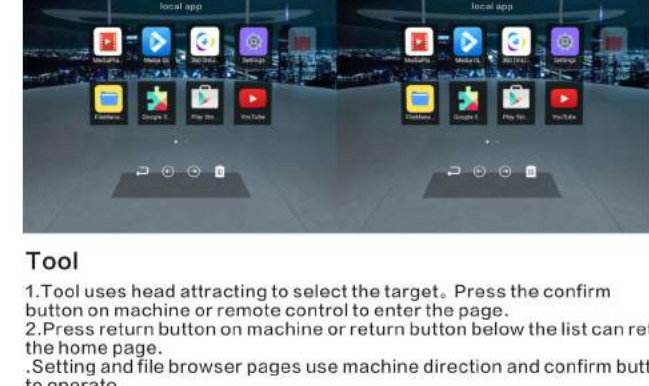


Tool

1.Tool uses head attracting to select the target. Press the confirm button on machine or remote control to enter the page.

2.Press return button on machine or return button below the list can return the home page.

 .Setting and file browser pages use machine direction and confirm button to operate.

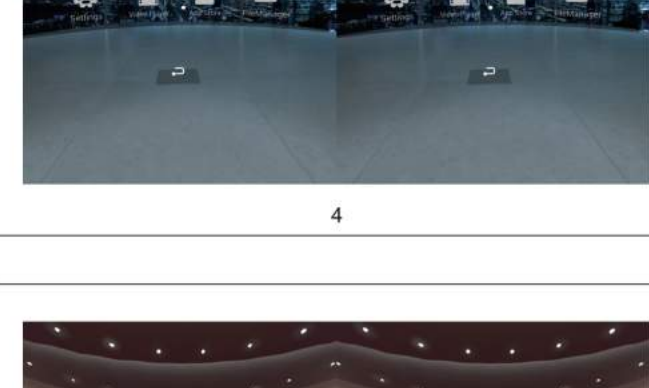

4



Playing Page

1.In the play page, bend the head (move down the cursor) can recall the playing progress bar, move cursor on playing page except progress bar and p press the confirm button to lock screen.

2.Options above progress bar: switch playing mode, play/pause, brightness adjustment, volume adjustment, playing progress and back

3.Click "back" button on the machine Headset to exit playing page.



6

Pano

In App "Pano", use head mouse to move cursor, press the confirm button of machine headset or remote to select.

Homepage

 
1.Move cursor to select in menu, press the confirm button to enter menu.

2.Click back on the bottom of screen to exit App.

3.Move cursor on "Download management" and press the confirm button to enter. There are 2 options in "Download management": "Downloading" and "Downloaded"

4.In "Downloading", click downloading video to pause download, relick to continue download. There are 3 options: back, switch page and delete. Click delete option and confirm delete to delete video selected.

5.In "Downloaded", click downloaded video to play the video. There are 3 options as "Downloaded": back, switch page and delete.

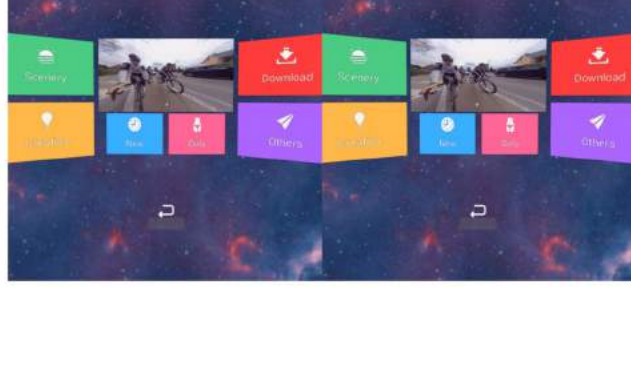

7

Video list

1.Move cursor to video then appear "Download", press the confirm button to download this video, this video can be managed and watched in "Download management"

2.Move cursor on the next page and press the confirm button to switch the page, use "Left" and "Right" button on machine Headset to can also switch the page.

3.On the bottom of list page, there are 3 option: "Left" "Right" to switch page, "back" to exit the App

 
Instructions for Display

1.On Display page, use focus and press the confirm button on headset or remoter to make choice.

2.Look down to view the display progress bar of video, focus on the area besides the display progress and press confirm button to lock the screen.

3. There are four function buttons and video progress bar on display page, they are play and pause shift, brightness and volume adjust, video display progress and back to list page.

4.Press back to return to previous page.

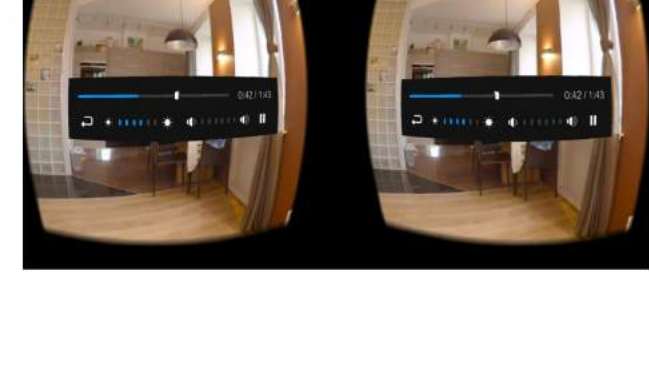

8

Photo Wall

In Photo Wall page, use focus and press the confirm button on headset or remoter to make choice.



 
Instructions

1.Focus on the other page and press confirm button to shift page.

2.Focus on the present page and press confirm button to enter the image.

3.Press confirm to view the next page on photo page.


4.In photo page, press back button on headset to return to photo wall, and in phot wall page, press the same button to exit to the main page.

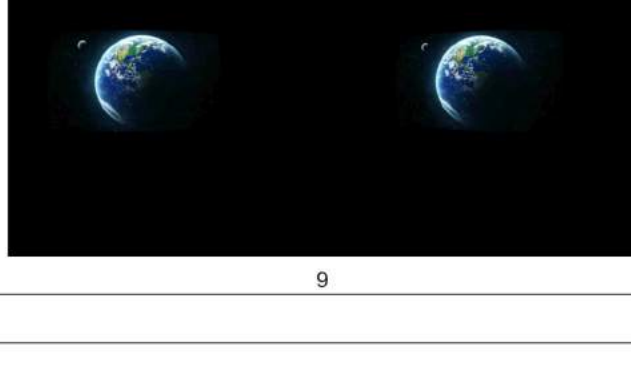

9

Pano Photo

 In Photo Wall page, use focus and press the confirm button on headset or remoter to make choice.

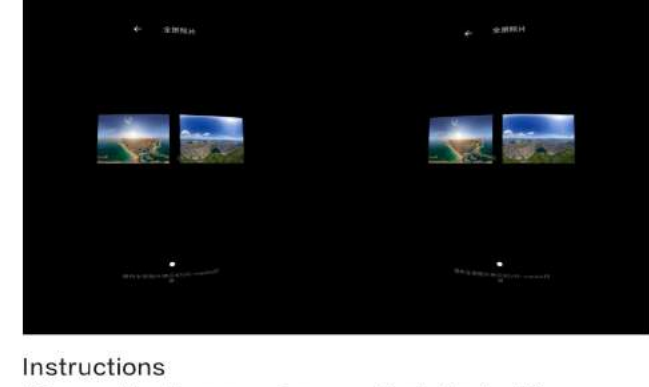


Instructions

1.Focus on the other page and press confirm button to shift page.

2.Focus on the present page and press confirm button to enter the image.

3.In photo page, press back button on headset to return to photo wall, and in phot wall page, press the same button to exit to the main page.

 4.In photo page, press confirm to view the next page.

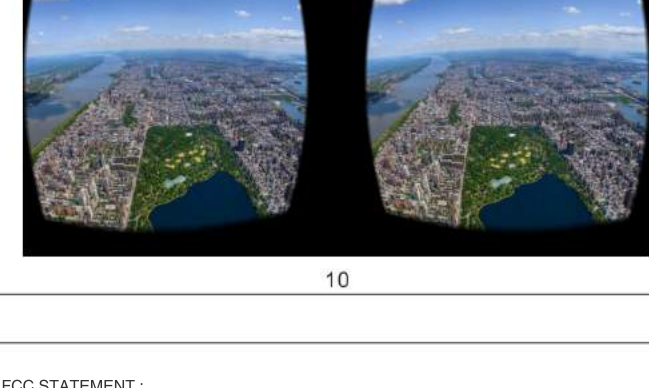

10

Packing list:

machine --1 pcs

power adapter-- 1 pcs

usb line --1 pcs

head fillet-- 1 pcs

HDMI line -- 1 pcs

headset -- 1 pcs

Instruction book--1

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.