


GROOVE & GLOW

Wireless Headphones

USER MANUAL

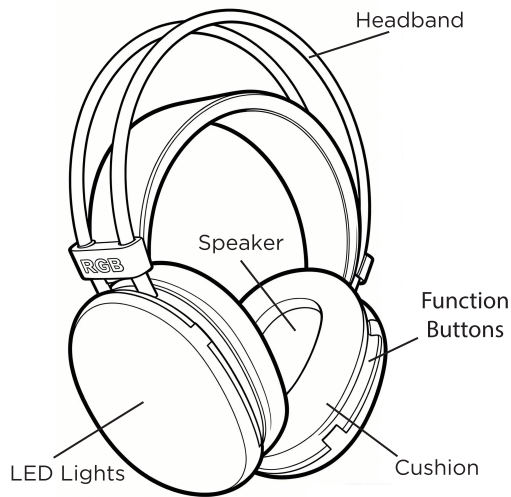

Function Buttons

-  - Double quick-press to turn ON and OFF LED light
- short press it to change light flashing mode.
- press and hold to switch to FM mode and
-  - Long press to turn up the volume.
- Short press to skip to next song or next FM station
-  - Long press to turn down the volume.
- Short press to skip to previous song or previous FM station
-  - Short press for Play / Pause.
- Short press to enable automatic search in FM mode.
-  3.5mm audio jack
-  Power Button
-  Charging port

INSTRUCTIONS FOR USE

CHARGING INSTRUCTIONS

1. The Bluetooth® Headphones come with a built-in rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Only use the supplied USB Cord to charge the Bluetooth® Headphones.
2. Connect the USB charging cables to a USB port and the Type C plug to the charging port of the device. The indicator light turns red while the device is charging and it turns blue when the battery is fully charged.

TURNING THE DEVICE ON/OFF

Switch the button ON/OFF to turn ON and turn OFF the device. There will be an indication tone and light turns ON.

PAIRING THE DEVICE WITH BLUETOOTH® DEVICES (PHONES OR MUSIC DEVICES)

1. Switch the button ON/OFF to turn the headphones ON. This will prompt an indication tone, and the indicator light will flash blue. Put the Bluetooth® headphones and the Bluetooth® source device (phone or music device) so that they are no more than 3 feet apart.
2. Activate the Bluetooth® function on your Bluetooth® device. Please refer to the manufacturer's instructions to enable Bluetooth® on your device.

3. Once you have activated Bluetooth® on your device, select "Light Up Wireless Headphones" from the list of available Bluetooth® devices.
4. When paired successfully, a beep sound will be heard and the indicator light will stay blue.
5. Once you have paired the Bluetooth® Headphones with a device, the Headphones will remember this device and will pair automatically when the device's Bluetooth® is activated and in range. You do not need to re-pair any previously connected devices.

TURN THE LED LIGHT ON AND OFF

Double quick-press on the light button  to turn ON and OFF LED light, and short press it to change light mode.

LISTENING TO MUSIC

1. When Bluetooth® is connected, you can stream music wirelessly through the Bluetooth® Headphones.
2. You can also use the AUX cable to connect the 3.5mm jack in the headphones and your music devices to listen to any music.

ANSERING CALLS / REJECT CALLS

When a call comes in, press the  button to answer, press again to end the call, long press to reject the call.



FCC ID: 2AJ9K-UT2601

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Model#: 55161959

Bluetooth Declaration ID: D066434

Qualified Design ID: 172491

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Warning: changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not expose battery to heat sources, extended direct sunlight or other high temperature environment.

Avoid drops and excessive impacts to the battery.

Do not disassemble, attempt to repair, or replace any part of the housing or battery.

Do not attempt to charge the battery using any other method, apparatus, or connections other than the device's charging cable.

Never dispose of batteries in the garbage. This is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.