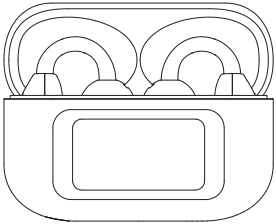 
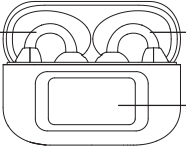 
 
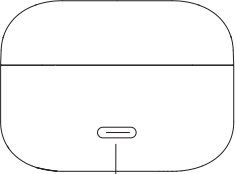 


TWS WIRELESS EARBUDS USER MANUAL Item No.: CPP-6959 	FUNCTIONS Left earbud Right earbud Display screen  TURNING ON/OFF EARBUDS 1. After charging the case, lift the earbuds out and the power is automatically turned ON, the display screen also lights up. 2. To turn OFF, place earbuds into the case until they click into place, the earbuds turn OFF and disconnect with your mobile device. 3. To turn the earbuds OFF outside of the case, press multi-function button on either earbud and hold it for 5 seconds, both earbud will turn OFF. 4. To turn ON only a single earbud, press multi-function button on either earbud and hold it for 5 seconds. Follow the same step to turn ON the other earbud, then they will be connected automatically.	PAIRING BOTH EARBUDS The True Wireless Technology (TWS) enables you to use two earbuds paired via Bluetooth® to create a wireless dual-channel system to deliver a true stereo sound effect. 1.Lift the earbuds out of the case to activate power.You will hear sound notice and see the LED fast flashing on both earbuds. Both earbuds will be connected automatically within 5 seconds, then LED slow flashing on one earbud as it waits to pair with your device. 2.Enable Bluetooth® on your mobile device, select "CPP-6959" from the List of available bluetooth® devices. You will hear sound confirmation notice and the LED on earbud turns OFF. The streaming music will be played simultaneously on both earbud. Earbuds will automatically pair if they have already been paired to the same device.You only need to lift the earbuds out from the case and connection will be automatic. PAIRING ONE EARBUD Lift one earbud out of the case to activate power, wait until you see the LED flashing, select and connect "CPP-6959" from the list of available Bluetooth® devices. You will hear confirmation sound and the LED turns OFF. If you lift the other earbud out of the case, two earbuds will be automatically connected and the streaming music will be played simultaneously on both earbuds.	LISTENING TO MUSIC 1. After you successfully connect to your Bluetooth® device, select music to play. Press once on the multi-function button of either earbud will pause your music. Press again to resume play. 2. Double-press the multi-function button of left earbud to skip to the previous song. Double-press the multi-function button of right earbud to skip to the next song. ANWER / END / REJECT CALLS 1.Be sure the earbuds are connected to your mobile phone, and then you can answer / end / reject calls. 2.If you choose to use only one earbud, either one is capable of receiving calls, since each has its own built-in mic. 3.Answer incoming calls or end call by pressing quickly one time on the multi-function button of either earbud. Press and hold multi-function button of either earbud for 2 seconds to reject incoming calls.	Left multi-function button Right multi-function button  Pause / Play / Answer incoming call / End call : press multi-function button once. Reject incoming call: press and hold multi-function button for 2 seconds. Skip to previous Song: double-press multi-function button. Wake up Siri: triple-press multi-function button.  Pause / Play / Answer incoming call / End call : press multi-function button once. Reject incoming call: press and hold multi-function button for 2 seconds. Skip to next Song: double-press multi-function button. Wake up Siri: triple-press multi-function button.
HOW TO CHARGE THE CHARGING CASE  Charging port Connect the provided USB-C cable from your charging case to a suitable USB power source, charging progress percentage appears on the screen. The case is fully charged when the charging percentage reaches 100%.	HOW TO CHARGE YOUR EARBUDS Now that your case is charged, you can take it with you and charge up your earbuds anywhere and anytime: 1.Insert both earbuds into the charging case until they click into place by the built-in magnetic charging dots, then it is start to charge earbuds. 2. L and R icons together with subsequent numbers on the screen show the power of the left and right earbud; the number 100 means full battery. 3.The L and R icons have three display colors: Red : low battery power for the earbuds Yellow : the earbuds are being charged White : the earbuds are fully charged.	IMPORTANT NOTES 1. This product is not a toy. 2. Do not drop or damage the speaker. 3. Do not use in humid or extrem temperatures. 4. Do not place the speaker near an open flame. 5. Do not block the sound of the speaker while it is in use. 6. Do not use the unit if it has been dropped or damaged in any way. 7. If damaged, do not attempt to repair or disassembled the speaker. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Bluetooth® DID: D066434 Bluetooth® QDID: 172491 Model#: CPP-6959	 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC ID: 2AJ9K-UT2612 - Do not expose battery to heat sources, extended direct sunlight or other high temperature environment. - Avoid drops and excessive impacts to the battery. - Do not disassemble, attempt to repair or replace any part of the housing or battery. - Do not attempt to charge the battery using any other method, apparatus, or connections other than the device's charging cable. - Never dispose of batteries in the garbage. This is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center. FCC Compliance: warning: changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	Federal Communications Commission (FCC) Statement.This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of:the following measures: •Reorient or relocate the receiving antenna. •Increase the separation between the equipment and receiver. •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. •Consult the dealer or an experienced radio/TV technician for help. Warning: Changes or modifications made to this device not expressly approved by may void the FCC authorization to operate this device.Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. RF exposure statement: This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.The device is installed and operated without restriction.

颜色： 灰色印刷
材质:100g书写纸， 双面印刷
要求:字迹清晰,颜色饱满,裁切位置准确，
无杂色和漏白现象.