 
 


Appearance display

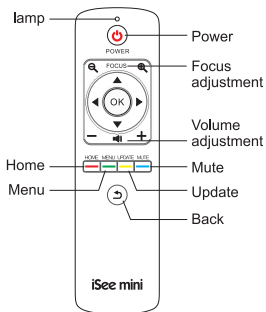

 
NOTE: If the specification is not consistent with the product, please refer to the product.

Attachment

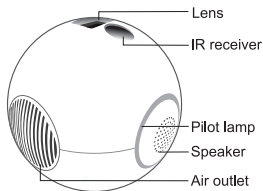


Remote control

Control the projector

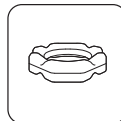

360°base


 
Allow the projector can be placed on the base for any angle.

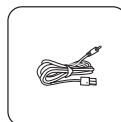

charger

To charge the projector.

  Appearance display

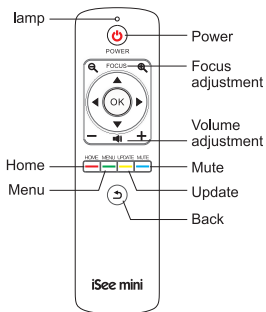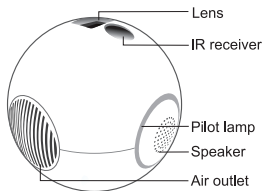


NOTE: If the specification is not consistent with the product, please refer to the product.

Attachment




Remote control

 Control the projector

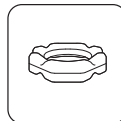

360°base

 Allow the projector can be placed on the base for any angle.

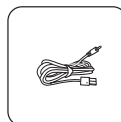


charger

To charge the projector.

Power on/off

Power on

 Press the power button on the remote control, then the projector lamp lights and flashes to turn on the device.

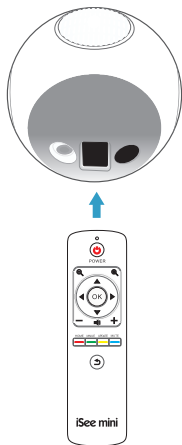


Power off

Press the power button on the remote control, the projector will be switched off.

Restart

 
When the projector crashed, please use DC plug to press the reset button, and then press the power the button on remote control to restart.

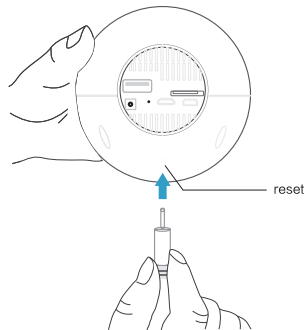

Note: It is recommended to use in the dark or night environment.

Charge

 Both the enclosed charger and power bank can supply power to the device, Power bank can only be used under the switch-off condition.

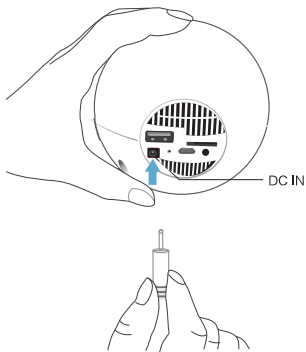


Precautions

When charging in the switch-off state, the charging lamp is red, after finished, the lamp is off.

When charging in the switch-on state, the lamp is not on.

Network

 "Setting"->"Wi-Fi", open Wifi and search for nearby network signal, select the correct network name, then enter password to connect.

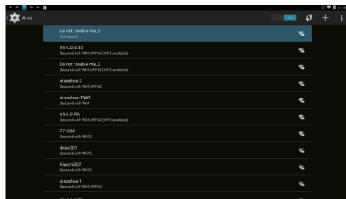

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

Wireless Connection

Android smartphone and iOS-iPhone can be connected with projector through your home network, then projector displays screen of Android smartphone or iPhone. It supports syncing with the android 5.0 more/iOS 9 or less, after syncing with the projector you may see your devices' screen being mirrored by the projector.



Notices: IOS Device---Please use "Happy cast" App.
Android Device---Please use "Miracast" App.

Bluetooth

"Setting" – "Bluetooth" , open Bluetooth and search for nearby Bluetooth devices ,select the correct Bluetooth name to connect.

Common Problems

How to focus:

Use the focus button "-" / "+" on the remote control to adjust the image.

How to adjust the screen size:

The product does not have the keystone function, Please put the projector on the straight direction to the wall or ceiling, it can cast a rectangle shape, The farther the distance, the larger screen will be.

 
Overheat protection:

When the device is used for a long time, there may be overheating protection led to shut down, please check whether the air outlet is covered. After the device has cooled down, it can be switched on and used again.

Failure to power on

1. Please check if there is battery in the remote control and if the battery has sufficient capacity.
2. Whether the projector is connected to the power or the build-in battery has sufficient capacity.
3. Is there something to block the IR receiver?

External equipment

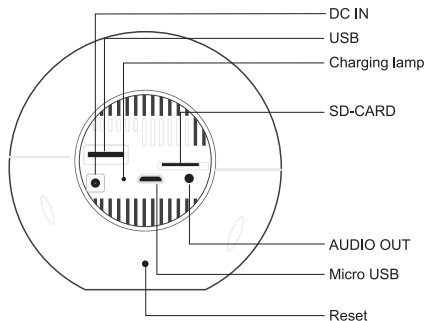

Warning

This is A grade product, in the daily life, the product will cause radio interference. Please be note.

The product is only applicable to non-tropical climates.

Hazardous Substances Table

Parts	Hazardous Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed Board Assemblies	X	0	0	0	0	0
Shell	0	0	0	0	0	0
Battery	X	0	0	0	0	0
Accessories	0	0	0	0	0	0
O: Indicates that this hazardous substance contained in all homogeneous materials of this part is below the limit requirement in SJ/T 11363-2006.						
X: Indicates that this hazardous substance contained in at least one of the homogeneous materials of this part is above the limit requirement in SJ/T 11363-2006.						
Battery identification for 5 years.						



USER MANUAL

MODEL:BPHW01S

The final explanation right of the specification is owned by Haier.
email:jerry@haier-cn.com
Service line:0086 755 83754867