


PowerBank Bluetooth Keyboard

User Manual

Connection Instructions:

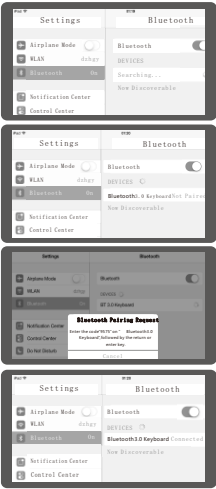

1. please open the power switch on the right top of keyboard ,press it 1s to open the power switch (press 4s to close the power switch).
2. press  +  matching code key,the blue light will twinkle ,then the device into searching and matching.
3. Click the “Setting” on the iPad ,then open the “Bluetooth” .
4. Open the “Bluetooth” into searching, then you will find “Bluetooth 3.0 Keyboard” click to next step.
5. According the table PC tips to input the correct password then click “Enter” button.
6. There have a tip for connecting successfully ,you can use your keyboard comfortably .

Technical Specifications

Size	281.1x190.2x11.7mm
Weight	500g
Charge Voltage	5.0-6.0V
Output Voltage	4.5-5.25V
Output Current	0-3.0A
Battery	24.05Wh
Charge Time	About 2.5 hours(2A)

Note: Please read the user manual carefully before you start using this product.

Product features

iOS	Android	Win
Apple iOS System	Switch to Android System	Switch to Win System
 Esc	 Esc	 Esc
 F1	 F1	 F1
 F2	 F2	 F2
 F3	 F3	 F3
 F4	 F4	 F4
 F5	 F5	 F5
 F6	 F6	 F6
 F7	 F7	 F7
 F8	 F8	 F8
 F9	 F9	 F9
 F10	 F10	 F10
 F11	 F11	 F11
 F12	 F12	 F12

Product features (Fn+)

Fn+ iOS	Fn + Android	Fn+ Win
Apple iOS System	Switch to Android System	Switch to Win System
 Esc	 Esc	 Esc
 F1	 F1	 F1
 F2	 F2	 F2
 F3	 F3	 F3
 F4	 F4	 F4
 F5	 F5	 F5
 F6	 F6	 F6
 F7	 F7	 F7
 F8	 F8	 F8
 F9	 F9	 F9
 F10	 F10	 F10
 F11	 F11	 F11
 F12	 F12	 F12
 QWERTY	 QWERTY	 QWERTY
 Caps Lock	 Caps Lock	 Caps Lock
 Z	 Z	 Z
 X	 X	 X
 PgUp	 PgUp	 PgUp
 PgDn	 PgDn	 PgDn
 Home	 Home	 Home
 End	 End	 End

LED Display Status

		D1	D2	D3	D4
Charging	Battery Capacity				
	100%-99%	Red Bright	Green Bright	Green Bright	Green Bright
	99%-75%	Red Bright	Green Bright	Green Bright	Green Grint
	75%-50%	Red Bright	Green Bright	Green Grint	Go out
	50%-25%	Red Bright	Green Grint	Go out	Go out
Output	25%-0%	Red Grint	Go out	Go out	Go out
	100%-75%	Red Bright	Green Bright	Green Bright	Green Grint
	75%-50%	Red Bright	Green Bright	Green Grint	Go out
	50%-25%	Red Bright	Green Grint	Go out	Go out
	25%-0%	Red Grint	Go out	Go out	Go out
	Low Voltage	Red Grint	Go out	Go out	Go out
	No Power	Go out	Go out	Go out	Go out

- 1.Turn on switch,the D4 will show blue light about 2 seconds.
- 2.When you connect the Bluetooth device,the D4 blue light will glitter.After connecting the D4 light go out
- 3.When you use caps lock,the D4 light always blue.

Notice.The light show just according to Voltage,not show according to battery capacity

Power Bank Keyboard Maintenance

1. Please keep the keyboard away from liquid or humid environment, saunas, swimming pool, steam room and don't let the keyboard get wet in the rain.
2. Please don't expose the keyboard at too high or too low temperature condition.
3. Please don't put keyboard under sun for a long time.
4. Please don't put keyboard close to the flame, such as cooking stoves, candles or fireplace.
5. Avoid sharp objects scratching products, timely to recharge or replace the dry cell products to ensure the normal use.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.