

包装信息	型号: SP-70 成品尺寸: 110*160MM 材质: 128g铜版纸, 折页 工艺: 四色印刷 版本号: V1.0-20221209	备注信息	三折页

正面

SUDOTACK

WIRELESS
KARAOKE SYSTEM
SP-70



User Manual

Packing List




Product Description

SUDOTACK SP-70 multi-functional Karaoke machine system includes handheld wireless microphones and a 6-inch HD speaker whose amplifying distance reaches 49ft/15m. The powerful TWS function allows you to pair two Maono SP-70 systems for stereo effect. There are independent control buttons for microphone volume, reverb, colorful RGB lights on/off, etc. Functions such as built-in 87.5-108MHz radio, Aux-in, TF slot, and USB Flash Drive port offer various playback options to play MP3, WAV or other audio formats. You can also know the working status via clear digital display. Maono SP-70 portable Karaoke system is medium-sized and has a fashionable looking. The high-voltage system ensures enough volume boost, and the internal large-capacity rechargeable lithium-ion battery guarantees long working hours. The system is ideal for family party, outdoor performance, teaching, etc.

Features

- TWS connection mode: To enjoy true wireless stereo audio, when the device Bluetooth mode is on, please click Pause button of any Maono SP-70 for auto-connection of the subsidiary and main Karaoke devices. And then connect Bluetooth device like phone to the the subsidiary and main Karaoke devices. Long hold the Pause button to stop Bluetooth connection.
- The latest Bluetooth technology offers high-quality audio and easy connection with Bluetooth devices like smart phones.
- Features 6.5mm mic input. Supports VHF band wireless microphone.
- Multi-functional digital song ordering via one button or multiple buttons. Allow you to switch songs in USB flash drive or Micro SD card, or switch radio channels.
- The fashionable device can be used in office, home, outdoor travelling, office, entertainment, studying, etc.
- A standard 3.5mm audio input jack for connecting phones or computers.
- Supports TF card or USB flash drive playback options to play MP3 or WAV.

Button Functions

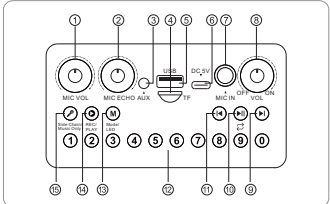

1. Mic volume knob

Turn the knob clockwise to increase mic volume, turn the knob anticlockwise to decrease or turn off mic volume.

2. Mic reverb knob

Turn the knob clockwise to increase mic reverb effect, turn the knob anticlockwise to decrease or turn off mic reverb effect.

3. Accompaniment/Audio port

Import accompaniment music and AUX.

4. TF Card slot

Insert TF card to playback MP3 files in it.

5. USB port

Insert USB flash drive to playback MP3 files in it.

背面

SP-70
WIRELESS
KARAOKE SYSTEM



FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warnings: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The operator should be notified and operated with minimum distance 20cm between the radiator and body.

Technical Support

 
Support@sudotack.com

www.sudotack.com




6. DC 5V Charging Port

Use the included USB-C charging cable to charging the device via USB port of phone charger.



7. Mic/Instrument Port

 Supports cabled microphone and Instrument audio input.



8. Power/Volume Knob

Turn the knob clockwise to turn on device, keep turning to increase volume. Turn the knob anticlockwise to decrease volume, keep turning to turn off device.

9. Next Song

Press the button to play the next song, long hold for fast forward. In radio mode, short press the button to next channel.

10. [HI] Play/Loop Button

Short press the button to play/stop playing. In MP3 mode, long hold the button to repeat playing a song or a playlist. In radio mode, long hold the button to search for radio channel. In Bluetooth mode, long hold the button to disconnect. While playing audio, long hold the button to delete recording.

11. Previous Song

Short press the button to play previous song, long hold the button for fast reverse. In radio mode, short press the button to play previous channel.

12. Number Button(1-0)

Pressing two or more buttons to select songs. For instance, tapping button No.1 and No.2 to play the 12th song in USB flash drive or Micro SD card.

13. [M] Mode/LED

Short press to convert from radio mode, Bluetooth mode, audio input mode, MP3 mode. Long hold the button to switch light modes.

Mode	Short press						
LED	Long press						

14. Recording/Playing Button

Long hold the button to record, while recording, short press the button to end recording. Short press the button to play USB disk/TF Card audio. Please be noted the recording function is only available when there is a USB disk, TF card, cabled microphone/wireless microphone connected to the device(s).

15. Music Only/Microphone Priority

Short press the button to turn on/off microphone priority function. Long press the button to turn on/off music only.

Charging notes

1. Battery symbol status: fully charged symbol , low battery symbol . Indicator light on indicates charging, indicator light off indicates fully charged.

2. Plug charging cable of charger to the product's DC 5V charging port to charge the device.

Cautious

Please charge the device via 10w or above charger, or you can use chargers with higher voltage than 5V/2A(10W).

Since there is built-in high capacity battery, please keep the product away from high-temperature environment.

Please fully charge the device for long-term storage.

Warranty Policy

Thanks for purchasing Sudotack products, please read user manual carefully before using products.

If you have any suggestions for us, please contact us in Order page or SUDOTACK official website. We will serve you wholeheartedly!

Official website: www.sudotack.com

Email: support@sudotack.com

V1.0.0.2023.01