 


section 3 :

SOUND equipment

揚聲器功能設備

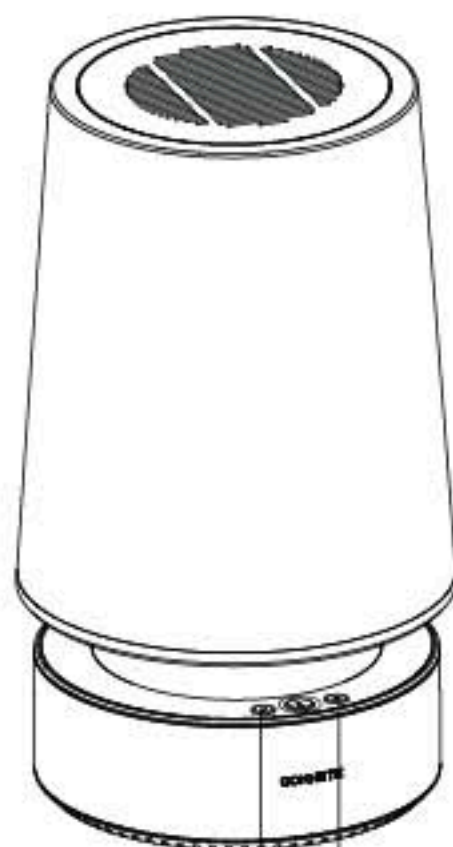

音量減少按鍵
decrease volume button

音量加大按鍵
increase volume button

音樂播放

連接：

開啟本機時藍牙將同步自動開啟，只需連接“HOMEY”藍牙名稱，連接成功後將出現“DO”聲提示音。另外也可使用3.5mm音頻線作連接。如同步按“+”及“-”按鍵，藍牙將重新作配對設定，此時可連接新的手機或電腦等設備。

音量：

“+”按鍵為增加音量，“-”按鍵為減低音量，簡單易用。

Play your music

Once your HOMEY is powered ON, the Bluetooth function is turned ON automatically. Turn on your Bluetooth function of your mobile phone or tablet, search and pair it with the name HOMEY. Or you can connect your device using a 3.5mm audio cord to the 3.5mm audio port stayed at the back of HOMEY.

Press the rightmost “+” button in the front to increase the volume or the leftmost “-” button to decrease the volume.

Press the “+” and “-” buttons together can help you to reset your Bluetooth pairing and HOMEY is prepared to connect with another device again.

Contact Information :

Email : connete2015@gmail.com
Tel : 2832 8562

Hong Kong Service Centre :

CONNETE Limited
Room 13, 2/F, Sino Industrial Plaza,
9 Kai Cheung Road, Kowloon Bay, Kowloon, HK

CONNETE

connect for inspiration / CONNETE.DK

USER MANUAL

使用手冊



148.5mm


HOMEY

uniquely designed to pack full sound
into a combo speaker lamp

section 1 :

CHARGER equipment

 充電功能設備

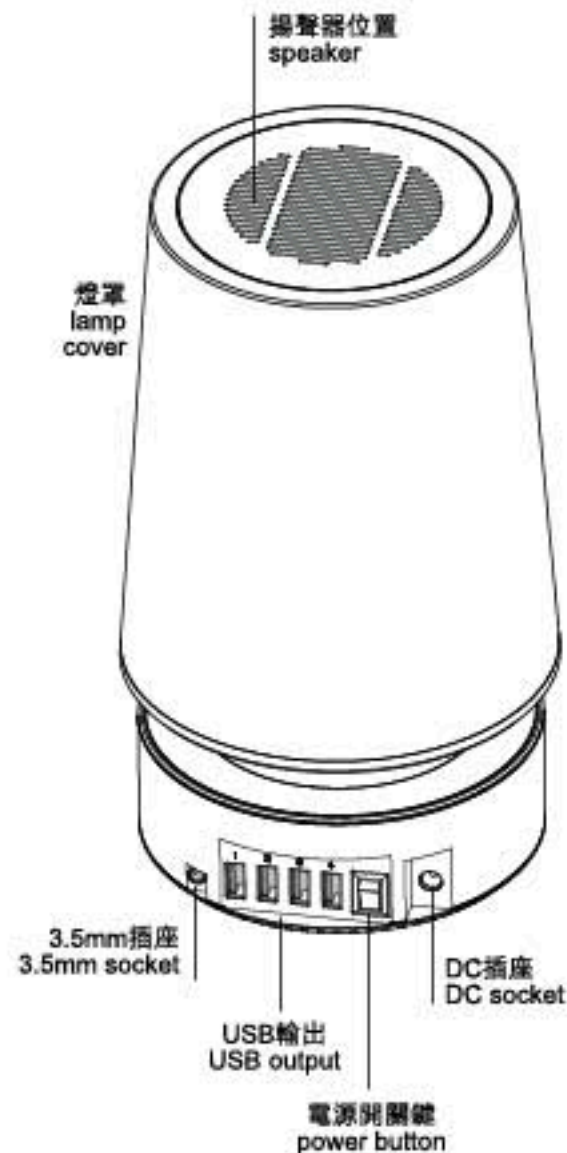

開機 / 關機

先將外置火牛插入DC插座供電，然後輕按電源開關鍵於“|”狀態。此時會出現短暫從小至大的提示聲音，即代表已開啟電源；另外，輕按電源開關鍵於“O”狀態，即為關機。

替手機或平板電腦等設備充電

將充電線接駁入USB輸出口即可充電，位置1及2為蘋果手機或平板等設備的快速充電接口。位置3及4則為通用快速充電接口，支援普遍Android格式的手機、平板、移動電源或其它照相機等設備充電。

Power ON/OFF

Plug in the external adapter to the DC socket at the back of HOMEY, switch the power button to “|” position then you will hear the alert sound which indicates HOMEY is turned ON.

Press the power button to “O” position, it will be turned OFF.

Charge your phones and tablets


Connect your device with the USB charging cable to the USB port at the back of HOMEY, it will start charging your device.

Port 1 & 2 support fast charge mode for Apple iPhone or iPad. Port 3 & 4 support all main stream devices like mobile phones, tablets, powerbank, camera, etc.

section 2 :

LAMP equipment

 照明功能設備

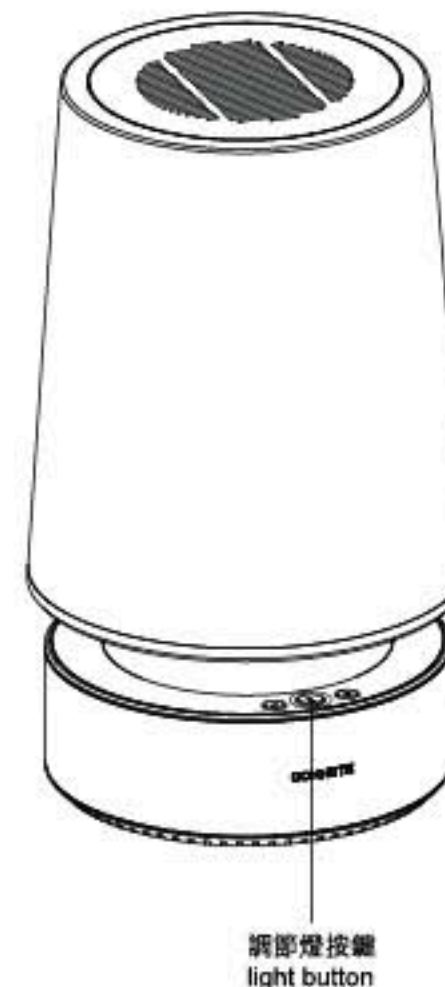

光暗調節功能

只需長按燈按鍵便可開啟光源；反之，只需長按燈按鍵便可關燈。

簡約操控按鍵調光模式：

開機 > 睡眠模式(暗光) > 娛樂模式(中光) > 看書模式(高光) > 關機

Adjust the LED Light

Press the middle light button in the front of HOMEY once, it will stay at the dimmest mode before go to bed.

Press the middle light button twice, the light will be brighter which is good for entertainment.

Press the middle light button 3 times, it will be the brightest mode which is good for reading. One more press, the light will be switched off. When the light is switched ON at any mode, long press the light button will switch OFF the light.

When the light is switched OFF, long press the light button will switch ON the light from the dimmest to brightest mode.

注意事項：

- 請勿在潮濕或接近水氣的位置使用。
- 請勿放置在溫度過高或是過低的環境。
- 禁止摔擊、投擲或使用尖銳物體拆解電池設備。
- 請勿自行更改電壓或將電源主體做任何改裝。
- 響應環保，丟棄時請做資源回收。

Attention :

- Do not expose this product to water or moisture.
- Extreme temperature, humidity, direct sunlight or shock should be avoided.
- Do not strike, throw, pierce the battery with a nail or other sharp objects on the battery pack.
- Do not disassemble or modify the battery device.
- Being responsible to environmental protection, please discard the battery to recycle collection.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.