 


Specification size: 74*105mm (A7 paper size), monochrome double-sided printing, 80G writing paper, folding, black wire frame without printing

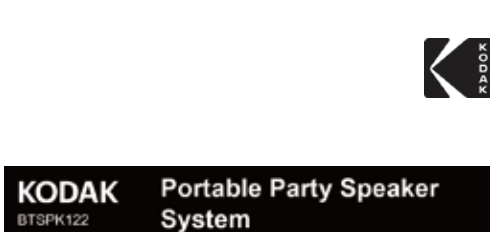

Portable Party Speaker System

BTPSK122



Net help page call us.

If you encounter any difficulties with this product, please call or email us and our representatives will be ready to help you.

Tel: 1-438-738-5163 Fax: 1-514-858-1588
Email: jonah@karma-lifestyle.com

Thank you for your purchase.

The Kodak trademark is used under license from Kodak.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions carefully.
- Keep these instructions in a safe place and read all instructions.
- Do not use this product near water.
- Do not use this product in areas with flammable vapors. Clean with a dry, lint-free cloth.
- Do not place any heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) too close to the product.
- Only use accessories/accessories specified by the manufacturer.
- Relief at servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as effects from power surges into the product, does not operate normally, or has been stopped.

FCM Warning

This device complies with part of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) it must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and it may interfere with radio reception if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada license exempt RSS standards. Operation is subject to the following conditions: (1) The device may not cause interference, and (2) it must accept any interference received, including interference that may cause undesired operation of the device.

NOTE: This device complies with Industry Canada license exempt RSS standards. Operation is subject to the following conditions: (1) The device may not cause interference, and (2) it must accept any interference received, including interference that may cause undesired operation of the device.

ISED: Radiation Exposure Statement

 
This equipment complies with ISED/RCS radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

The device complies with Canadian ICES-003 and RSS-321.

Thank you for your purchase.

E-1

LOCATION OF CONTROLS

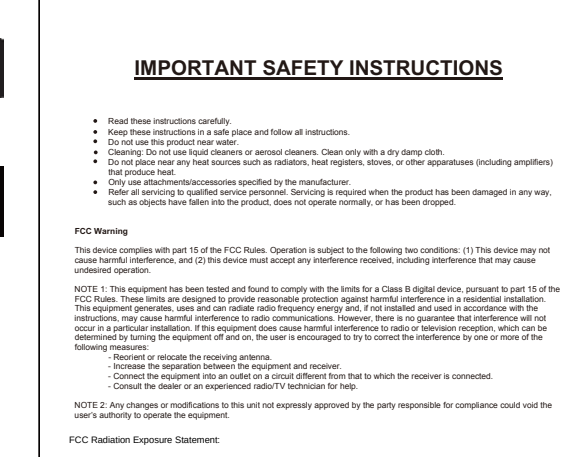


1. ON / OFF / Volume Dial	10. Microphone Volume
2. Bass Control	11. DC Power Port
3. Aux-In Input	12. LED Indicator Light
4. USB Input	13. Micro USB Charging Port
5. LED Display	14. Mode Button
6. MicroSD Input	15. Previous / Minus Button
7. Treble Control	16. Play / Pause / LED Light Button
8. Microphone Input	17. Next / Plus Button
9. Microphone Echo	

and operated with minimum distance 20cm between the radiator and your body.

The device complies with Canadian ICES-003 and RSS-321.

E-2

 REMOTE CONTROL

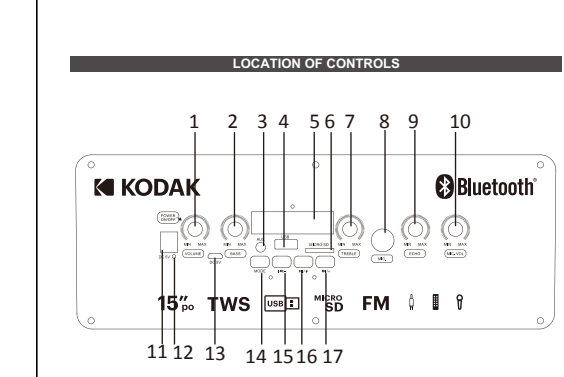

1. Power Button	6. Mode Button
2. Previous Button	7. Mode Button
3. Play / Pause Button	8. Next Button
4. Volume Decrease Button	9. Volume Increase Button
5. Equalizer Button	10. LED Light Button

NOTE: Ensure to check and use both the Volume Control dial on the unit and Volume Increase / Decrease Button on the remote control and the Equalizer Button on the remote control to fully utilize the sound output.

E-3

CHARGING THE SPEAKER

Using the Charging Cable provided, plug one end into the DC Power Port or Micro USB charging Port and plug the other (USB B) into a USB Port on your computer or USB wall charger (not included). The LED Indicator Light will illuminate red while charging and turn off when completed. A full charge will take 4-5 hours.

Product and Battery Disposal

This product contains a built-in lithium battery and should not be disposed of in normal household waste. The battery in this device is not intended to be removed by the individual or end user. For disposal and recycling, please contact your local waste management authorities. The recycling and processing of electronic waste will make a significant contribution towards helping protect the environment.

POWER ON/OFF

To turn ON / OFF the speaker, turn the POWER button on the back of the speaker.

BLUETOOTH MODE

Pairing a Bluetooth Enabled Device for the First Time to your Bluetooth Speaker

NOTE: Refer to the user manual for your Bluetooth enabled device for instructions on pairing and connecting Bluetooth devices.

- Keep the unit and your Bluetooth enabled device within 1 metre at all times during the pairing process.
- Turn on the speaker and the speaker will be in Bluetooth mode.
- Turn on the Bluetooth function on your Bluetooth enabled device and search for Bluetooth devices. When the search is complete, select "BTPSK122" from the Bluetooth device list.

NOTE:

- If pairing was unsuccessful, turn off the speaker first and repeat the steps above to re-pair again.
- If the speaker is not pairing, reset the device and repeat the steps above. Unless pairing information is displayed, re-pairing is not required after the first time.
- If you want to pair multiple devices, please disconnect the existing device from the Bluetooth mode and then pair again with the new device according to the steps above.
- To increase or decrease the volume on the speaker, turn the Volume Dial.
- To play/pause the music, press the Play/Pause button.
- To pause and resume playback, press the Play/Pause button.
- Use the Treble and Bass Dial to adjust the sound.

E-4

FM MODE

Press the Mode Button to cycle through to the FM Mode. Press the Play/Pause Button to start the auto search function. Once the auto search feature is completed, all stations with signal will be saved into memory. Use the Previous or Next Buttons to cycle through the saved stations.

Use the Plus or Minus Buttons and Volume Dial to adjust the volume.

Tips for Best Reception: If the FM reception is weak, change the position or location of the unit or try placing the unit near a window until you get the best reception.

USB MODE

This unit allows you to play music from a USB thumb drive with MP3 formatted files. Insert the USB thumb drive into the USB port to cycle through to the USB Mode.

MICRO SD MODE

Warning: To reduce the risk of fire and burns, do not disassemble, crush, puncture, short external contacts or dispose of in fire or water.

This unit allows you to play music from a MicroSD memory card with MP3 formatted files. Insert the MicroSD card. Press the Mode Button to cycle through to the MicroSD Mode.

NOTE: To insert the MicroSD card, use your fingernail to help push it in all the way until it clicks in. To remove the MicroSD card, push it in all the way and it will click out. The microsd memory card can be left in the speaker or taken out. It will not affect the function of the speaker as you cycle through the different modes.

AUX-IN/AUDIO INPUT MODE

Using a 5 mm aux-in cable (not included), plug one end into a smartphone, tablet, MP3 player or other audio source and the other into the Aux-In Port. Press the Mode Button to cycle through to the Aux-In Mode.

MICROPHONE

Connect the microphone to sing along to your favorite tunes. Adjust the Microphone Volume and Echo Control.

LED LIGHT EFFECTS

Press and hold the LED Light Button to cycle through the various light modes and to turn OFF / ON the LED lights.

TWS FUNCTION

You can connect another BTPSK122 speaker for double the sound using the TWS function. Turn on both speakers to the Bluetooth Mode. Make sure no other devices are connected via Bluetooth to either speaker. Press and hold the Mode Button and the 2 speakers will connect automatically. You will hear a beep, then an audible alert when both are connected. After the 2 speakers are connected, go ahead and pair your device to the BTPSK122 speaker.

E-5

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

 
Lisez attentivement ces instructions.

- Conservez ces instructions dans un endroit sûr et assurez-vous de les lire.
- N'utilisez pas le produit en présence de pluie.
- N'utilisez pas le produit en présence de vapeurs inflammables, de gaz, de produits chimiques ou de produits dangereux.
- Ne placez pas le produit à proximité de sources de chaleur telles que radiateurs, poêles à bois, poêles à pétrole, etc.
- Ne placez pas le produit à proximité de sources de chaleur telles que radiateurs, poêles à bois, poêles à pétrole, etc.
- Utilisez uniquement les accessoires approuvés par le fabricant.
- Ne tentez pas de réparer le produit. Si le produit ne fonctionne pas, arrêtez-le et contactez le service à la clientèle.
- Ne tentez pas de réparer le produit. Si le produit ne fonctionne pas, arrêtez-le et contactez le service à la clientèle.

Remarque: Ce produit ne doit pas être utilisé en présence de sources de chaleur telles que radiateurs, poêles à bois, poêles à pétrole, etc.

E-6


EMPLACEMENT DES COMMANDES

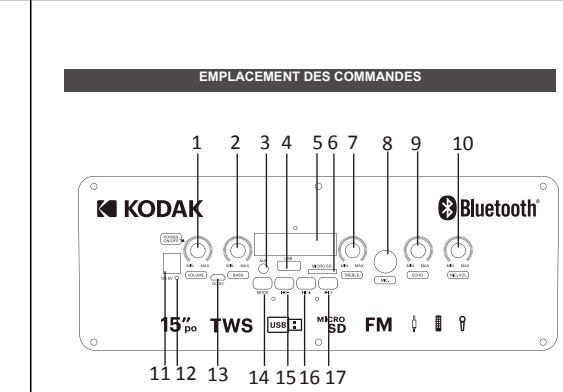

1. Commutateur de mise en marche / fonction / volume	10. Volume du microphone
2. Contrôle des graves	11. Port d'alimentation DC
3. Entrée auxiliaire	12. Indicateur à DEL
4. Entrée USB	13. Port de recharge MicroUSB
5. Affichage à DEL	14. Bouton des modes
6. Entrée MicroSD	15. Bouton Précédent / Moins
7. Contrôle des aigus	16. Bouton Lecture / Pause / Lumière à DEL
8. Entrée du microphone	17. Bouton Suivant / Plus
9. Écho du microphone	

E-7

 TELECOMMANDE

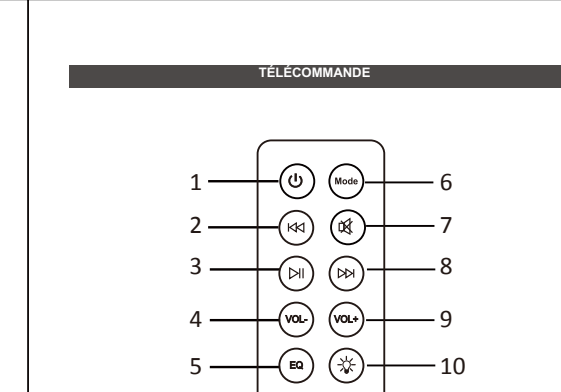

1. Bouton d'alimentation	6. Bouton mode
2. Bouton précédent	7. Bouton de sourdine
3. Bouton lecture / pause	8. Bouton suivant
4. Bouton de réduction du volume	9. Bouton d'augmentation du volume
5. Bouton d'égaliseur	10. Bouton de voyant à DEL

E-8

[illegible]