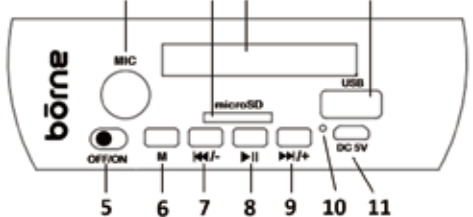


 PORTABLE WIRELESS SPEAKER BTSPK84  PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.	IMPORTANT SAFETY INSTRUCTIONS - Read these instructions carefully. - Keep these instructions in a safe place. - Follow all instructions. - Do not use this product near water. - Cleaning: Do not use liquid cleaners or aerosol cleaners. Clean only with a dry damp cloth. - Do not place near any heat sources such as radiators, heat registers, stoves, or other appliances (including appliances) that produce heat. - Only use electronic/accessories specified by the manufacturer. - Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as objects have fallen into the product, does not operate normally, or has been dropped. - Object Entry: Never push objects of any kind into this product through the openings. FCC Warning: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. IC Warning: This device complies with Industry Canada (Borne-exempt) RSS standards. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio sans fil de classe B. L'exploitation de cet équipement est soumise à deux conditions essentielles: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Under Innovation, Science and Economic Development Canada regulations, this radio transmitter may only operate an antenna of a type and maximum/average gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than the necessary for successful communication. Conformément au Règlement sur l'Innovation, les Sciences et Développement économique du Canada, l'émetteur radio ne peut utiliser que le type d'antenne approuvé par Industrie Canada et le gain maximal (ou moyen). Afin de réduire les interférences radio potentielles pour d'autres utilisateurs, le type d'antenne et le gain doivent être choisis de telle sorte que la puissance isotrope équivalente rayonnée (p.i.e.r.) ne dépasse pas la puissance requise pour une communication réussie. ISED Radiation Exposure Statement: This equipment complies with ISED's radio exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. IC exposition aux radiations: Cet équipement est conforme avec ISED's limites d'exposition aux rayonnements électromagnétiques pour un usage non contrôlé. Cet émetteur ne doit pas être co-localisé ou fonctionner en conjonction avec une autre antenne ou émetteur. This device complies with Canadian ICES-003 and RSS-247. Thank you for your purchase. Please visit our website at www.borne-lifestyle.com E-1	LOCATION OF CONTROLS  <table border="1"> <tr> <td>1, Microphone Input</td> <td>7, Volume - / Previous Button</td> </tr> <tr> <td>2, microSD Card Input</td> <td>8, Play/Pause Button</td> </tr> <tr> <td>3, LED Display</td> <td>9, Volume + / Next Button</td> </tr> <tr> <td>4, USB Input</td> <td>10, Charging LED Light</td> </tr> <tr> <td>5, ON / OFF Switch</td> <td>11, Micro USB Charging Port</td> </tr> <tr> <td>6, Mode Button</td> <td></td> </tr> </table> CHARGING THE SPEAKER Using the Charging Cable provided, plug the Micro USB Tip into the Micro USB Charging Port and plug the other end (USB Tip) into a USB port on your computer or USB wall charger (not included). The LED Indicator Light will illuminate red while charging and turn off when completed. A full charge will be 4-5 hours. NOTE: The input for charging is 5V, 1A. Do not use a charger with more than 5V, 2.4A rating. E-2	1, Microphone Input	7, Volume - / Previous Button	2, microSD Card Input	8, Play/Pause Button	3, LED Display	9, Volume + / Next Button	4, USB Input	10, Charging LED Light	5, ON / OFF Switch	11, Micro USB Charging Port	6, Mode Button		Product and Battery Disposal This product contains a built-in lithium battery and should not be disposed of in normal household waste. The battery in this device is not intended to be removed by the individual or end user. For disposal and recycling, please contact your local waste management authorities. The recycling and processing of electronic waste will make a significant contribution towards helping protect the environment. Warning: To reduce the risk of fire and burns, do not disassemble, crush, puncture, short external contacts or dispose of in fire or water. POWER ON/OFF To turn on/off the speaker, slide the toggle switch to the ON or OFF position. BLUETOOTH MODE Pairing a Bluetooth Enabled Device for the First Time to your Bluetooth Speaker NOTE: Refer to the user manual for your Bluetooth enabled device for instructions on pairing and connecting Bluetooth devices. - Keep the unit and your Bluetooth enabled device within 1 metre at all times during the pairing process. - Turn on the speaker and press the Mode Button and toggle to the Bluetooth mode, The LED display will indicate "BLUE". - Turn on the Bluetooth function on your Bluetooth enabled device and search for Bluetooth devices. When the search is complete, select "BTSPK84" from the Bluetooth device list. (If a password is required, use "0000" to finalize the pairing process.) - When the Bluetooth connection is successful, you will hear an alert tone. This means you are connected and the speaker is ready for use. NOTE: - If pairing was unsuccessful, turn off the speaker first and repeat the steps above to re-pair again. - After successful pairing, paired device will remember each other, unless pairing information is deleted, re-pairing will not be required after the first time. - If you want to pair the unit with other Bluetooth enabled devices, please disconnect/remove the existing device and pair with the new device according to the steps above. - To increase or decrease the volume on the speaker, press and hold the Volume + or Volume - button until the desired volume is reached. - To skip songs forward or backward, press the Previous or Next Button quickly until the desired song is selected. - To pause and resume playback, press the Play/Pause button. USB MODE This unit allows you to play music from a USB thumb drive with MP3 formatted files. - Insert the USB thumb drive, Press the Mode Button to cycle through to the USB Mode. E-3	MicroSD MODE This unit allows you to play music from a MicroSD memory card with MP3 formatted files. - Insert the MicroSD card, Press the Mode Button to cycle through to the MicroSD Mode. - To increase or decrease the volume, press and hold the Volume + or Volume - Buttons. - To skip songs forward or backward, press the Next or Previous Buttons. - To pause and resume playback, press the Play/Pause Button. NOTE: To insert the MicroSD card, use your fingernail to help push it in all the way until it clicks in. To remove the MicroSD card, push it in all the way and it will click out. The MicroSD memory card can be left in the speaker or taken out, it will not affect the function of the speaker as you cycle through the different modes. AUX-IN (AUDIO INPUT) MODE - Using the USB charging cable provided, plug the micro USB Tip into the Micro USB Charging Port and plug the 3.5mm aux-in plug into a smartphone, tablet, MP3 player or other audio source. - Press the Mode Button to cycle through to the Aux-In Mode. - Use the native controls on the connected device to play, pause and control the music output. - Press and hold the Volume + or Volume - Buttons to control your volume level as well as on your device. FM MODE - After you turn on the speaker, press the Mode Button to cycle through to the FM Mode. - You will need to connect the Charging/Aux-In Cable to act as the antenna. Connect the Micro USB Tip into the Micro USB Charging Port. - Press the Play/Pause Button to start the Auto Search function from 87.5 to 108MHz. - Once the auto search feature is completed, all stations with signal will be saved into memory. Use the Skip Backward or Skip Forward Buttons to search through the saved stations. - To increase or decrease the volume, press and hold the Volume + or Volume - Buttons. Tips for Best Reception: Since the Charging/Aux-In Cable is acting as the antenna, try to keep it extended for the best reception and near a window. LED LIGHTS To turn on and off the LED lights on the speaker, press the LED Light Button. E-4	Need help? Please call us. If you encounter any difficulties with this product, please call or email us and our representatives will be ready to help you. Toll free: 1-800-933-6669 (Monday to Friday: 9am – 5pm EST) Email: support@borne-lifestyle.com Thank you for your purchase. We want you to start enjoying your product. borne LIMITED WARRANTY Warning: Some Products may contain components that are small enough to be swallowed. Keep out of the reach of children. Before returning your Product for service under this Warranty, (i) please read the instruction manual carefully and visit our website at www.borne-lifestyle.com for product details and warranty support documentation (e.g., Frequently Asked Questions and Common Troubleshooting Guides); (ii) please contact Borne Electronics directly if you are still having trouble with your Product. Subject to the terms and conditions herein, Borne Electronics warrants to the original purchaser of the Product ("Customer") that the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defect") for a period of 1 year. Warranty Period encompasses separate "Coverage Periods" for Parts and Labor, with each Coverage Period to begin from the original date of Customer purchase. Parts are covered for a period of 1 year. Labor is covered for 90 days. If a Customer returns a defective Product during the applicable Warranty Period, Borne Electronics will, at its option during the specified Coverage Periods for Parts and Labor (as applicable), either: (i) repair the Product or (ii) replace the Product with a new or refurbished Product, in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and Borne Electronics' sole liability for breach of the limited warranty contained herein. This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product by any party other than Borne Electronics or a party authorized in writing by Borne Electronics; (c) any damage to Product due to power surges, incorrect electrical voltage, misconnection in any device, or malfunction of any device used with the Product; (d) cosmetic damage to the Product caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic interference, or other climatic conditions; or (g) any acts of God. Product as sold by Borne Electronics for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be lost or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or life-saving purposes. Borne Electronics expressly disclaims any warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify Borne Electronics for any damages claimed against Borne Electronics for such uses. This Warranty specifically and expressly excludes any Product that is purchased by Customer as a "tool" or "display" model. Any such Product is purchased by Customer "AS IS" and Borne Electronics disclaims any Warranties, express or implied, in relation thereto. E-5	EXCEPT FOR THE EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCT IS PROVIDED "AS IS" AND BORNE ELECTRONICS DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF (i) MERCHANTABILITY, (ii) FITNESS FOR A PARTICULAR PURPOSE, OR (iii) A NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL BORNE ELECTRONICS BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING WITHOUT LIMITATION ANY LOSS OF PROFITS OR REVENUES, LOSS OF ACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE TYPE OF DEFECT OR LIABILITY, INCLUDING NEGLIGENCE, AND/OR OTHERWISE, EVEN IF BORNE ELECTRONICS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BORNE ELECTRONICS' AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT COSTS PAID BY THAT CUSTOMER FOR THE PRODUCT CAUSING SUCH DAMAGES, IF ANY. This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. To obtain Warranty service, Customer must call Borne Electronics Support prior to making a Product Return. Customer must include with Product Return the following items: (i) a dated sales receipt that indicates the place of purchase, model number of Product, and amount paid; (ii) a detailed description of Customer's problem with Product; (iii) Customer's full name, phone number, and return address; and (iv) a money order for any applicable shipping costs made out to Borne Electronics Inc. to cover return shipping charges to US and Canadian destinations only. Borne Electronics will not make return shipments to a P.O. Box. For shipping to international addresses, actual freight will be charged to Customer. Failure to enclose any of these items may delay the processing of your Warranty claim. Return your Product freight prepaid in its original packaging, or packaging that affords an equal measure of protection. Please allow 4 to 6 weeks for the processing of your claim. Edco Electronics Inc. 8484 Esplanade Montreal, Quebec H2P 2R7 Canada Toll Free: 1-800-933-6669 (Monday to Friday: 9am to 5pm EST) Email: support@borne-lifestyle.com Edco Electronics Inc. 8484 Esplanade Montreal, Quebec H2P 2R7 Canada Toll Free: 1-800-933-6669 (Monday to Friday: 9am to 5pm EST) Email: support@borne-lifestyle.com Warning: Some Products may contain components that are small enough to be swallowed. Keep out of the reach of children. Before returning your Product for service under this Warranty, (i) please read the instruction manual carefully and visit our website at www.borne-lifestyle.com for product details and warranty support documentation (e.g., Frequently Asked Questions and Common Troubleshooting Guides); (ii) please contact Borne Electronics directly if you are still having trouble with your Product. Subject to the terms and conditions herein, Borne Electronics warrants to the original purchaser of the Product ("Customer") that the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defect") for a period of 1 year. Warranty Period encompasses separate "Coverage Periods" for Parts and Labor, with each Coverage Period to begin from the original date of Customer purchase. Parts are covered for a period of 1 year. Labor is covered for 90 days. If a Customer returns a defective Product during the applicable Warranty Period, Borne Electronics will, at its option during the specified Coverage Periods for Parts and Labor (as applicable), either: (i) repair the Product or (ii) replace the Product with a new or refurbished Product, in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and Borne Electronics' sole liability for breach of the limited warranty contained herein. This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product by any party other than Borne Electronics or a party authorized in writing by Borne Electronics; (c) any damage to Product due to power surges, incorrect electrical voltage, misconnection in any device, or malfunction of any device used with the Product; (d) cosmetic damage to the Product caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic interference, or other climatic conditions; or (g) any acts of God. Product as sold by Borne Electronics for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be lost or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or life-saving purposes. Borne Electronics expressly disclaims any warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify Borne Electronics for any damages claimed against Borne Electronics for such uses. This Warranty specifically and expressly excludes any Product that is purchased by Customer as a "tool" or "display" model. Any such Product is purchased by Customer "AS IS" and Borne Electronics disclaims any Warranties, express or implied, in relation thereto. E-6
1, Microphone Input	7, Volume - / Previous Button																	
2, microSD Card Input	8, Play/Pause Button																	
3, LED Display	9, Volume + / Next Button																	
4, USB Input	10, Charging LED Light																	
5, ON / OFF Switch	11, Micro USB Charging Port																	
6, Mode Button																		
 HAUT-PARLEUR PORTABLE SANS FIL BTSPK84  VEUILLEZ LIRE CE GUIDE D'UTILISATION EN ENTIER AVANT D'UTILISER CET APPAREIL ET CONSERVER CE LIVRET POUR RÉFÉRENCE ULTÉRIEURE.	INSTRUCTIONS DE SÉCURITÉ IMPORTANTES - Lisez attentivement ces instructions. - Conservez ces instructions en un endroit sûr. - Suivez toutes les instructions. - Ne placez pas cet appareil près de l'eau. - Nettoyage: N'utilisez pas de nettoyeurs à haute pression, nettoyeurs à ultrasons, nettoyeurs à vapeur, nettoyeurs à ultrasons ou nettoyeurs à ultrasons. - Ne pas placer près de sources de chaleur telles que radiateurs, bouches de chaleur, poêles ou autres appareils (y compris les appareils à induction) ou près d'un feu. - Utilisez uniquement les accessoires spécifiés par le fabricant. - Confiez toutes les réparations à un personnel qualifié. Une intervention est nécessaire lorsque le produit a été endommagé de quelque manière que ce soit, par exemple si des objets sont tombés dans le produit, s'il ne fonctionne pas normalement ou s'il est tombé. - Entrée d'objets: Ne pas pousser jamais d'objets de quelque nature que ce soit dans le produit par les ouvertures. Avertissement de la FCC: Cet appareil est conforme à l'article 15 des règlements de la FCC. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un fonctionnement indésirable. REMARQUE 1: Cet équipement a été testé et déclaré conforme aux limites d'un appareil numérique de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie de fréquence radio, et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception de la radio ou de la télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger les interférences par une ou plusieurs des mesures suivantes: - Reorienter ou déplacer l'antenne de réception. - Augmenter la distance entre l'équipement et le récepteur. - Connecter l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté. - Consulter le vendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide. REMARQUE 2: Tout changement ou modification de cet appareil non expressément approuvé par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur à utiliser l'équipement. Avertissement IC: Cet appareil est conforme aux normes RSS exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un fonctionnement indésirable. REMARQUE 1: Cet équipement a été testé et déclaré conforme aux limites d'un appareil numérique de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie de fréquence radio, et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception de la radio ou de la télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger les interférences par une ou plusieurs des mesures suivantes: - Reorienter ou déplacer l'antenne de réception. - Augmenter la distance entre l'équipement et le récepteur. - Connecter l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté. - Consulter le vendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide. REMARQUE 2: Tout changement ou modification de cet appareil non expressément approuvé par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur à utiliser l'équipement. Avertissement IC: Cet appareil est conforme aux normes RSS exemptes de licence d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un fonctionnement indésirable. REMARQUE 1: Cet équipement a été testé et déclaré conforme aux limites d'un appareil numérique de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie de fréquence radio, et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception de la radio ou de la télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger les interférences par une ou plusieurs des mesures suivantes: - Reorienter ou déplacer l'antenne de réception. - Augmenter la distance entre l'équipement et le récepteur. - Connecter l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté. - Consulter le vendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide. REMARQUE 2: Tout changement ou modification de cet appareil non expressément approuvé par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur à utiliser l'équipement. Merci pour votre achat. Veuillez consulter notre site web à l'adresse suivante www.borne-lifestyle.com F-2	EMPLACEMENT DES COMMANDES  <table border="1"> <tr> <td>1, Entrée du microphone</td> <td>7, Bouton Volume - / Précédent</td> </tr> <tr> <td>2, Entrée de la carte microSD</td> <td>8, Bouton Lecture/Pause</td> </tr> <tr> <td>3, Affichage à DEL</td> <td>9, Bouton Volume + / Suivant</td> </tr> <tr> <td>4, Entrée USB</td> <td>10, Voyant de recharge à DEL</td> </tr> <tr> <td>5, Commutateur ON / OFF</td> <td>11, Port de recharge microUSB</td> </tr> <tr> <td>6, Bouton des modes</td> <td></td> </tr> </table> RECHARGE DU HAUT-PARLEUR À l'aide du câble de chargement fourni, branchez l'embout microUSB dans le port de chargement microUSB et branchez l'autre extrémité (embout USB) dans un port USB de votre ordinateur ou dans un chargeur mural USB (non inclus). Le voyant lumineux s'allume en rouge pendant la charge et s'éteint une fois celle-ci terminée. Une charge complète dure de 4 à 5 heures. REMARQUE: L'entrée pour la charge est de 5V, 1A et ne l'utilisez pas un chargeur dont la puissance est supérieure à 5 V, 2,4 A. Mise au rebut du produit et de la pile Ce produit contient une pile au lithium intégrée et il ne doit pas être jeté avec les déchets ménagers normaux. La pile de cet appareil n'est pas destinée à être retirée par le particulier ou l'utilisateur final. Pour l'élimination F-3	1, Entrée du microphone	7, Bouton Volume - / Précédent	2, Entrée de la carte microSD	8, Bouton Lecture/Pause	3, Affichage à DEL	9, Bouton Volume + / Suivant	4, Entrée USB	10, Voyant de recharge à DEL	5, Commutateur ON / OFF	11, Port de recharge microUSB	6, Bouton des modes		et le recyclage, veuillez contacter vos autorités locales de gestion des déchets. Le recyclage et le traitement des déchets électroniques contribueront de manière significative à la protection de l'environnement. Avertissement : Pour réduire les risques d'incendie et de brûlures, ne pas démonter, écraser, percer, court-circuiter les contacts externes ou jeter dans le feu ou dans l'eau. Pour allumer/éteindre le haut-parleur, faites glisser l'interrupteur à bascule sur la position ON ou OFF. MISE ENHORS FONCTION MODE BLUETOOTH Appairer un appareil compatible Bluetooth pour la première fois avec votre enceinte Bluetooth REMARQUE: reportez-vous au manuel d'utilisation de votre appareil compatible Bluetooth pour obtenir des instructions sur le jumelage et la connexion d'appareils Bluetooth. - Gardez l'unité et votre dispositif compatible Bluetooth à moins d'un mètre à tout moment pendant le processus d'appariement. - Allumez le haut-parleur, appuyez sur le bouton Mode et passez en mode Bluetooth, L'écran à DEL indique "BLUE". - Activez la fonction Bluetooth sur votre appareil compatible Bluetooth et recherchez des dispositifs Bluetooth. Lorsque la recherche est terminée, sélectionnez "BTSPK84" dans la liste des périphériques Bluetooth. (Si un mot de passe est requis, utilisez "0000" pour finaliser le processus de jumelage.) - Lorsque la connexion Bluetooth est réussie, vous entendrez une tonalité d'alerte. Cela signifie que vous êtes connecté et que le haut-parleur est prêt à être utilisé. REMARQUES: - Si le jumelage n'a pas réussi, éteignez d'abord le haut-parleur et répétez les étapes ci-dessus pour effectuer un nouveau jumelage. - Après un jumelage réussi, les appareils jumelés se souviennent les uns des autres. À moins que les informations de jumelage ne soient effacées, un nouveau jumelage n'est pas nécessaire après la première fois. - Si vous souhaitez jumeler l'unité avec d'autres appareils compatibles Bluetooth, veuillez déconnecter/l'effacer/l'appareil existant et le jumeler avec le nouvel appareil en suivant les étapes ci-dessus. - Pour augmenter ou diminuer le volume de le haut-parleur, appuyez sur le bouton Volume + ou Volume - de le haut-parleur et maintenez-le enfoncé jusqu'à ce que le volume souhaité soit atteint. - Pour sauter des morceaux en avant ou en arrière, appuyez rapidement sur le bouton Précédent ou Suivant jusqu'à ce que le morceau souhaité soit sélectionné. - Pour mettre en pause et reprendre la lecture, appuyez sur le bouton Lecture/Pause. MODE USB Cet appareil vous permet de lire de la musique à partir d'une clé USB contenant des fichiers au format MP3. F-4	- Insérer la clé USB. Appuyez sur le bouton Mode pour passer au mode USB. - Pour augmenter ou diminuer le volume, appuyez sur les boutons Volume + ou Volume - du haut-parleur et maintenez-les enfoncés. - Pour sauter des chansons en avant ou en arrière, appuyez sur les boutons Suivant ou Précédent. - Pour interrompre et reprendre la lecture, appuyez sur le bouton Lecture/Pause. MODE microSD Cet appareil vous permet de lire de la musique à partir d'une carte mémoire microSD contenant des fichiers au format MP3. - Insérer la carte microSD. Appuyez sur le bouton Mode pour passer au mode microSD. - Pour augmenter ou diminuer le volume, maintenez enfoncés les boutons Volume + ou Volume -. - Pour sauter des chansons en avant ou en arrière, appuyez sur les boutons Suivant ou Précédent. - Pour interrompre et reprendre la lecture, appuyez sur le bouton Lecture/Pause. REMARQUE: Pour insérer la carte microSD, utilisez votre ongle pour l'enfoncer complètement jusqu'à ce qu'elle s'enclenche. Pour retirer la carte microSD, poussez-la fond jusqu'à ce qu'elle s'enclenche. La carte mémoire microSD peut être laissée dans le haut-parleur ou retirée. Elle n'affectera pas le fonctionnement de le haut-parleur lorsque vous passez d'un mode à l'autre. MODE ENTRÉE AUDIO - À l'aide du câble de charge USB fourni, branchez l'embout micro USB dans le port de charge micro USB et branchez la fiche aux 3,5 mm dans un téléphone intelligent, une tablette, un lecteur MP3 ou une autre source audio. - Appuyez sur le bouton Mode de le haut-parleur pour passer au mode Aux-In. - Utilisez les commandes natives de l'appareil connecté pour lire, mettre en pause et contrôler la lecture musicale. - Maintenez enfoncés les boutons Volume + ou Volume - et maintenez-les enfoncés pour contrôler votre niveau de volume ainsi que celui de votre appareil. MODE FM - Après avoir allumé le haut-parleur, appuyez sur		
1, Entrée du microphone	7, Bouton Volume - / Précédent																	
2, Entrée de la carte microSD	8, Bouton Lecture/Pause																	
3, Affichage à DEL	9, Bouton Volume + / Suivant																	
4, Entrée USB	10, Voyant de recharge à DEL																	
5, Commutateur ON / OFF	11, Port de recharge microUSB																	
6, Bouton des modes																		