 



QUICK START GUIDE

Model:M-X1,Mono speaker


Brand:Dellica

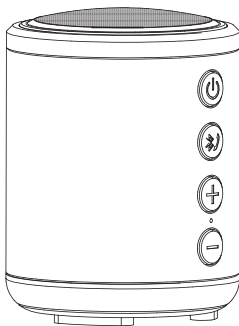

 In the Box

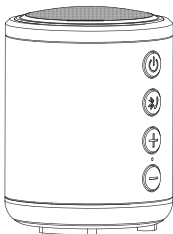

x 1

 


x 1




x 1

(ENG) Contents vary by region

 Controls

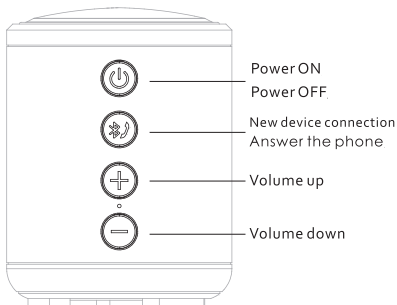


Connections

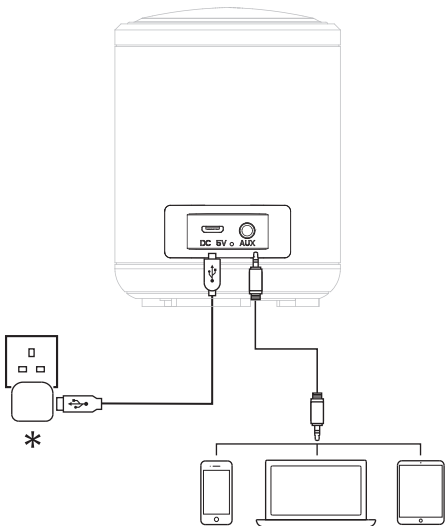 


* (ENG)Not included, Advice charging input is 800mA

 Connections

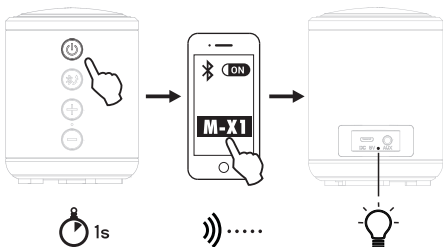

Pickup phone call

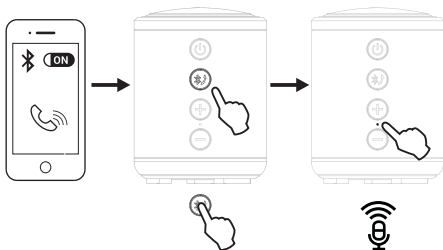 

Battery Charging




Charging light red after power off

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.



Specifications

Model	M-X1
Drive units	1X 45mm (1.75in) full range driver, 4Ω 8W 1X 45mm Auxiliary Bass Radiator (ABR)
RMS	8W output
Inputs	Bluetooth 4.0 + EDR 3.5MM AUX Micro USB 0 charging
Bluetooth range	10m
Bluetooth memory	3 devices
Bluetooth frequency	2.402GHz - 2.48GHz
Bluetooth power	CLASS 2
Amplifier output power	12W
Frequency range	20Hz-20KHz
Battery type	Li-Polymer rechargeable battery 1800mAH
Battery charging time	4 hours to fully charge
Battery life	8 hours playback time
Dimension (D X H)	D75mm * H97.4mm
Weight	0.5kg
Power in	5V D.C 0.8A

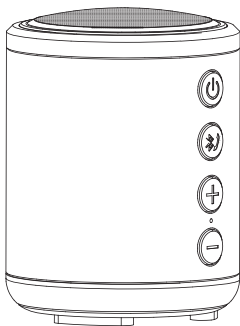 

IMPORTANT SAFETY INFORMATION

English

Thank you for choosing Dellica. Dellica is dedicated to producing premium audio products with best sound quality to give you a natural and pleasurable listening experience that is true to the original performance.

Please read the important safety and warranty information bellow. For any other services, please contact your local authorized Dellica distributor, whose details can be found at www.dellica.com

IMPORTANT SAFETY INFORMATION

- Follow this manual carefully for the best results from your speakers
- Read and return the warranty card
- Clean with a dry lint free cloth
- Do not use spirit based cleaners
- Avoid champ and water
- Avoid temperature extremes
- Avoid direct sunlight
- SAFETY NOTICE ! Trailing cables are dangerous, secure all cables

WARNING

TO REDUCE THE RISK OF FIRE OF ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAN OR MOISTURE



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

English

- A combined mains power input lead and country-specific mains plug is provided
- Check before connecting to your local mains supply that the local supply voltage is the same as that marked on the connectors panel. If it is not, check with your supplier before proceeding.

Explanation of Graphical Symbols



- The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “ dangerous voltage” within the products enclosure that may be of a sufficient magnitude to constitute a risk of electrical shock to persons.



- The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



- Correct Disposal of This Product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal. Recycle it responsibly to promote the sustainable reuse of material resources.
- To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product from environmentally safe recycling.

Notice Points

Please take heed of the following before using the DELLICA Speaker. Note also that the word “appliance” shall refer to the DELLICA speaker, or any part of it.

1. Read Instructions – All the Safety and Operating Instructions should be read before operating the appliance.
2. Retain Instructions – The Safety and Operating Instructions should be retained for future reference.
3. Heed Warnings – All warnings on the appliance and in the Operating Instructions should be adhered to.
4. Follow Instructions – All Operating and Use Instructions should be followed. Only use attachments/accessories specified by the manufacture.
5. Important – Do not defeat the safety purpose of the polarized or grounding type plug. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Refer all servicing to a qualified service personnel. Servicing is required for any damaged parts such a power supply cord or plug.
6. Water and Moisture – The appliance should not be used in or near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, near a swimming pool, and the like. The appliance shall not be exposed to dripping or splashing. Care should be taken so that objects containing liquids are not placed upon or spilled into the enclosure through openings and that no objects

Before Using the Speaker

filled with liquids, such as a vase, shall be placed on the appliance.

7. Ventilation – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, or similar surface that may block any ventilation openings.
8. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
9. Power Sources – The appliance should be connected to a power supply only of the type described in the Operation Instructions or as marked on the appliance and it shall remain readily operable. The mains plug is used as the disconnect device. To be completely disconnected from the power input, the mains plug of the appliance must be disconnected from the mains completely. The building installation shall be regarded as providing protection in accordance with the rating of wall socket outlet.

Power cord protection – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed up or against them. Pay particular attention to cords at plugs, convenience receptacles and the point where they exit from the appliance. The mains plug should not be obstructed or should be easily accessed during intended use.
10. Attachments and Accessories – Use only attachments/ accessories specified by the

Before Using the Speaker

manufacturer.

12. Handling – The appliance should be transported with the cart, stand, tripod, bracket, or table specified by manufacturer, or sold with the apparatus. When a cart is used, pay caution when moving the cart/appliance combination to avoid injury from tip-over.
13. Non-use Periods – Unplug the appliance during lighting storms or when unused for long periods of time.
14. Damage Requiring Service – The appliance should be serviced by qualified service personnel when:
 - a) The power supply cord or the plug has been damaged; or
 - b) Objects have fallen or liquid has been spilled into the appliance or
 - c) The appliance has been exposed to rain; or
 - d) The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - e) The appliance has been dropped or the enclosure is damaged.
14. Servicing – The user shall not attempt to service the appliance beyond that described in the Operation Instructions. All other servicing should be referred to qualified service personnel.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.