

RHYTHM WIRELESS

SOUND ACTIVATED **LIGHT UP** HEADPHONES

USER'S MANUAL



ITEM: V50001BT

Important Safety Precautions

When using the Rhythm Wireless Headphones, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR HEADPHONES.
2. Do not use your headphones near water. Clean using a soft cloth or paper towel.
3. Do not place your headphones on any wet surfaces.
4. Do not allow children or the infirm to play with your headphones without adult supervision.
5. Do not expose your headphones to excessive heat, flames or fire.
6. Always press all buttons or switches carefully. Do not manhandle your headphones.
7. Do not use in extremely dry environments, as this can lead to static discharge during usage.
8. Do not expose your headphones to temperatures above 40°C. Keep out of direct sunlight.
9. Do not attempt to repair this product yourself. Contact a qualified service center if your headphones are in need of service.
10. Do not drop, puncture or expose your headphones to excessive trauma.
11. Your headphones are not intended for commercial use.
12. Do not place near objects that generate a strong magnetic field.
13. Unplug your headphones when not in use for long periods of time or during lightning storms.



CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing Rhythm Wireless Sound Activated Light Up Headphones. You can use your headphones with most smartphones and Bluetooth devices to stream music. In addition, your headphones can light up, with its lights activated by the sound of the music playing. In order to get the best results, please read this manual first before using your headphones.

Package Contents

- Rhythm Wireless Sound Activated Light Up Headphones, item V50001BT
- USB Charging Cable
- 3.5mm Aux Cable
- User's Manual with Warranty Information

Specifications

Bluetooth Range: Up to 33 feet (10 meters)

Charge Voltage: 5V 800mA

 
Battery Type: Lithium Ion Battery

Charge Time: Approximately 1-2 Hours

Playback Time: Up to 4 Hours at 50% Volume (Headphones+ Lighting together)


A Quick Look at Your Device

LEFT HEADPHONE

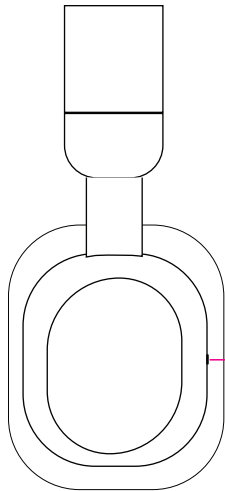

Lighting
Control
Switch

 RIGHT HEADPHONE

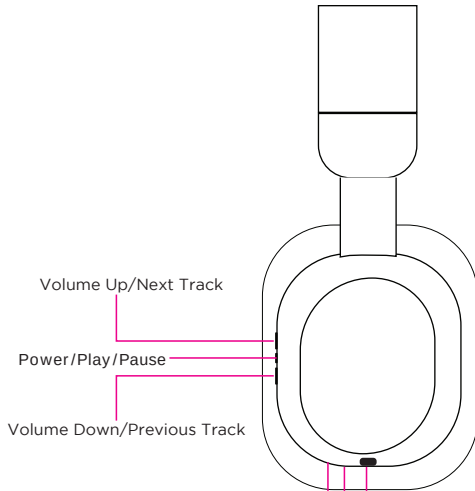

Volume Up/Next Track

Power/Play/Pause

 
Volume Down/Previous Track

Charging Port


LED Indicator Light

Auxiliary Input Port


Charging Your Headphones

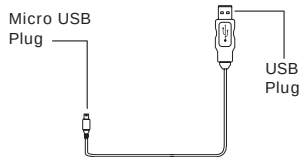

 
1. The included USB charging cable has a Micro USB plug and a standard USB plug.



 2. Insert the USB charging cable's Micro USB plug into the charging port on your headphones.



 3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable USB charging adapter.



● (red) = Charging

 
○ (off) = Charging Complete

4. The LED indicator light turns red while your headphones are charging. It turns off once charging is complete.

Charging takes 1-2 hours. Unplug when charging is complete.

Important: To avoid a complete discharge of the battery, charge your headphones at least once every six months.

Pairing Your Headphones with a Smartphone

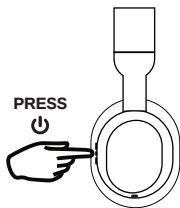


1. Press and hold the power button for approximately 3-4 seconds to power on your headphones.

Pairing Mode
Blue & Red Flashing LED



 2. The LED indicator light will alternately turn blue and red to indicate that your headphones are in pairing mode.

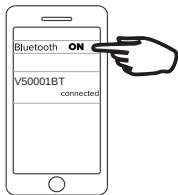

3. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "V50001BT".

 
Paired
Blue



4. The LED indicator lights will stop flashing and remain blue to indicate that your headphones are paired with your phone. Note that the light may blink slowly anytime music is playing.


Using Your Headphones

Power Button



1. Press and hold the power button to power on or power off your headphones.

 Play/Pause




2. Press the play/pause button to play a track. Press it again to pause a track.

Previous Track (press)



 Volume Down (press & hold)




3. Press the volume down/previous track button to advance to the last track in a playlist. Press and hold it to lower the volume.



Next Track (press)



 
Volume Up (press & hold)



4. Press the volume up/next track button to advance to the next track in a playlist. Press and hold it to increase the volume.



 Lighting Control Switch (on/off)



5. Slide the lighting control switch to turn on or turn off your headphone's lights. When the lights are on, they will flash in rhythm with the music that is playing.



To use your headphones with devices that are not Bluetooth enabled, plug one end of a standard 3.5mm audio cable into the Auxiliary Port on your headphones. Plug the other end into the headphone jack on your audio device.

Maintenance and Care

- Before using your headphones, inspect the ports to make sure that they are clear of dust and debris before charging or inserting an AUX cable.
- Use a soft cloth to clean your headphones. Never use any harsh chemicals or detergents. Make sure your headphones are dry before charging.
- When your headphones are not in use, they should be stored in a cool, dry place.
- Never tug or yank on the USB charging cable while it is connected to your headphones. Connect and disconnect all cables as carefully as possible.
- Never expose your headphones to high temperatures, extreme cold, high humidity or excessive moisture or water.
- Please recycle or dispose of your headphones properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your headphones for further information.



TRY ME Light Up Button

Your packaging comes with a "TRY ME" function. You will see a " TRY ME" button on the front of the box. Switch the "TRY ME" button to activate the packaging's lights.

TRY ME



**FLIP SWITCH
& LIGHT UP**

FCC Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

Vivitar One Year Warranty (continued)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.



VIVITAR®

© 2020 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.