


PRINT ARTWORK ON DIRECTLY ON PAPER.
DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 6.46”W x 5.5” H

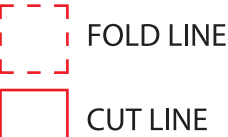

USER
MANUAL
MODEL: IJ10313-DG



•YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY GIANT" SPEAKER EARBUD. This product provides a high quality bluetooth listening experience. Before using this product, carefully read this manual to in order to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

IJOY GIANT SPEAKER EARBUD x 1
2 in 1 Cable(Charging & Aux function) x 1
User Manual x 1

•PRODUCT SPECIFICATIONS

- OUTPUT POWER: 3W
- FREQUENCY RESPONSE:100-18000HZ
- SNR: $\geq$ 80DB
- THD: $\leq$ 10%
- BATTERY:BUILT-IN 500 MAH RECHARGEABLE BATTERY
- POWER SUPPLIED:POWER ADAPTER 5.0V/1A
- LOUDSPEAKER:2 INCH X 1(EXTERNAL DIAMETER 50.8MM)
- MAGNETIC RESISTANT 3 OHMS.

GIANT SPEAKER
EARBUD

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUEST USA CORP. is under license. Other trademarks and trade names are those of their respective owners.

QUEST USA CORP.
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of QUEST USA CORP. All other trademarks and trade names are property of their respective owners. Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA CORP.

Made in China.

•DEVICE FEATURES

- Product dimensions: 3.94"H x 8.74"W x 3.54"D
- Bluetooth wireless stream music from any Bluetooth-enabled devices such as smartphone.
- Built-in MP3 digital decoder for decoding and playing MP3 files, bringing you the perfect sound quality.
- Includes external TF card and USB socket to enjoy music.
- Micro DC 5V charging, with charging cable included.
- 500 mAh rechargeable battery.
- FM digital radio (87MHZ-108MHZ),listen to the latest news and music.
- Giant Earbud Speaker is able to connect to any audio output equipment, such as smartphones/MP3/MP4/laptops, etc.
- To turn on speakers with TWS function, double press the "▶||" button. After you hear an indication voice, the two speakers will be connected with the same Bluetooth device and then play music together. Please double press the "▶||" button again to cancel the TWS function.

•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

INSTRUCTIONS

- 1.) **MODE:** Short press for switching among Bluetooth ,FM , AUX, TF Card and USB modes.
- 2.) **▶||-** Short press to play the previous music under Bluetooth, TF Card and USB modes. Short press to play previous radio station under FM mode. Long press to down the volume.
- 3.) **▶||** Short press for music play/pause. Long press for radio station automatic searching under FM mode.
To answer an incoming phone call, quickly press the **▶||** button. Hold the **▶||** button to reject the call.
To end a phone call, quickly press the **▶||** button, again.
- 4.) **+||-** Short press to play the next music under Bluetooth, TF Card and USB modes. Shortly pressing to play next radio station under FM mode. Long press to up the volume.
- 5.) **⚡** Charge Jack for built-in battery. When the DC 5V cable plugs in, the LED lights will turn on indicating that the speaker is charging.
- 6.) **ON button:** Turn the button to the up side to turn off and the lower side to turn on the speaker.
- 7.) **USB :**Supports USB and can play MP3 format music in U disk.
- 8.) **TF :**Support TF CARD and can play MP3 format music in CARD.

•BLUETOOTH CONNECTION

Turn on the speaker or press the MODE button to enter Bluetooth mode. Find and connect "IJOY GIANT" on a Bluetooth device.Speaker will connect to the last device when it turns on next time.(Note:Each speaker can be only connected to one Bluetooth device.)

AUX function:

Find out the 2 in 1 cable in accessories.Insert the cable's micro end into the charging port. Insert the cable's aux end to the aux facility and enjoy your music in the aux facility.

FM function:

Insert the cable in accessories to the charging port as an antenna,click the MODE button and switch to FM mode.Long pressing button for radio station automatic searching under FM mode.

•BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion orchemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substance. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of reach of infants and small children.

•OTHER IMPORTANT SAFETY INFORMATION

Disposal of old electronic & electronic equipment (Applicable in the European Union and other European Counties with separate collection systems) The trash can symbol (seen on the bottom) on the production indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

•WARNING

1. Do not squeeze or collide.
2. Do not disassemble or put into the fire, water, to avoid causing short circuit leakage.
3. Do not use the wireless charger in severe high temperature, wet or corrosive environment to avoid leakage of damaged circuit.
4. Do not place too close to the magnetic stripe or chip magnetic card (ID card, bank card, etc.), to avoid causing magnetic card failure.
5. Please keep the distance between the implanted, medical device (pacemakers, cochlear implants, etc.) and the wireless charger at least 20cm to avoid potential devices for the medical device.
6. Children should be watched after to ensure that they don't play with the wireless charger as toys to avoid unnecessary accidents.
7. Please keep the charger and receiver away from water and other liquids.
8. To clean the charger, ensure that the power supply is disconnected.
9. Use the ambient temperature maintained at 0-45°C.



•FCC ID STATEMENT

FCC ID: 2AJQ7-GIANT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.