

PRINT ARTWORK ON DIRECTLY ON PAPER.
DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 6.46"W x 5.5" H



ijoy

MAGNETIC SELFIE STICK

ijoy

Model: IJPDQ637-DG

USER
MANUAL



for use with
Bluetooth
enabled devices

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUEST USA CORP. is under license. Other trademarks and trade names are those of their respective owners.

Distributed by QUEST USA CORP.
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of QUEST USA CORP. All other trademarks and trade names are property of their respective owners. Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA CORP.

Made in China

•YOUR IJOY PRODUCT

 
Thank you for purchasing and using the "IJOY MAGSNAP TRIPOD & SELFIE STICK". Before using this product, carefully read this manual to in order to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

IJOY MAGSNAP SELFIE STICK & TRIPOD
User Manual x1

•PRODUCT SPECIFICATIONS


- Boundary dimension: 57 x 45 x 190mm
- Developed dimension: 720mm
- Product net weight: 127g
- Single package weight: 163g
- Material: ABS + stainless steel
- Bluetooth transmission distance: 10m

•PRODUCT BREAKDOWN

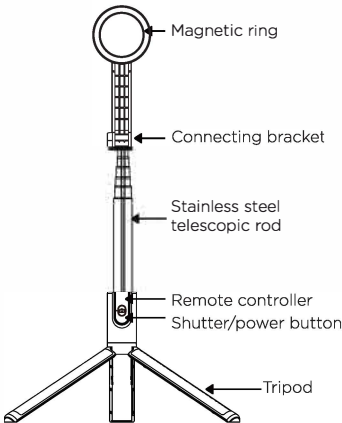


•RELEASE TRIPOD

 
Step 1:
Unfold the phone holder to be upright.

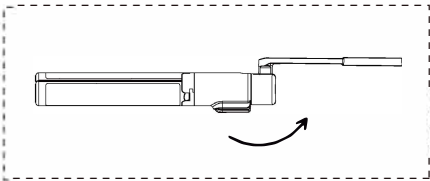

Step 2:
Hold the handle sleeve with one hand and the pull handle of the phone holder with the other hand to pull out the telescopic rod. Adjust to desired height

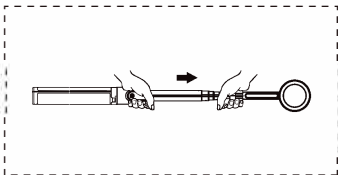


Step 3:
Pull legs to open tripod.

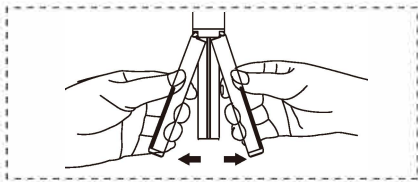


•FOLD TRIPOD

Hold the handle sleeve with one hand and push the telescopic rod back in.

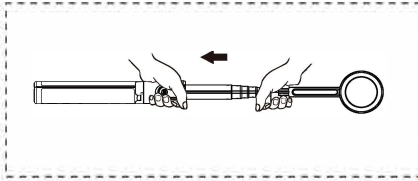

•ATTACH/DETACH REMOTE CONTROLLER & CHARGING


Bluetooth® Remote Controller
This product features a detachable Bluetooth® remote controller. To remove the remote, pull up the center rod of the tripod to create space, then slide the remote out from its slot. To reattach the remote, simply slide it back into the designated slot on the tripod until it fits securely.
Replacing the Button Battery
You can replace the button battery yourself. First, detach the Bluetooth® remote controller from the tripod. Then, carefully open the remote's battery compartment, remove the old battery, and insert a new one in its place. Ensure the battery is installed with the correct polarity before closing the compartment.

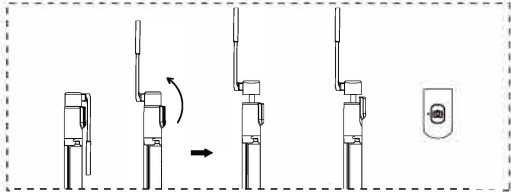

•Using the Bluetooth® Remote Controller

To power on and pair the remote:
Press and hold the shutter power button on the remote for 3 seconds until the blue indicator light starts flashing. On your smartphone or device, go to Settings Bluetooth® and make sure Bluetooth® is turned on. Look for "MAGSNAP" in the list of available devices and select it to connect. Once pairing is successful, the blue light will turn off, indicating the connection is complete.

To take photos:
While your smartphone is in camera mode, press the shutter button once to take a picture.
To power off the remote:
Press and hold the shutter/power button again for 3 seconds to turn off the Bluetooth® connection.

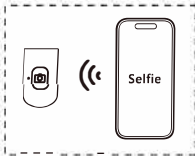

•FCC STATEMENT

FCC STATEMENT :
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

