


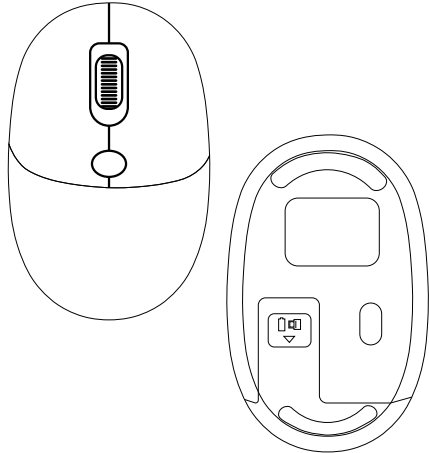

Wireless Mouse



©Disney
www.disney.com

HOW TO SET UP AND USE YOUR WIRELESS MOUSE

1. Install the Battery


Open the battery compartment and insert 1X 1.5V AA alkaline battery into the mouse (AA BATTERY NOT INCLUDED).

2. Plug in the USB Receiver

Take the small USB receiver out from inside the mouse. Plug it into a USB port on your computer.

3. Wait for the Mouse to Connect

The light on the bottom of the mouse will start flashing. Once the light stays SOLID, it means the mouse is connected and ready to use.

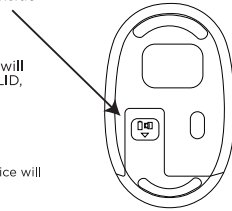

PAIRING ISSUES

If the connection code disappears, the device will need to be repaired.

Please follow these steps:

- A - Re-plug the receiver.
- B - Press the right and middle keys of mouse synchronously within 15 seconds, this will allow the code of mouse and receiver to identify each other successfully.

NOTICE

If the mouse does not function as needed, please check the status of the batteries.

OTHER SAFETY INFORMATION

Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems.) The trash can symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Always confirm the temperature is 41°Fahrenheit before you change the battery. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

WARNING

- 1. Keep the device away from fire, water and avoid submerging the product in water to avoid explosion, leakage.
- 2. No one except professional technicians should attempt to disassemble the device in order to avoid damaging the product

SPECIFICATIONS

Connector: USB

Buttons: Left Button, Scroll Button, Right Button, DPI Switch Button

DPI: 800/ 1200/ 1600

Support:
Windows 7/XP/10
Mac OS 10 / 11

Operating distance: 10M

FCC ID: 2AJQ7-MWMMUS-1
FCC ID: 2AJQ7-MWMMRCV-1



GOJOY & IJOY ARE REGISTERED TRADEMARKS OF QUEST USA CORP. ALL OTHER TRADEMARKS AND TRADE NAMES ARE PROPERTY OF THEIR RESPECTIVE OWNERS. DESIGNED BY GOJOY & IJOY IN NEW YORK. ALL RIGHTS RESERVED QUEST USA CORP.

MADE IN CHINA.

PACKAGE CONTENTS:

- 1X Mouse
- 1X USB receiver
- 1X Manual

WARNING: TO AVOID BATTERY LEAKAGE

- (1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222).
- (2) Always purchase the correct size and grade of battery most suitable for intended use.
- (3) Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries.
- (4) Clean the battery contacts and those of the device prior to battery installation.
- (5) Ensure the batteries are installed correctly with the regard topolarity (+ and -).
- (6) Always remove batteries if consumed or if product is to be left unused for a long time.