


PRINT ARTWORK ON DIRECTLY ON PAPER.
DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 6.46"W x 5.5" H

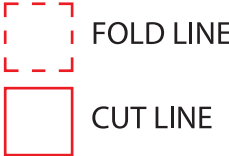

FOLD LINE

CUT LINE

ijoy

BOBA SPEAKER
WIRELESS BLUETOOTH
SPEAKER



USER
MANUAL

for use with
 enabled devices

ijoy

Distributed by Quest USA Corp.
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of Quest USA Corp. All other trademarks and trade names are property of their respective owners. Designed by GOIJOY & IJOY in New York. All rights reserved Quest USA Corp. One (1) year limited warranty. To activate your product warranty go to our website www.goijoy.com & register this product.

Made in Vietnam.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUEST USA CORP. is under license. Other trademarks and trade names are those of their respective owners.

•OPERATION INSTRUCTIONS - CHARGING

The internal Lithium-Ion battery must be fully charged before first use of the speaker. Please follow these steps to charge correctly:

Charging the Battery

1. Plug the supplied USB-C cable into the charging port-⑤.
2. Connect the other end into a USB port on a computer or USB DC 5V wall adapter (not included) in order to charge through a standard wall outlet.
3. A red indicator light will turn on during charging and turn off once fully charged.

•OPERATION INSTRUCTIONS - WIRELESS PLAYBACK CONT.

8. Press and hold the "+" button-② to increase the volume.
9. If it is not connected, the speaker will power off automatically after 5 minutes of inactivity.
10. To turn off the speaker manually, press and hold the Power Button-③ for 3 seconds.

•BATTERY INFORMATION

BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substance. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of reach of infants and small children.

WARNING!

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

•FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

•YOUR IJOY PRODUCT

Thank you for purchasing the IJOY BOBA SPEAKER – Wireless Bluetooth Speaker. This fun, portable speaker offers high-quality wireless sound in a charming design. Perfect for music on-the-go, at home, or as a unique gift.

Before using this product, carefully read this manual to ensure optimal performance. If you have any questions, please contact our customer support.


CONTENTS

- 1x Wireless Speaker
- 1x USB-C Charging Cable
- 1x User Manual

•USEFUL INFORMATION

- Battery: Rechargeable Li-ion 600mAh
- Wireless Capability: Up to 33 ft range
- Bluetooth Version: 5.3
- Speaker Diameter: 52mm
- Speaker Output: 4Ω 5W
- Frequency: 20Hz-20KHz
- Sensitivity: 77±3dB
- Model: IJ0579-DG
- FCC ID: 2AJQ7BOBA

ID DIAGRAM (BACK)

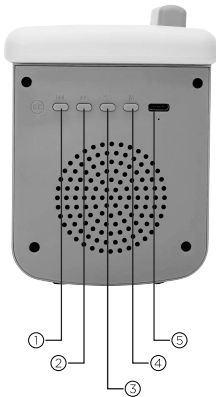

- ① - Previous Button & Volume DOWN (-)
- ② - Next Button & Volume UP (+)
- ③ - Power Button & Play/Pause
- ④ - Mode Button
- ⑤ - USB-C Port

•OPERATION INSTRUCTIONS - WIRELESS PLAYBACK

Wireless Playback via Bluetooth®:

1. Ensure the speaker is fully charged as described above.
2. Press and hold the Power Button-③ for 3 seconds to turn on the speaker. A tone will play, signaling that it's ready to pair with your Bluetooth® device.
3. On your phone, computer, or audio source, enable Bluetooth® and look for the device name "IJOY BOBA." Once connected, another tone will confirm the pairing is complete. You can now enjoy wireless audio within a 33-foot range.
4. Press the Mode Button-④ to toggle between Bluetooth® and FM radio modes. For better FM reception, connect a USB-C cable (not included) as an antenna. Double-Click the "-" or "+" buttons (① or ② buttons) to scan for radio stations.
5. Tap the "-" button-① to go to the previous track in Bluetooth® mode, or to scroll up through stations in FM mode.
6. Press and hold the "-" button-① to decrease the volume.
7. Tap the "+" button-② to skip to the next track in Bluetooth® mode, or to scroll down through stations in FM mode.

•OPERATION INSTRUCTIONS - TWS MODE

In order to operate in TWS MODE (TRUE WIRELESS MODE) please follow these steps:

TURNING ON TWS MODE:

1. Power ON both speakers.
2. Before connecting to Bluetooth®, press and hold the Mode Button-④ on one speaker for 3 seconds until you hear a voice prompt indicating the two speakers are paired.

3. Connect your phone via Bluetooth® to one of the speakers. You can now enjoy stereo music playback from both speakers.

TURNING OFF TWS MODE:

1. Disconnect your phone from Bluetooth®.

2. Press and hold the Mode button-④ on one speaker for 1 second until you hear a voice prompt confirming that TWS has been disconnected.

PHONE CALL FUNCTIONS:

1. To answer an incoming call, quickly press the ►|| button-③.
2. To reject a call, press the ►|| button-③ twice.
3. To end a call, press the ►|| button-③ again.

•IMPORTANT SAFETY INFORMATION

Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems.) The trash can symbol (seen on bottom right) on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.



•FCC WARNING (CONTINUED)

The device has been evaluated to meet general RF exposure statement. The device can be used in portable exposure condition without restriction

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

THIS IS NOT A TOY. PLEASE KEEP AWAY FROM SMALL CHILDREN.

PLEASE KEEP THE UNIT AWAY FROM WATER AND HEAT.

DO NOT OVERCHARGE THE BATTERY.

DO NOT OPERATE CHARGE CASE WITH A DAMAGED CABLE.