


FRONT

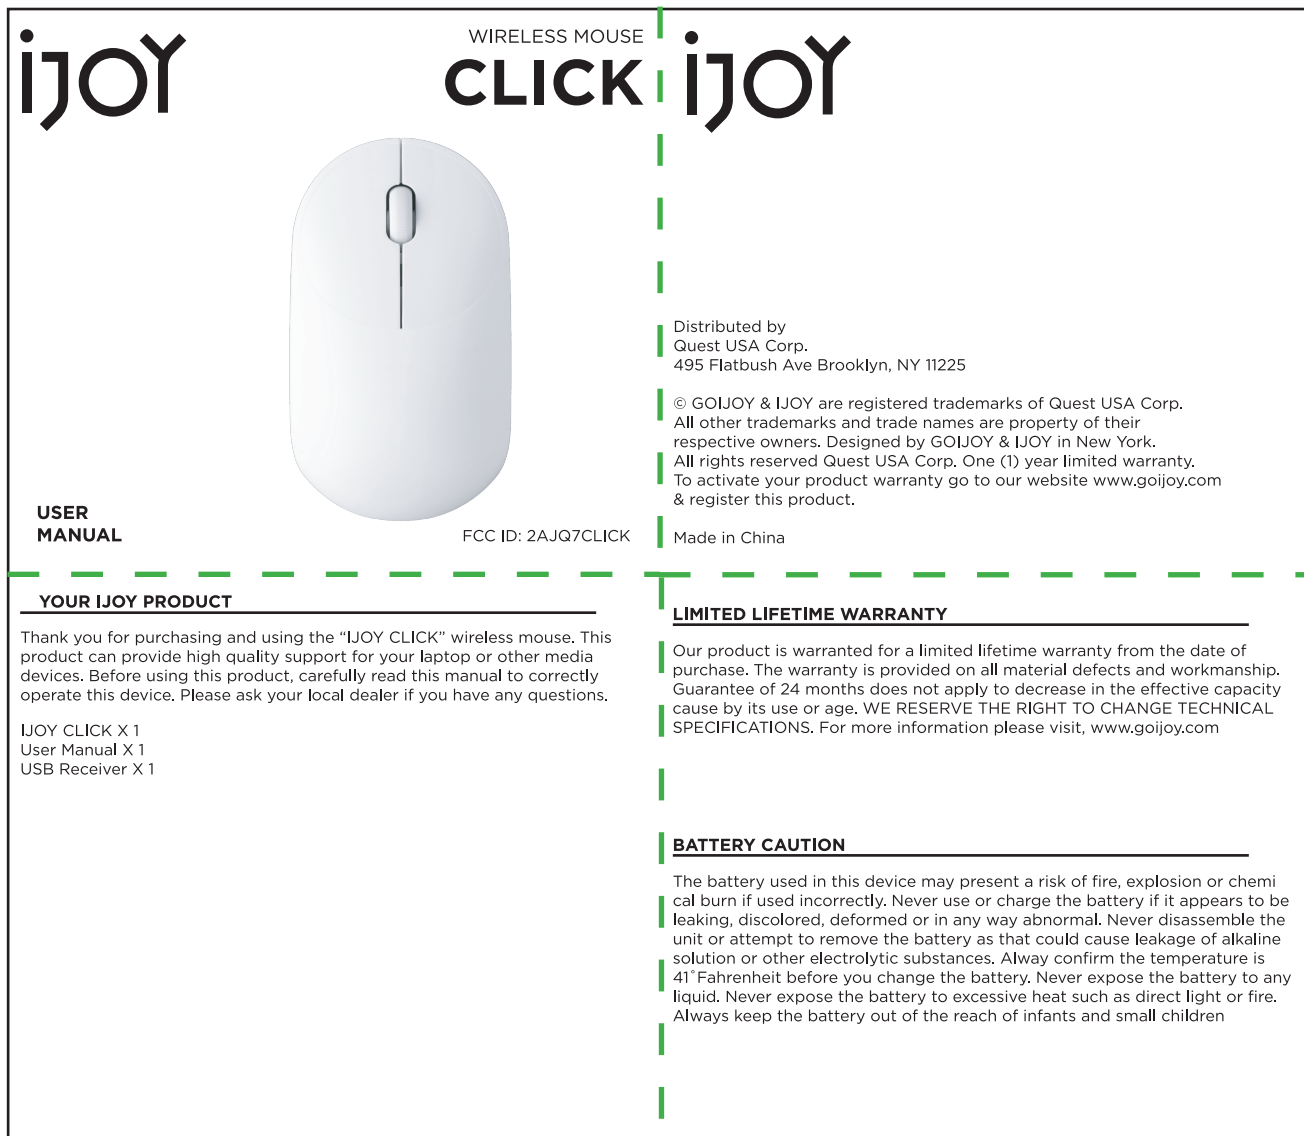

BACK

Mouse Type: Wireless Mouse
Switch Life: 2 million times
Mouse Weight :61g
Product Dimension: 114.7*65.6*33mm
Support System :Win XP/Win7/Win8/Win10
Power Supply: 1AA battery(excluded)

1. Remove CLICK's back cover. Take out the USB receiver inside the battery compartment.
2. Install 1 AA battery (not included).
3. Close the battery cover and switch the ON/OFF button to the "ON" side.
4. Plug the USB receiver to your computer's USB port, the wireless mouse will connect automatically.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

To avoid danger of choking, please keep cables away from babies and children. This product is not a toy. Do not treat this product as household waste. Dispose of this device properly by handing over to local collection services for recycling of electronic equipment. By ensuring that this product is properly disposed of, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, you can attempt to correct the problem by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**PLEASE FOLD ON THE GREEN LINES AND PRINT
DOUBLE SIDED. DO NOT PRINT GREEN LINES**