


PRINT ARTWORK ON DIRECTLY ON PAPER.
DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 96.4mm*115.8mm

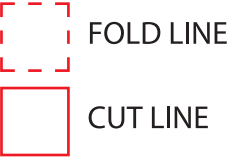

FRONT

BACK

iJOY

TRANSLUCENT
WIRELESS KEYBOARD

iJOY



QUEST USA CORP.
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of QUEST USA CORP.
All other trademarks and trade names are property of their
respective owners.
Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA
CORP.

Made in China.

USER
MANUAL

•YOUR IJOY PRODUCT

Thank you for purchasing and using the LED "IJOY KEYBOARD". Before
using this product, carefully read this manual to in order to operate at
maximum benefit. Please ask your local dealer or call us if you have any
questions.

IJOY KEYBOARD x 1
User Manual x 1

•PRODUCT SPECIFICATIONS

- Wireless Distance: 10m/32.8ft.
- Working Current: 6 mA
- Working Voltage: 3V
- Battery Requirement: 2 x AAA alkaline battery(Not Included)
- Model: IJ10389-FB; IJ10390-FB
- With a USB A receiver Without LED light
- System switching method:
FN+A switches to MAC system
FN+S switches to WIN system

•FCC ID STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the
following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference
that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party
responsible for compliance could void the user's authority to operate the
equipment.


NOTE: This equipment has been tested and found to comply with the limits for
a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are
designed to provide reasonable protection against harmful interference in a
residential installation. This equipment generates uses and can radiate radio
frequency energy and, if not installed and used in accordance with the
instructions, may cause harmful interference to radio communications. However,
there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television
reception, which can be determined by turning the equipment off and on, the
user is encouraged to try to correct the interference by one or more of the
following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the
equipment into an outlet on a circuit different from that to which the receiver is
connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The
device can be used in portable exposure condition without restriction.

•CONNECTING THE WIRELESS KEYBOARDS

- Put 2 x AAA batteries into the battery compartment on the back
(not included).
- Turn the back switch to "ON".
- Plug the attached USB A receiver into a USB port on your
computer to connect your keyboard.

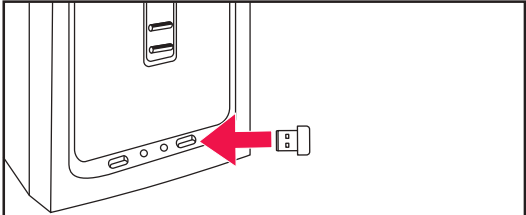

Plug the attached USB A receiver into a USB port on your
computer to connect your keyboard.

•NOTES

- While connected, the keyboard will enter standby mode without any
operation, and after 3 minutes without operation it will enter the
Deep Sleep Mode - Press any key to wake it up immediately.
- While not connected, keyboard will enter Deep Sleep Mode in
3 minutes - Press any key to wake it up.

•CAUTION

- This is not a toy. Please keep away from small children.
- Please keep the unit away from water and heat.

•OTHER IMPORTANT SAFETY INFORMATION

Disposal of old electronic & electronic equipment (Applicable in the
European Union and other European Counties with separate collection
systems) The trash can symbol (seen on the bottom) on the
production indicates that this product shall not be treated as
household waste. Instead it shall be handed over to the applicable
collection point for recycling of electronic equipment. By ensuring this
product is disposed of correctly, you will help prevent potential
negative consequences for the environment and human health, which
could otherwise be caused by inappropriate waste handling. For more
detailed information about this product, please contact your local
household waste disposal service or the shop where you purchased
this item.

 WARNING:TO AVOID BATTERY LEAKAGE

- 1)Be sure to insert the battery correctly,and always
follow the toy/game and battery manufacturers' instructions.
- 2)Always remove a weak or dead battery from the product.
- 3)Remove the battery if the product is left unused for a long
period of time.

FCC ID: 2AJQ7KEYBOARD
FCC ID: 2AJQ7DONGLE

