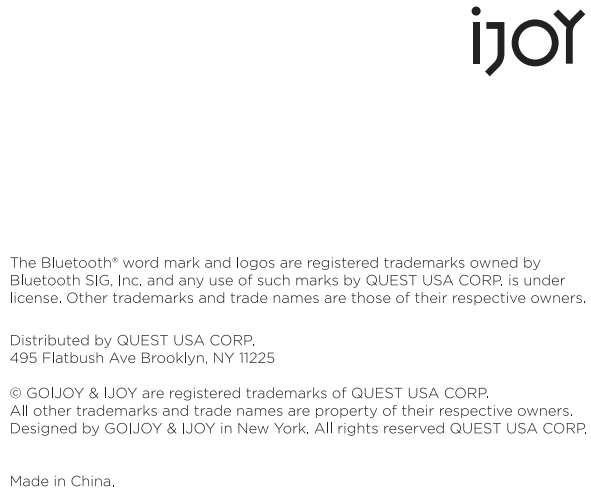


DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 6.46"W x 5.5" H

 CUT LINE

Thank you for purchasing the IJOY LUMA BASS - Wireless Bluetooth® Speaker. This compact, stylish speaker delivers high-quality sound and multiple features including Bluetooth®, radio, TWS stereo mode, and RGB lighting effects.

CONTENTS
1x Wireless Speaker
1x USB-C Charging Cable
1x Aux Cable
1x User Manual

- Battery: 3.7V 800mAh / 2.96Wh
- Charging Indicator: Red light
- Bluetooth® Indicator: Blue light
- RGB Light: 5 lights total
- Speaker Unit: 4Q5W*1 outer magnet 1.25 terminals
- Specific Functions: Bluetooth / Radio / TWS
- Output Power: 5W
- Sensitivity: Not listed
- Power Saving Mode: Automatic shut off after 5 minutes (no connection) or 20 minutes (pause mode)

Diagram Labels:

- ①** - Previous Track / Decrease Volume
- ②** - Power On-Off / Play-Pause / TWS Sync
- ③** - Next Track / Increase Volume
- ④** - Bluetooth / FM switch / RGB Mode Change
- ⑤** - AUX Output
- ⑥** - USB-C Charging Port
- ⑦** - Charging Light Indicator

The diagram shows the **FRONT** view of the speaker with three drivers and the **SIDE** view with the control panel. The side panel features a vertical row of controls corresponding to the numbered list: ① (Previous Track / Decrease Volume), ② (Power On-Off / Play-Pause / TWS Sync), ③ (Next Track / Increase Volume), ④ (Bluetooth / FM switch / RGB Mode Change), ⑤ (AUX Output), ⑥ (USB-C Charging Port), and ⑦ (Charging Light Indicator).

1. Plug the USB-C cable into the charging port-⑥
2. Connect the other end to a USB port on a computer or USB DC 5V wall adapter (not included).
3. The red indicator light will stay on while charging and turn off when fully charged-⑦

1. Fully charge the speaker as described above.
2. Press and hold the Power Button for 3 seconds. A tone will signal the power is ON.
3. On your phone or other Bluetooth device, enable Bluetooth® and select "IJOY LUMA BASS" in order to connect to your speaker.

1. Quickly Press the Play/Pause Button-②

1. Press and Hold VOL+ Button-③ to increase volume.
2. Press and Hold VOL- Button-① to decrease volume

1. Quickly Press VOL+ Button-③ for the next track.
2. Quickly Press VOL- Button-① for the previous track.

1. Power on both speakers.

2. Double-click the Play/Pause button-② on either speaker to enter pairing mode.

3. A prompt sound will confirm the TWS connection.

1. Double-click Play/Pause button-②again.

PROBLEM	SOLUTION
Low Battery Alert	• < 3.6V = Beeping every 20 seconds • <3.4V = Shutdown with Prompt Sound
Bluetooth Indicator Light	• Flashes on Startup • Steady when connected • Slow Blink when playing music
RGB Lamp	• Color Gradient follows rhythm of music when playing.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for


1. Press and Hold the Mode Button-④ to toggle between FM and Bluetooth.
2. Double-click Play/Pause Button-② in FM mode to auto-search for stations.

1. Quickly press the Mode Button-④ to toggle through 5 RGB modes including seven-color gradient and white light mode)

1. In Bluetooth mode, the device will automatically shut down after 5 minutes without connection.

2. In pause mode, the device will automatically shut down after 20 minutes without playing music.

Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems.) The trash can symbol (seen on bottom right) on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

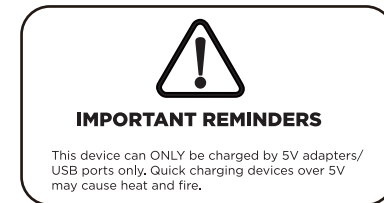

The device has been evaluated to meet general RF exposure statement.
The device can be used in portable exposure condition without restriction

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS IS NOT A TOY.

KEEP AWAY FROM SMALL CHILDREN.

DO NOT OPEN OR MODIFY THE BATTERY.

DO NOT OPERATE CHARGER WITH A DAMAGED CABLE.