

PRINT ARTWORK ON DIRECTLY ON PAPER.
DO NOT PRINT RED FOLD AND CUT LINES. OPEN USER MANUAL DIMENSIONS: 6.46"W x 5.5" H



FOLD LINE



CUT LINE

FRONT

BACK

ijoy

5000 MAH POWER BANK
MAGNETIC POWER BANK
Model: IJ10191-FB



USER
MANUAL

ijoy

Distributed by QUEST USA CORP.
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of QUEST USA CORP.
All other trademarks and trade names are property of their
respective owners.
Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA
CORP.

Made in China.

•YOUR IJOY PRODUCT

Thank you for purchasing and using the 5000mAh "IJOY MAGNETIC
POWER BANK". This device can provide high quality charging for
any phone or usb charged multimedia device. Before using this
product, carefully read this manual to correctly operate this device.
Please ask your local dealer if you have any questions.

Magnetic Wireless Power Bank x 1
Charging Cable x 1
User Manual x 1

Magnetic Feature Compatible with:
iPhone® 15 / PRO / PRO MAX / PLUS
iPhone® 14 / PRO / PRO MAX / PLUS
iPhone® 13 / PRO / PRO MAX / MINI
iPhone® 12 / PRO / PRO MAX / MINI

•PRODUCT SPECIFICATIONS

- CAPACITY: 5000MAH
- RATED ENERGY: 18.5WH/3.7V
- TYPE-A OUTPUT: 5V=2A
- WIRELESS OUTPUT: 5W

•BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion
or chemical burn if used incorrectly. Never use or charge the
battery if it appears to be leaking, discolored, deformed or in any
way abnormal. Never disassemble the unit or attempt to remove
the battery as that could cause leakage of alkaline solution or
other electrolytic substances. Never expose the battery to any
liquid. Never expose the battery to excessive heat such as direct
light or fire. Always keep the battery out of the reach of infants
and small children.

•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery
has died, you should follow the disposal instructions listed here.
Never dispose of used batteries/electronics with ordinary solid
wastes. Always dispose of used batteries/electronics in accordance
with the prevailing community regulations that apply to the disposal
of batteries/electronics. If there are no local regulations concerning
battery/electronics disposal, please dispose of the device in a waste
bin for electronic devices. Many electronics retailers now recycle
batteries and other electronic components at no charge.

•FEATURES

- Compatible with most phone devices and digital products with a
USB port.
- Built-in protection ICs.
- Intelligent power management solutions for steadiness and high
efficiency.

•TIPS

- Please make sure to charge the power bank once every 3 months.
- Please be aware when the power bank is used, it may feel
overheated. This production should not reach above 140°
Fahrenheit (60° Celsius).
- Keep power bank dry and away from water, do not wipe with
chemical cleaners.
- Please recycle the power when done using.

•IMPORTANT

- Keep away from children.
- Do not crush, self-dismantle, stab, wet, dampen or squeeze power
bank.
- Do not place power bank in high temperature environments.
- Do not charge a device that is not compatible with the power
bank, it may result in damage or fire.

•FCC ID STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two
conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause
undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for
compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B
digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide
reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and
used in accordance with the instructions, may cause harmful interference to radio
communications. However, there is no guarantee that interference will not occur in a particular
installation. If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to try to
correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is
connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device
can be used in portable exposure condition without restriction.


•INSTRUCTIONS

CHARGING THE POWER BANK

- METHOD 1: Connect input of the power bank into outlet using Type-C
cable (see example 1).
- METHOD 2: Connect input of the power bank to a computer using
Type-C cable (see example 2).

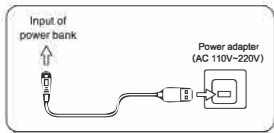


example 1

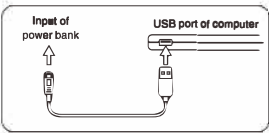 

example 2

CHARGING YOUR DEVICE

 - Connect your device to the outlet of the power bank using a cable
that works for your device (see photo below).



•OTHER IMPORTANT SAFETY INFORMATION

Disposal of old electronic & electronic equipment (Applicable in the
European Union and other European Counties with separate collection
systems) The trash can symbol (seen on the bottom) on the
production indicates that this product shall not be treated as
household waste. Instead it shall be handed over to the applicable
collection point for recycling of electronic equipment. By ensuring this
product is disposed of correctly, you will help prevent potential
negative consequences for the environment and human health, which
could otherwise be caused by inappropriate waste handling. For more
detailed information about this product, please contact your local
household waste disposal service or the shop where you purchased
this item.



IMPORTANT REMINDERS

This device can ONLY be charged by 5V adapters/
USB ports only. Quick charging devices over 5V
may cause heat and fire.

