


Disney
TIM BURTON'S
THE NIGHTMARE BEFORE CHRISTMAS

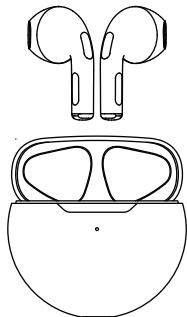

TRUE WIRELESS EARBUDS USER MANUAL

Model No:
DS20827-DG

©Disney
www.disney.com

for use with
 **Bluetooth**
enabled devices

• INCLUDES

- True Wireless Earbuds X 1
- Charging Travel Case X 1
- 11.8" Length USB-A to USB-C Charging Cable X 1
- Instruction Manual X 1

• SPECIFICATIONS

BT Version: V5.4
Support: HFP,HSP,A2DP,AVRCP
Speaker diameter: 10mm
Earbuds battery: 25mAh*2
Charging Case battery:150 mAh
Transmission Distance:10 meters(with no interference)
Frequency Range: 20Hz -20KHz
Charging Voltage: 5V
Earbuds charge time: about 1 hour
Charging case charge time: about 1.5 hours
Earbud playtime: about 2 hours per charge at full volume,
charging case can fully charge the earbuds 2 times.

• IMPORTANT REMINDERS



This device can ONLY be charger by 5V adapter/
USB ports only. Quick charging devices over 5V
may cause heat and fire.


• CHARGING INSTRUCTIONS

CHARGING THE CASE

Connect the USB-C charging cable to the case's USB
port and plug the other end into a power source.
While charging, the orange indicator light will blink
once every 2 seconds.
When fully charged, the light will stay solid orange.

CHARGING THE EARBUDS

Place both earbuds in the charging case, making sure
the contacts align with the charging pins.
While charging, the white indicator LED on the case will
turn on.
When the earbuds are fully charged, the light will turn off.

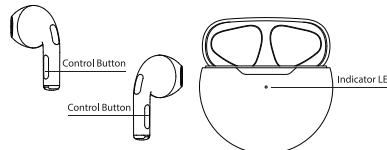

• INSTRUCTIONS

POWER ON

Remove the earbuds from the charging case — they
will turn on automatically.
Or, press and hold the control button on both earbuds
for 5 seconds to turn them on.

POWER OFF

Place the earbuds back into the charging case to
automatically power them off.
Or, press and hold the control button on both earbuds
for 5 seconds to turn them off manually.

PAIRING AND CONNECTION

1. Open the charging case and take out the earbuds.
The left and right earbuds will pair automatically.
2. On your mobile device, open Bluetooth settings and
turn Bluetooth on. Select "Disney earbuds" from the
list of available devices. You'll hear a prompt sound
when the connection is successful.

3. After the first connection, the earbuds will
remember your device and automatically reconnect
when powered on.

Note: If the earbuds are not connected within 5
minutes, pairing mode will stop. If disconnected for
more than 5 minutes, the earbuds will turn off
automatically.

PLAY/PAUSE

To play or pause music, press the control button on
either earbud once.

SWITCH SONGS

To play the previous track, double press the control
button on the left earbud.
To skip to the next track, double press the control
button on the right earbud.

VOLUME CONTROL

To lower the volume, triple press the control button
on the left earbud.
To raise the volume, triple press the control button on
the right earbud.

ANSWERING CALLS

To answer an incoming call, press the control button
on either earbud once.

HANGING UP A CALL

To end a call, press the control button on either
earbud once.

REJECTING A CALL

To reject an incoming call, press and hold the control
button on either earbud for 2 seconds.

START VOICE ASSISTANT

To activate Siri or Google Assistant, press and hold
the control button on either earbud for 2 seconds.

• WARNINGS

- Do not use this unit for anything other than its
intended use.
- Do not puncture, throw, drop, bend, or modify this
product.
- Do not throw this product into fire or water.
- Do not short-circuit the battery with any metal or
metallic objects.
- Do not expose this product to corrosive liquids such
as saltwater.
- Do not operate the unit if it has been wet or moist to
prevent electric shock and/or injury to yourself and
damage to the unit.
- Do not allow children to play with this product as it is
not a toy, and may present choking hazards.
- Avoid leaving your device in direct sunlight, such as
on the dashboard, console, or seat of a vehicle.
- Do not leave your device, or use your device, in any
area where the temperature is likely to drop below
32°F, or may exceed 140°F, such as inside a closed
vehicle on a hot day.
- Repairs to electrical equipment should only be
performed by a qualified electrician. Improper repairs
may place the user at serious risk.
- Protect your hearing by always listening at a safe
level. Prolonged use at elevated volumes may affect
your hearing capacity and could result in hearing loss.
- Use the earbuds with this charging case only.
- To avoid damage to the charging case, please only
use a USB 5V/1A or higher charger.
- In order to ensure the battery life, charge normally at
least once a month.

• FCC

FCC ID: 2AJQ7ROUNDTWS

This device complies with Part 15 of the FCC Rules
Operation is subject to the following two conditions: (1) this
device may not cause harmful interference, and (2) this
device must accept any interference received, including
interference that may cause undesired operation.

Note: This equipment has been tested and found to comply
with the limits for a Class B digital device, pursuant to part
15 of the FCC rules. These limits are designed to provide
reasonable protection against harmful interference in a
residential installation. This equipment generates, uses and
can radiate radio frequency energy and, if not installed and
used in accordance with the instructions, may cause
harmful interference to radio communications. However,
there is no guarantee that interference will not occur in a
particular installation.
If this equipment does cause harmful interference to radio
or television reception, which can be determined by turning
the equipment off and on, the user is encouraged to try to
correct the interference by one or more of the following
measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and
receiver.
- Connect the equipment into an outlet on a different
circuit from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician
for help.

RF warning statement:
The device has been evaluated to meet general RF exposure
requirement. The device can be used in portable exposure
condition without restriction.

Warning: Changes or modifications not expressly
approved by the party responsible for compliance could
void the user's authority to operate the equipment.

• BATTERY CAUTION

The battery used in this device may present a risk of fire,
explosion or chemical burn if used incorrectly. Never use or
charge the battery if it appears to be leaking, discolored,
deformed or in any way abnormal. Never disassemble the
unit or attempt to remove the battery as that could cause
eakage of alkaline solution or other electrolytic substances.
Never expose the battery to any liquid. Never expose the
battery to excessive heat such as direct light or fire. Always
keep the battery out of the reach of infants and small
children.

• BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the
battery has died, you should follow the disposal instructions
isted here. Never dispose of used batteries/electronics with
ordinary solid wastes. Always dispose of used
batteries/electronics in accordance with the prevailing
community regulations that apply to the disposal of
batteries/electronics. If there are no local regulations
concerning battery/electronics disposal, please dispose of
the device in a waste bin for electronic devices. Many
electronics retailers now recycle batteries and other
electronic components at no charge.



• OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of choking, please keep cables away from
babies and children.
This product is not a toy. Do not treat this product as
household waste. Dispose of this device properly by
handing it over to local collection services for recycling of
electronic equipment. By ensuring that this product is
properly disposed of, you will help prevent potential
negative consequences for the environment and human
health, which could otherwise be caused by inappropriate
waste handling. For more detailed information about this
product, please contact your local household waste
disposal service or the shop where you purchased this
tem. Keep this product and its accessories away from
excessive heat. Do not operate this device with a damaged
cable. Do not operate this device after it has malfunctioned
or has been damaged in any manner. Only use a soft cloth
to clean the speaker. Do not use harsh abrasives or
chemicals to clean the speaker. Do not use sharp objects
on the speaker. To ensure that the speaker is waterproof,
remove all connected cables and make sure the cap is
tightly closed. Do not expose the speaker to any liquid
while it is charging. Doing so may damage the speaker, its
accessories, and/or the power source.

Quest USA CORP., 495 Flatbush Ave. Brooklyn, NY 11225
The Bluetooth® word mark and logos are registered
trademarks owned by Bluetooth SIG, Inc. and any use of
such marks by QUEST USA CORP. is under license. Other
trademarks and trade names are those of their respective
owners. All rights reserved iJoy/Quest USA Corp.,
Brooklyn, NY.
Made in China.