 
 


PRINT ARTWORK ON DIRECTLY ON PAPER.
DO NOT PRINT RED FOLD AND CUT LINES.

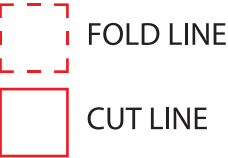

Disney

True Wireless Earbuds & Portable Charging Case

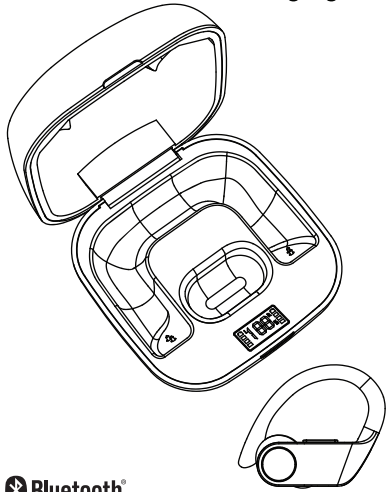

©Disney
www.disney.com

Model# DS20884-KH
USER MANUAL

DISTRIBUTED BY: QUEST USA CORP.
495 FLATBUSH AVE BROOKLYN, NY 11225

ijoy® GOJOY & IJOY ARE REGISTERED TRADEMARKS OF QUEST USA CORP. ALL OTHER TRADEMARKS AND TRADE NAMES ARE PROPERTY OF THEIR RESPECTIVE OWNERS. DESIGNED BY GOJOY & IJOY IN NEW YORK. ALL RIGHTS RESERVED QUEST USA CORP.

THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC. AND ANY USE OF SUCH MARKS BY QUEST USA CORP. IS UNDER LICENSE. ALL PICTURES SHOWN ARE FOR ILLUSTRATION PURPOSE ONLY. ACTUAL PRODUCT MAY VARY DUE TO PRODUCT ENHANCEMENT.

MADE IN CHINA.

•PAIRING INSTRUCTIONS

1. Remove both earbuds from the charging case. They will power on and pair with each other automatically.
2. Open the Bluetooth settings on your device.
3. Select "Disney Earbuds" from the available list.
4. When connected, a prompt sound will confirm pairing.
5. After first pairing, the earbuds will auto-connect to the last paired device when turned on.

Note: If no device connects within 5 minutes, pairing mode will end and the earbuds will power off.

•CHARGING INSTRUCTIONS

To charge the case:
- Connect the USB-C cable to the case and a power source.
- The digital display will show battery level from 0% to 100%.

To charge the earbuds:
- Place both earbuds in the case, ensuring contacts align with charging thimbles.
- White LED indicator on each earbud will light up while charging and turn off when fully charged.

•IMPORTANT REMINDERS

Use only 5V USB adapters. Fast charging devices over 5V may cause overheating or fire.

Keep earbuds and case away from water, high heat, and children without supervision.

Unplug the case when fully charged or not in use for extended periods.

Do not attempt to open, disassemble, or repair the product.

•PRECAUTIONS

1. Please charge in a safe environment. When charging the earbud case, please remove the case from the USB charging cable as soon as the charging indicator displays full power. This will avoid damage by accidentally overcharging the case.

2. When playing music, please adjust the music to the appropriate volume to avoid hearing damage at high volume for a long time.

3. Try to avoid using the wireless earbuds in a place with interference sources, otherwise it may affect the unit's signal.

4. Try to avoid using the earbuds in a corrosive environment to avoid affecting the function of the headset.

Tips: When you use this Bluetooth headset to listen to music or talk, please pay attention and adjust the volume properly, so as not to affect the hearing of the user at excessive volume.

•BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.



•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.



This device can ONLY be charged by 5V adapter/ USB ports only. Quick charging devices over 5V may cause heat and fire.

•DEVICE FUNCTIONS

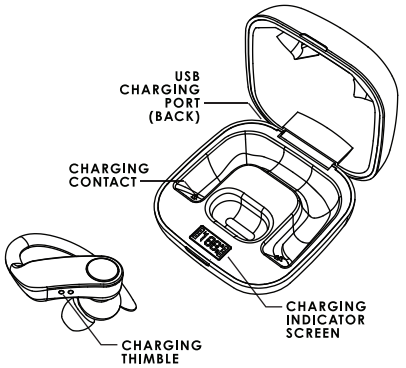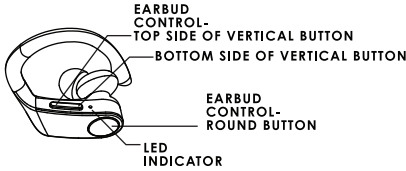

CONTENTS:
1x CHARGING CASE
2x EARBUDS, 3x SIZES (S,M,L) EARBUD CUSHIONS
1x 11.8inch/30cm CHARGING CABLE
1x MANUAL

•PRODUCT SPECIFICATIONS

Bluetooth Version: V5.4
Wireless Range: 10 meters
Battery Capacity: 30mAh (each earbud), 200mAh (charging case)
Play Time: Up to 7 hours per charge (at 50% volume), up to 20 hours total with charging case
Charging Time:
Earbuds:1 hour
Case:1.5 hours
Frequency Response: 20Hz – 20kHz
Cable: USB Type-C, 11.8 in/ 30cm
Size: H3.06 in x W3.06 in x D1.77 in

•USER INSTRUCTIONS

1. Power On:
Remove earbuds from case or press and hold the round button on both earbuds for 5 seconds.

2. Power Off:
Place earbuds back into the case or press and hold the round button for 5 seconds.

3. Play / Pause Music:
Short press the round button on either earbud.

4. Next / Previous Track:
- Press and hold top side of vertical button to skip forward.
- Press and hold bottom side to skip backward.

5. Volume Control:
- Short press top side to increase volume.
- Short press bottom side to decrease volume.

6. Answer Call:
Short press the round button on either earbud.

7. Hang Up Call:
Short press the round button during a call.

8. Reject Call:
Press and hold the round button for 3 seconds.

9. Redial Last Number:
Double press the round button on either earbud.

10. Voice Assistant (Siri / Google):
Press and hold the round button for 3 seconds.

•FCC STATEMENT

FCC ID: 2AJQ7SPORTWS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

