

USER MANUAL

ijoy

VINYL WAVES RGB LED WIRELESS SPEAKER

FCC ID: 2AJQ7VINYLWAVES
MODEL: IJ10574-DG



USER
MANUAL



ijoy

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUEST USA CORP. is under license. Other trademarks and trade names are those of their respective owners.

Jest USA CORP
35 Flatbush Ave.
Brooklyn, NY 11225

Gojoy & IJOY are registered trademarks of Quest USA Corp. All other trademarks and trade names are property of their respective owners. Assigned by GOIJOY & IJOY in New York. All rights reserved. Made in China.

•YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY VINYL WAVES SPEAKER". This product provides a beautiful ambient experience. Before using this product, carefully read this manual to in order to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

Speaker x 1
Charging Cable x 1
User Manual x 1

Indicator lights:

Charging = Red light

Bluetooth = Blue light

LED lights x8

•Battery Info

- Battery: 18650, 3.7V, 800mAh, 2.96Wh
- Auto shutdown if unused for 5 minutes in Bluetooth mode
- Low battery alert at 3.4V
- Automatic shutdown at 3.3V

•Speaker Specifications

- Speaker: 4Ω 3W outer magnet
- Modes: Bluetooth / FM Radio / White Noise
- Light Modes: 3 color modes (5050 RGB LEDs x8)

• Bluetooth® Pairing Instructions

- Hold the  button for 3 seconds to turn on the speaker.
- Press the **M** button to switch to Bluetooth mode.
- The Bluetooth® light will blink while searching.
- On your device, select IJOY VINYL WAVES to connect.
- Once connected, the light stays solid. While playing music, it blinks slowly (0.5s ON, 1s OFF).

•Button Functions

Button	Function	How to Use it
	Play/Pause	-In Bluetooth mode: short press to pause music. -In FM mode: short press to auto-search radio stations
	Next Song/ Volume Up	-Hold to skip to the next song -Short press to increase volume (in Bluetooth mode)
	Previous Song/ Volume down	-Hold to play previous song -Short press to lower volume (in Bluetooth mode)
	Switch Modes	-Short press to switch between Bluetooth, FM and White Noise modes. A sound prompt confirms the switch. -For FM, plug in a cable to use as the antenna. Use the  key to auto-search channels.
	POWER key - Turn ON/OFF - Change light modes	-Hold the 3 seconds to turn ON or OFF (prompt sound plays) -Short press to cycle through 3 lighting modes (default is white).

•Extra Features

- Power saving: Auto shutoff after 5 minutes of no Bluetooth connection.
- Low battery warning: An alarm will sound if voltage drops below 3.4V, repeating every 10 seconds.
- Antenna tip for FM: Use a cable plugged into the port to act as an antenna for better reception.

•OTHER IMPORTANT SAFETY INFORMATION

Disposal of old electrical & electronic equipment (Applicable in the European Union and other European Countries with separate collection systems.) The trash can symbol (seen on bottom right) on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.



IMPORTANT REMINDERS

This device can ONLY be charged by 5V adapters/
USB ports only. Quick charging devices over 5V
may cause heat and fire.



•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

•BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substance. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of reach of infants and small children.

•FCC ID STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.