

Digital Color Screen Mobile Phone User Manual

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5 mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

1.1 Introduction

Thank you for choose our digital color screen mobile phone. By reading these guidelines before using your mobile phone you will have an overall knowledge of this phone set and understand its simple but outstanding functions.

This phone set is designed for GSM/GPRS networks. On top of basic functions, it enables you to use name card style phone book, sound effect, clock/ alarm, agenda, calculator, games, audio player, camera (optional), video recorder (optional), sound recorder and other functions. It serves your work and leisure time. Having unique interface and perfect feature designing this phone set meets all your expectation.

Our phone set meets the GSM/GPRS standard and has the qualification from related organizations worldwide.

Our company reserves the rights modifying the content in this Instruction without pre-notify.

1.1.1 Mobile phone guideline

Switch off your mobile phone before boarding an aircraft or in hospital and any other facility where posted notices require you to do so. Mobile phone effects the electronic equipments and medication equipments. This phone set has auto switch on function, please check your alarm setting and make sure the phone set will not switch on automatically during the flight.

Certain electronic equipment may not be shielded against the RF signals from our phone, such as hearing aid, pacemakers, other medical devices, fire sensor, auto gate and others. For the satisfactory operation of the equipment and for the safety of personnel, please consult the manufacturer or local sales outlet to discuss alternatives.

Do not put hard pressure or hit on the screen. Rough handling can break the internal circuit board and the screen. The liquid from screen can dangerous human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.

Do not modify or dismantle the mobile. Unauthorized modify or dismantle will result in damaging the mobile phone.

In some cases, mobile phone has side effect to the vehicle carried electronic equipments. Please do not use mobile phone under that circumstance. Failure to observe these instructions may lead to the denial of legal right.

Do not operate mobile phone with sharp object such as needle or ball pen. Sharp object will damage mobile phone or lead to malfunction.

Please do not use mobile phone which wire is damaged. Otherwise it will dangerous the user.

Please do not place mobile phone close to magnetic objects. Mobile phone can eliminate the information from disc, credit car and other cards.

Please keep small metal objects away from mobile phone's ear phone. The speaker has magnetism and attract small metal objects which has potential to damage itself and the one who use it,

Precipitation, humidity and liquids will corrode electronic circuits. Keep the phone dry.

1.1.2 Batteries guideline

Please keep mobile phone away from fire. Fire will damage the batteries and lead to explosion.

During changing batteries, hard pressure will cause the batteries leaking, over heated, explosion and caught fire.

Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (wire line, clip) or necklace connect two terminals. Short circuit may damage the battery.

Please do not weld the battery's terminal. Welding the battery will damage it.

The battery liquid is dangerous to human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.

Do not modify or dismantle the battery. Unauthorized modify or dismantle will result in damaging the mobile battery.

Do not place batteries in or on the microwave oven or over heated places. That may damage the battery.

During charging, using or storing, if batteries temperature rise, color change, or deformed, please stop using and replace with new battery.

The battery liquid is dangerous to human eyes. Please wash eyes with water immediately and

go to hospital for further exam if the liquid is in eyes.

If the battery liquid is leaking or smelly, please remove it from fire to avoid explosion.

Please keep battery away from humidity. Humidity will cause over heat, corrosion of the batteries.

Please do not leave the battery in hot places such as in a car in summer as you will reduce the capacity and life time of the battery.

Please do not leave the battery on charger for over 24 hours

1.1.3 Charger & accessories

Please charge with dedicated voltage. Using mismatched power will damage the mobile phone and charger.

Short circuit charger is forbidden. It will cause electric shock and damage the charger.

If the power line is damaged, please do not use the charger.

Please keep the charger free from dust all the time.

Keep charger away from liquid. Spilled liquid will dangerous the charger.

If charger has close contact with liquid, take off the charger from socket immediately to prevent further damage.

Do not modify or dismantle the charger. Unauthorized modify or dismantle will result in damaging the charger or personnel.

Please do not charge in humidity place. Humidity will cause over heat, corrosion of the batteries.

Do not touch the charger, power line or socket with wet hands. Doing so may give you an electric shock or damage the phone

Do not store heavy article on top of power line or dismantle it. Doing so will cause electric shock and fire.

Unplug the charger from socket before cleaning and maintenance.

Take the terminal to unplug the charger. Pulling the power line to unplug will damage the charger and cause electric shock or fire.

1.1.4 Cleaning & maintenance

Mobile phone, batteries and charger are not water proof. Please do not use them in humidity place such as shower room. Avoiding spilled by rain.

Clean mobile phone, batteries and charger with soft fabric.

Do not use harsh chemicals, cleaning solvents or strong detergents to clean the mobile phone.

Please clean the socket regularly. Dirt will make the charger malfunction.

2 Before start

2.1 Parts names & explanation

2.1.1 Key pad description

K_MENU: Left soft key

In idle screen, press it to get into main menu.

K_CANCEL: Right soft key

In idle screen, press it to get into phonebook menu.

K-CALL1: Send

Press it to make a call, answer a call; show call history by the SIM1 Card in idle screen.

K-CALL2: Send

Press it to make a call, answer a call; show call history by the SIM2 Card in idle screen.

K_MP3: Music

Press it to get into audio player.

K_Camera : Camera key

Press it to get into camera view.

K_HUP: End

Press it to hung up a call, switch on/off mobile. Press it in edit screen to get back to idle screen.

K_STAR: Star

Input symbols, *, P and +W.

Editor interface, press it to switch to the symbol input method.

3 Basic functions

3.1 Making a call

When cellular network service provider shows on the screen, you can receive or make a call through network. The received signal strength is shown on the up left corner of the screen (maximum 5 lines—best signal condition)

The quality of network connection is affected by the environment. Moving within small scale can improve the network connection quality.

3.2 Phone book

You can save names, mobile phone number, fixed line number, work place phone number and other information by Phone book function. From Main Menu, select Phone Book or press Right soft key on idle screen to get into Phone book directly

3.3 Messages

3.3.1 SMS

4.4.1.1 Inbox

Go into Inbox to read the received messages.

4.4.1.2 Outbox

Go into outbox to read the saved messages.

4.4.1.3 Write Message

Message service centre allow you to send or receive message through mobile phone. Please confirm that the service center's number is set before use.

Go to sub menu Write New to write new message (detail see chapter 5). Press Options

Attention: some cities and regions do not support the message that is longer than 160 English letters.

4.4.1.4 Template

Save some frequent used terms to avoid typing in the same terms many times. It can be edited or deleted.

4.4.1.5 Message settings

Finish message setting before using the function

Go into Message settings menu

Profile Setting: select appropriate mode for message. Different mode has different setting for folder name, service center number, expired date, form and other features.

Common Setting: to set Reply pass

Memory Status: to show the memory status of SIM card or phone

Preferred Storage: to select to save in Phone or in SIM card

Pref. Bearer: to set the transmit method of message

Set message service center number: please contact your network service provider for

information. Select the Message service center Menu, input the service center number, press Yes to save setting

Status Report: set the status report at ON, then you will be able to see the receiving status of the messages you have sent out.

Attention: this function is only available with service provider's support

3.3.2 MMS

Write message: to add a new multi media message. Message include To, Cc, Bcc, Subject, Edit content.

3.3.3 Chat

This feature is used with the contacts chat text messages. Including two chat rooms.

3.3.4 Voice Mail Server

The voice mail messages are saved in the cellular network. To listen to the voice mail message, please dial the voice mail box number.

Edit: to add/edit the voice mail box number to speed up when using the function

Connect to Voice: to connect with the voice mail box to listen to the messages

3.3.5 Broadcast Message

Receive Mode: to switch on/off the broadcasting function

Read Message: to select the menu to access to the broadcasting message you ordered

Language: to select the language for broadcasting

Channel Setting: to select the channel for broadcasting

Attention: the broadcasting and voice mail box functions are provided by network service provider. Please contact your service provider for detail.

3.4 Call center

Your mobile phone can save each 20 records for miss calls, received calls and dialed calls.

Through this menu you can search for all history records

3.4.1 Call history

of bites have been downloaded

Reset Counter: to start counting again

3.5 Settings

This menu includes many personal setting to the phone.

3.5.1 Dual SIM Settings

You can select Four models: Dual SIM open; Only SIM1 open; Only SIM2 open; Flight mode.

Flight mode: can select among normal mode and flight mode when switch on.

3.5.2 Phone Setup

Time and Date: to set the date and time in mobile phone

Set Home City: to select a city for the time setting

Set Time/Date: to set current time and date

Set Format: to select a format to show the time, 12 hours or 24 hours

Schedule Power On/Off: to set the time that the mobile phone will be switch on/off automatically

Language: to select the language that will be used

Preferred Input Method: to select a default input method

Display Characteristic

Wallpaper: to select the wallpaper for idle screen

Screen saver :to select a screen saver for idle screen and the default time setting

Power On Display: to select 3D to display at switch on. It could be default setting or downloaded

Power Off Display: to select 3D to display at switch off. It could be default setting or downloaded

Show Date and Time: to select switch on/off the display of time and date on idle screen

Greeting Text: to select whether to display a greeting at switch on screen

Dedicated key: to set the function of direction keys in idle screen.

Auto Update Date and Time: to select switch on/off the auto update function

Misc Setting: to set the LCD backlight

3.5.3 Network Setup

Network Selection

Automatic: auto search the network which the SIM card belongs to

Manual: manual search all current available network k and do manual registration

Preferred Networks: pre save the preferred networks

GPRS Connection: the GPRS connection method

3.5.4 Security Setup

SIM Lock: Choose security setting under this Menu to avoid unauthorized usage of mobile phone or SIM Card.

PIN number setting can avoid unauthorized usage of SIM Card

If PIN number is switched off, choose ON to select PIN number protection. Next time when you switch on mobile phone, it will ask for PIN number: If PIN number is switched on, choose OFF to cancel PIN number protection. Choose Change PIN Number to set new PIN Number. Please follow the instruction to input old PIN number, new PIN number and retype new PIN number.

Attention: If PIN number has been wrongly inputted for three times, the SIM card will be locked. PUK number is needed to unlock the SIM card. PIN number and PUK number could be provided at the same time to you. If not, please contact the network service provider. The default setting put PIN number is 1234, please set your own PIN number as soon as you receive the mobile.

Phone Lock: Phone lock can avoid the unauthorized usage of your mobile phone.

Select Phone Lock to switch on the pin number protection. Next time when you switch on mobile phone, you will be asked for PIN number. Press it again to switch off the mobile phone PIN number protection

Attention: the default setting for mobile phone pin number is 1122. Please set your own mobile phone PIN number as soon as you receive the mobile.

Privacy Lock: Privacy lock can protect your personal information is not seen by others. The initial password is 0000. Open the privacy lock ,when enter to Phonebook and SMS Inbox ,you need input this password.

Auto Keypad Lock: Setting the waiting time to lock the keypad. After setting is done, the keypad will be auto locked after the setting waiting time

Press right soft key then hash key to lock keypad manually on the idle screen(only the sim card is actived).

Change Password: to change the password. It includes setting for mobile phone password and privacy lock.

Attention: partial functions need support from network service provider.

3.5.5 Restore Factory settings

To restore factory settings, please input the initial password: 1122.

3.6 Multimedia

This function includes: Camera, Image viewer ,Video recorder,Video player,Audio player, sound recorder and FM radio.

Camera Image Viewer Video Recorder Video Player Audio Player FM Radio
Sound Recorder

3.7 File manager

Explore the saved files. Support different functions depending on file format

3.8 Fun & Games

Games: On-screen instructions to enter the game can choose to start a new game , Select the game mode , view the best rankings, or through the game to help understand the gameplay.

3.9 User Profiles

User can select different mode, and can define your own modes. This set of mobile provides 6 modes: general, meeting, outdoor, indoor, and headset and Bluetooth.

3.10 Extra

Include Calculator, E-Book and Bluetooth.

3.11 Shortcuts

This mobile phone has 11 sets for shortcuts. In Main Menu select shortcuts to set up. Details as follow: select a short cut function in Short cut Menu, press left soft key to edit, select a menu, press Left soft key to confirm.

Get into Setting Menu then into Phone setting Menu, find the functional key, select any key from UP, Down, Left, Right key as the short cut key. At Idle screen, press any key from UP, Down, Left, Right key to active shortcut. Then select the right short cut to carry out the function.

Warning:

1. using the wrong type of battery,there is a danger of explosion
2. must be in accordance with the disposal of used batteries