


WIRELESS SPEAKER

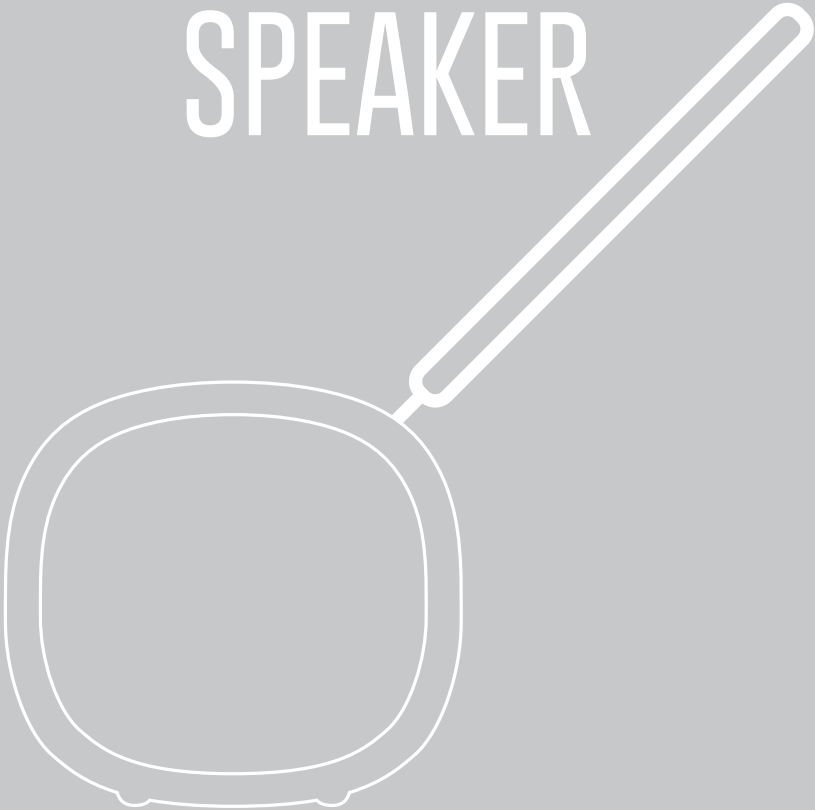

INSTRUCTION MANUAL

INSTRUCTION MANUAL

PRODUCT SPECIFICATIONS

- Bluetooth Version: 5.0
- Operating Distance: 33FT/10M
- Output Power: 3 Watt
- Input: Micro USB, 3.5mm Aux, TF Card (up to 36g)
- Battery: 300mAh Lithium Polymer
- Charging: Approx 1~2 hour
- Playback: Approx 3~4 hours
- Dimensions: 89mm x 75mm

PACKAGE CONTENTS

- Speaker
- Micro USB Charging Cable
- User Manual

CHARGING DEVICE

Before using this speaker for the first time, charge for 24 hours.

1. Plug the Micro end of the charging cable into the port on the speaker. Plug USB end into a computer's USB port or a compatible AC wall adapter.
2. The red LED will turn on to indicate the device is charging.
3. Once fully charged, the red LED will turn off.

When Battery is low, approximately 1~2 hours of charging time is needed to fully recharge the battery.

PAIRING THE DEVICE

1. Place speaker within 30ft/10m of Bluetooth enabled device.
2. Press and hold the ON/OFF button. The blue LED will flash quickly and a tone will sound to indicate pairing mode.
3. On your device's Bluetooth menu, find and select "FunAmp". (you may be required to enter a password "0000").
4. The blue LED will stop flashing and a tone will sound when pairing is complete.

BASIC INSTRUCTIONS

To turn speaker on, press and hold the ON/OFF button for 2-3 seconds.

The speaker will beep and a blue LED will flash slowly.

The blue LED will flash slowly when playing music.

The speaker will beep every 20 seconds when battery is low.

To turn speaker off, press and hold the ON/OFF button for 2-3 seconds.

LED INDICATOR

- | | |
|-----------------------|-----------------------------|
| Charging: | Red LED on |
| Fully Charged: | Red LED off |
| Pairing Mode: | Blue LED will flash quickly |
| Connected: | Blue LED will turn on |
| Playing: | Blue LED will flash slowly |

SPEAKER BUTTON AND PORT FUNCTIONS



1. Power On/Off: Press and hold the ON/OFF button. Press quickly to Play/Pause/Phone Answer and Hangup Call
2. Volume Down: Press quickly to lower volume Last Song: Press and hold for last song
3. Volume Up: Press quickly to higher volume Next Song: Press and hold for next song.
4. LED Indicator Light
5. DC 5V: Use the included Micro USB cable to connect device to a computer USB port/AC power adapter with USB to charge.
6. Microphone

SAFETY INFORMATION

Do not attempt to disassemble the device. Doing so, may result in an electric shock.

Do not use this device on an aircraft or in a hospital.

Do not expose this device to direct sunlight, heat or open flame.

Device may become warm while charging.

CAUTION

Any changes or modifications to this device, not expressly approved by the party responsible for compliance, could void the user's authority to operate this device.

This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. **This device may not cause harmful interference**
2. **This device must accept any interference received, Including interference that may cause undesired operation.**

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

– Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID: 2AJXA-BTSPK-4