

Contents

Locate your child's smartwatch and charging cable inside the box.



Charging

- 1 Insert the non-magnetic end of the charging cable into a computer USB port or a UL-certified wall charger.
- 2 Line up the magnetic pins on the charging cable with the contacts on the back of the watch until it snaps into place.
- 3 The screen will show the battery charging symbol, indicating the device is charging.
- 4 A full battery symbol will appear on the screen once the battery is fully charged.

**Note: It will take approximately 2 hours to fully charge the battery.*

**Adult operation required.*



Overview



Items	Parameters
Touch Screen	1.44" TFT LCD
Battery	300mAh
Memory	128MB
Camera	0.08 MP
Charging	2-Pin Magnetic to USB
Sensors	G-Sensor
Flashlight	LED
Water Resistance	IP67 Rating
Bluetooth	5.3

Button Functions



1 Power On/Off

Press and hold the top right button for 3 seconds to turn the device on or off.

2 Reset

Press and hold the top right button for 15 seconds to reset the device.

3 Exit Low Battery Mode

Press and hold the top right button for 3 seconds to disable Low Battery Mode and return to regular settings.


4 Flashlight Access

Swipe down on the watch face to access Quick Settings and tap the flashlight icon to toggle it on or off.


5 Camera Quick Access

To launch the camera from any screen, press the camera button on the right side. Once in Camera Mode, press the camera button again to take pictures.

Basic Navigation

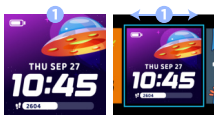

- 1 Tap and Hold**
the screen to change the watch face. Swipe through the designs and tap to select your favorite.

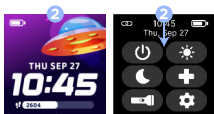

- 2 Swipe Down**
for Quick Settings, to access settings like Do Not Disturb Mode, Emergency Card, or turn off your child's smartwatch.

Watch Faces

Choose from a variety of colorful and fun watch faces. The PLAYZOOM 4 GO comes with over 10 designs, including digital, analog, and animated watch faces.



+ many more

Settings



Display: Brightness

Adjust the screen brightness for optimal viewing and explore multiple watch face options in a user-friendly menu.



Sleep Mode

Sleep mode is activated at 9 PM and deactivates at 10 AM, ensuring a restful experience for your child.



Low Battery Mode

Reduce battery consumption by dimming the screen and disabling non-essential features when in Low Battery Mode.



Parental Controls

Parents can manage settings, restrict certain features, and monitor usage to keep their kids safe and focused.



Emergency Card

Keep emergency contact details and health information stored so that they are easily accessible when needed.



Date & Time

To ensure an accurate and updated display on the device, manually set the date and time by going to Settings.



Volume

Easily adjust the sound levels on the watch to suit different environments and your child's preferences.



Screen Timeout

Set the screen timeout duration to conserve battery while keeping the device ready for interaction.



System

Access options to reset, power off, restart, adjust language settings, and check memory status.



Connect

Turn on Bluetooth to connect with audio devices for music or other audio needs.



About

Access important device information and regulatory details directly in the settings menu.



QR Code

Access the online manual by scanning the QR code in the Settings list.

Features



Games

A selection of 6 fitness-based and learning games designed to encourage activity and fun.



Activity

Equipped with a G-Sensor, tracking daily steps and distance, as well as weekly progress.



Skill Quests

Learn new skills step-by-step! Follow fun, guided tutorials to master activities such as drawing, cooking, and planting.



Audiobooks

Digital books that include images and audio narration of stories.



Sing Along

Have fun singing along to your favorite nursery rhymes and songs.



Voice Record

Record silly messages, singing, and fun sounds.



Photo Camera

Capture moments with the built-in camera. Your child can use fun filters, save their photos.



Tools

Essential tools including a calendar, alarm, stopwatch, timer, and flashlight.



Parental Controls

Enables you to control and customize your child's smartwatch settings by limiting access and features.




Emergency Card

Keep important emergency contact details and medical information stored for quick access.



Parental Controls

Parental controls helps you manage settings, restrict features, and monitor usage to keep your child safe and focused. Customize access for a secure experience.

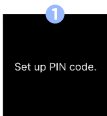

1 Set Up a PIN Code

Create a secure PIN code. Remember it or write it down, as you will need this to access Parental Controls.

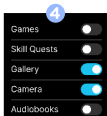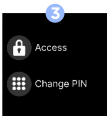

2 Confirm Your PIN

To confirm, re-enter your PIN. Once saved, this PIN will secure access to this feature.

3 Set Up Access

Tap on Access to limit use to certain features.

4 Manage Access

Toggle specific features on or off to control your child's access.

Camera

Use the built-in camera to capture special moments. Take photos and add fun filters.



Camera Filter

Tap the **Filter** icon to browse and select your desired filters. Then tap the **Camera** icon or use the camera side button to take the photo.




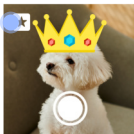


Photo Camera

To take photos, press the side camera button or use the **Photo Camera** feature. Tap the **Gallery** icon to view your photos.

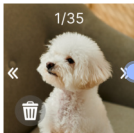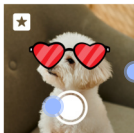


Activity

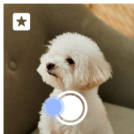

The built-in G-sensor tracks daily steps and distance, providing your child with real-time feedback on their activity. It also records weekly progress!

Scroll down to see activity from the last 7 days.

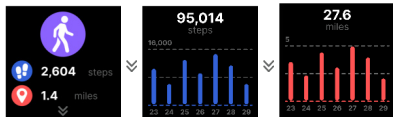

THANK YOU FOR CHOOSING PLAYZOOM

Have questions?

For the full user manual, help, and answers
to many common questions, visit us online



El manual en Español
se puede encontrar escaneando el código QR

Le manuel en français
peut être trouvé en scannant le code QR



**1 Year
Warranty**



**Customer
Support**



support.playzoom.com



support@playzoom.com

Enjoy your watch!

playzoom 4 GO[®]

Battery Notice

Misuse of batteries can lead to them bursting. Causing a fire or chemical burns. Please read the following precautions:

- Do not disassemble.
- Do not crush and do not expose the battery to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit.
- Do not expose to high temperatures or place near a heat source. Do not leave in direct sunlight for any length of time.
- Do not dispose of in a fire
- Do not handle damaged or leaking batteries.
- Keep the battery out of the reach of children.
- Keep the battery dry.
- If you ever notice any signs of damage. Cease use and contact supplier support.
- If you find the time between charges is considerably shortened with no charge in usage, the battery could be nearing the end of its life. The battery life varies from battery to battery depending on storage, operating conditions and environment.
- Examine the charging cord periodically for conditions that may result in the risk of fire, electric shock, or injury to persons such as damage to the cord, housing other parts, in the event of such conditions, the cord should not be used until properly repaired or replaced.

Battery Warning

This device contains a rechargeable lithium-polymer battery. For your child's safety, do not attempt to remove or replace the battery. Keep the device away from excessive heat, moisture, or physical impact. Use only the approved PLAYZOOM charger. If you notice any swelling, leaking, or overheating, stop use immediately and contact PLAYZOOM customer support.

Operating temperature:

Charging: 0°C ~ 45°C

Discharging: -10°C ~60°C

**Note: Adult operation required. To charge smartwatch, the watch needs to be connected to a computer or a UL-certified wall charger with the included USB cable to do so correctly.*

The actual charging time depends on the power supply, the remaining charge and the ambient temperature of the charging environment. The optimum ambient temperature is 0-40°C(32°F-104°F). Avoid using fast-chargers.

FCC Regulatory Compliance

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

FCC Regulatory Compliance

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED Compliance Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage.
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Canada IC: 31871-PZIJ4GO

ISED Radiation Exposure Statement

This equipment complies with IC 31871-PZIJ4GO radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux radiations IC 31871-PZIJ4GO établies pour un environnement non contrôlé. Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

EU Declaration of Conformity

This product conforms to the essential health, safety, and environmental requirements of relevant European Union (EU) directives.



E-Label Navigation

The e-label can be found in the information selection of your device's settings.

Product: PLAYZOOM 4 GO

Model No: PZ4L01, PZ4L04, PZ4L16, PZ4L17, PZ4L18, PZ4S04A, PZ4S05A, PZ4S07A, PZ4S09A

FCC ID: 2AJXA-PZIJ4GO

IC: 31871-PZIJ4GO



1 Swipe down on your watch's home screen.

2 Tap the Settings icon to open Main Settings.



3 Scroll down and tap the About icon to view your device's product and regulatory information.

Maintenance

- To keep your watch clean, wipe it gently with a damp cloth and air dry before wearing.
- Store the watch away from direct sunlight and heat sources, such as electric heaters, ovens, stoves, microwaves, water heaters, candles, or other places that may generate high temperatures.
- Do not drop the watch on a hard surface, expose it to moisture, or submerge it in water.
- Do not place sharp metal objects, such as pins, near the speaker, microphone, or charging connector, so that these do not attach and cause harm to your child.
- Do not allow children or pets to chew on the device or its accessories, as this may cause injury or lead to malfunction or explosion of the device.

Water Resistant

- Do not submerge in still or running water.
- Your child's smartwatch is not suitable for showering, bathing, or swimming.
- Your child's smartwatch features an IP67 rating, ensuring protection against dust and limited water exposure.

playzoom 4 GO[®]

KIDS SMARTWATCH



Quick Start Guide

Avis concernant la batterie

Une mauvaise utilisation des piles peut entraîner leur explosion, provoquant un incendie ou des brûlures chimiques. Veuillez lire les précautions suivantes :

- Ne pas démonter.
- Ne pas écraser et ne pas exposer la batterie à des chocs ou à des forces telles que des coups de marteau, des chutes ou des piétinements.
- Ne pas court-circuiter.
- Ne pas exposer à des températures élevées ou placer près d'une source de chaleur. Ne pas laisser exposé à la lumière directe du soleil pendant une période prolongée.
- Ne pas jeter au feu.
- Ne pas manipuler de batteries endommagées ou qui fuient.
- Gardez la batterie hors de portée des enfants.
- Gardez la batterie au sec.
- Si vous remarquez des signes de détérioration, cessez de l'utiliser et contactez le service d'assistance du fournisseur.
- Si vous constatez que le temps entre deux charges est considérablement réduit sans utilisation, la batterie pourrait être en fin de vie. La durée de vie de la batterie varie d'une batterie à l'autre en fonction des conditions de stockage, d'utilisation et de l'environnement.
- Examinez régulièrement le cordon d'alimentation afin de détecter tout signe pouvant entraîner un risque d'incendie, d'électrocution ou de blessure, tel que des dommages au cordon, au boîtier ou à d'autres pièces. Dans ce cas, le cordon ne doit pas être utilisé tant qu'il n'a pas été réparé ou remplacé.

Avertissement concernant la batterie

Cet appareil contient une batterie lithium-polymère rechargeable. Pour la sécurité de votre enfant, n'essayez pas de retirer ou de remplacer la batterie. Tenez l'appareil à l'écart de toute source de chaleur excessive, d'humidité ou de chocs physiques. Utilisez uniquement le chargeur PLAYZOOM approuvé. Si vous constatez un gonflement, une fuite ou une surchauffe, cessez immédiatement d'utiliser l'appareil et contactez le service clientèle de PLAYZOOM.

Température de fonctionnement : Charge : 0 °C à 45 °C
Décharge : -10 °C à 60 °C

**Remarque : utilisation par un adulte requise. Pour recharger la montre connectée, celle-ci doit être connectée à un ordinateur ou à un chargeur mural certifié UL à l'aide du câble USB fourni afin de garantir un fonctionnement correct.*

 
Le temps de charge réel dépend de l'alimentation électrique, de la charge restante et de la température ambiante de l'environnement de charge. La température ambiante optimale est comprise entre 0 et 40 °C (32 °F et 104 °F). Évitez d'utiliser des chargeurs rapides.

- le remplacement d'une batterie par un type incorrect pouvant compromettre la sécurité (par exemple dans le cas de certains types de batteries au lithium) ;*
- jeter une batterie dans un feu ou un four chaud, ou écraser ou couper mécaniquement une batterie, ce qui peut entraîner une explosion ;*
- laisser une batterie dans un environnement à température extrêmement élevée, ce qui peut entraîner une explosion ou une fuite de liquide ou de gaz inflammable ; et*
- exposer une batterie à une pression atmosphérique extrêmement basse, ce qui peut entraîner une explosion ou une fuite de liquide ou de gaz inflammable.*

keep the instruction since it contains important information

-The battery charger used with the toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

-The toy is only to be connected to equipment bearing either of the following symbols.



Note: The specification of battery charger shall be listed.(e.g. output: 5V 1A)