
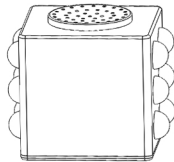


Silicone Push Pop Speaker

Instruction Manual

25632

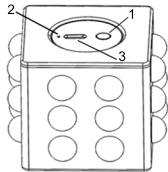

Functions:

- 1.On/Off Button
- 2.LED Indicator
- 3.Type-C Charging Port

What is included:

- 1x Speaker
- 1x USB to Type-c Charging Cable

Tech Specifications

Playing time up to 1.5 hr at max volume
Charging time:up to 2 hr
Pairing Name"25632"

Instructions:

Be sure to fully charge the speaker before using for the first time.

Charging the Speaker:

Connect the provided charging cable to a power source and to the Type C port on the speaker (3). The LED indicator light will glow red when charging and turn to blue when fully charged.

Bluetooth Setup:

Press and hold On/Off button,LED Indicator will then flash Blue and Red.
Turn on the Bluetooth function on the mobile device,Select "25632" pairing name.
Speaker will automatically pair if the mobile device has been paired before.
Press and hold On/Off button to turn off the device.

Incoming Calls:

If receiving a incoming call,audio will automatically pause and will begin to play again when call ends.
Press the On/Off button for 2s to reject the call.

The Bluetooth ® word mark and logos are registered trademarks owned by Bluetooth SIG,Inc. and any use of such marks by NINGBO GECEN PROMOTION & GIFT CO.LTD is under license. Other trademarks and trade names are those of their respective owners.

FCC ID:2AJZYS245

Bluetooth Listing Declaration ID:DN#Q301856

Safety Precautions:

WARNING-When using this product,basic precautions should always be followed:

- 1.Read all the instructions before use.
- 2.Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
- 3.The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
- 4.To reduce the risk of injury,close supervision is necessary when the product is used near children.
- 5.Do not expose the device to moisture.
- 6.Do not use the device in excess of its output rating.Overload output above rating may result in a risk of fire or injury.
- 7.Do not use the device if damaged or modified.
- 8.Damaged or modified batteries may exhibit unpredictable behavior resulting in fire,explosion or risk of injury.
- 9.Do not disassemble the device.For repairs,seek a qualified service professional.Incorrect reassembly may result in a risk of fire or injury.
- 10.Do not expose the device to fire or excessive temperature.Exposure to fire to temperatures above 104°F may cause explosion.
- 11.Ensure that qualified service professionals use only identical replacement parts to ensure product safety.

FCC Statement:

Changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment general uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:Reorient or relocate the receiving antenna.Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules.Operation is subject to the following two conditions (1) this device may not cause harmful interference and (2) this device must accept any interference received,including interference that may cause undesired operation.



MADE IN CHINA