



ASTRO SPACE SUPER POWER 2.0

The logo for Astro Space Super Power 2.0. The word "ASTRO" is in red, "SPACE" is in dark grey, and "SUPER POWER" is in a lighter grey. The "O" in "ASTRO" is replaced by a stylized planet with a ring. Below the main text, "2.0" is written in white inside a red rounded square.

AI VOICE COMMAND



Full Function



Rotational Drift



Off-Road Tire



4 Wheel Drive Climbing



Iridescent Light Effects

3+
AGES



VOICE
COMMAND



ASTRO SPACE
SUPER POWER

Batteries/Warnings

Batteries are not to be handled by an adult only.

See instructions for battery replacement.

Requires 1 x 2000 mAh Rechargeable NiMH Battery (Included) and 1 x 1.5V for Controller (Not Included).

The consumer is responsible for appropriate replacement of batteries.

Do not mix alkaline, standard, or rechargeable batteries.

Do not mix old or new batteries.

If the toy is not used for a long time, remove the batteries.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the toy before charging.

Rechargeable batteries are not to be charged by an adult.

Exhausted batteries are to be removed from the toy by an adult.

The useful terminals are not to be touched by the battery compartment.

Only batteries of the same or equivalent type are recommended to be used.

Remove the batteries from the battery compartment if the battery compartment is not used for a long time.

Dispose of batteries properly. Do not attempt to burn them. Use collection points where available.

Remove used batteries from the battery compartment with a screw driver, insert fresh batteries into the compartment making sure the polarity (+/-) is as indicated. Replace the battery cover. Ensure battery cover is closed.

**BATTERY REQUIRED 1 X RECHARGEABLE BATTERY FOR CAR (INCLUDED)
AND 2 X AA (1.5V) FOR CONTROLLER (NOT INCLUDED).**
TO REMOVE AND REPLACE BATTERY, OPEN THE BATTERY COMPARTMENT COVER.

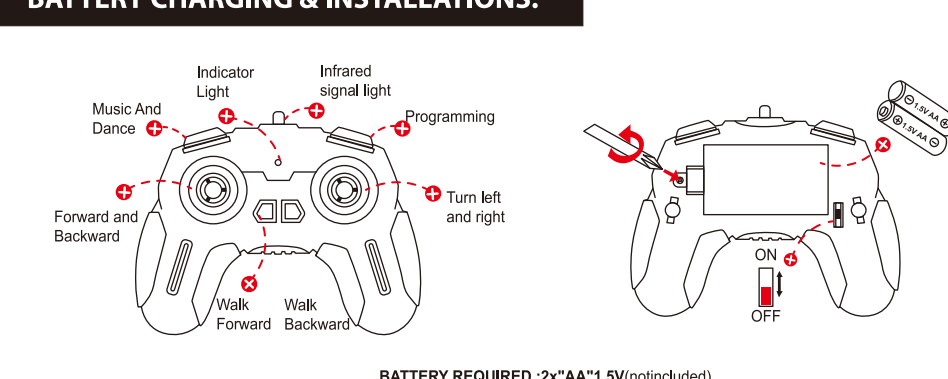
To remove and replace batteries, open the battery cover with a screwdriver. Insert four batteries into the compartment making sure the polarity (+/-) is indicated. Replace the battery cover ensuring it is securely fastened. Never allow children to attempt to replace batteries, this should always be done by an adult. The batteries installed in this toy are for their demonstration purposes only. They may need replacing after purchase for optimal performance.

This toy contains batteries that are **non-replaceable**.
Warning: Contains Non-replaceable batteries. Hazardous if swallowed.
The manufacturer makes no guarantee as to tamperable battery life.
Do not try to open this toy to access the batteries. If the batteries are accessed and the toy does not close securely, stop using the product and keep it away from children.

WARNING: BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN.
If the battery compartment does not close securely, stop using the product and keep it away from children.

WARNING: Dispose of used batteries immediately.
Keep new and used batteries away from children.
If you think batteries might have been swallowed or placed inside or near part of the body, seek immediate medical attention at once. Batteries that are not used properly can become a serious fire hazard. (112) 311-2222

BATTERY CHARGING & INSTALLATIONS

[illegible]

