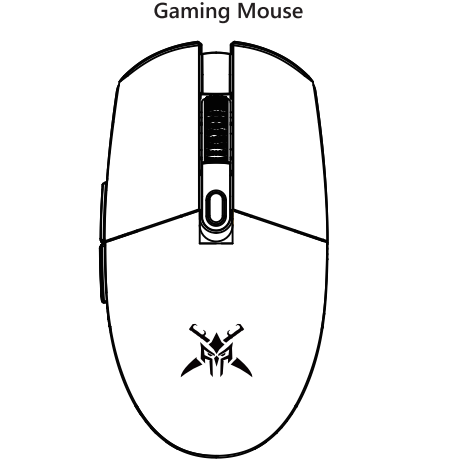 
 
 
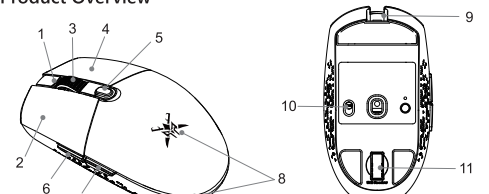 
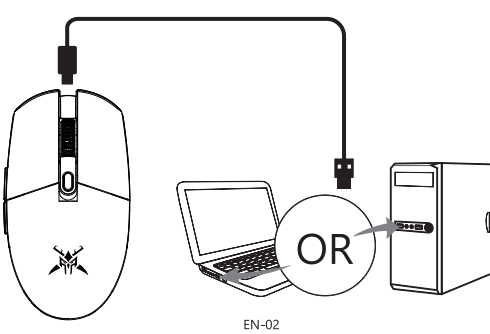 
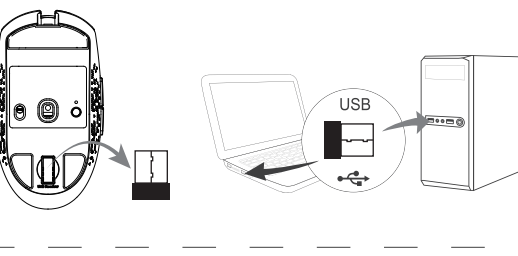 
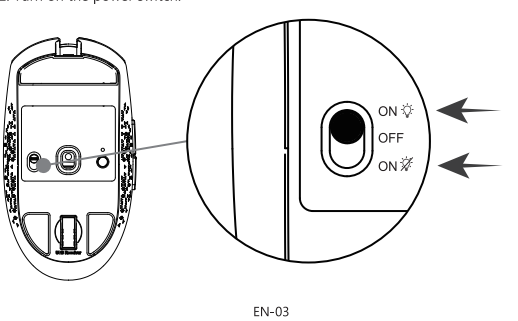 
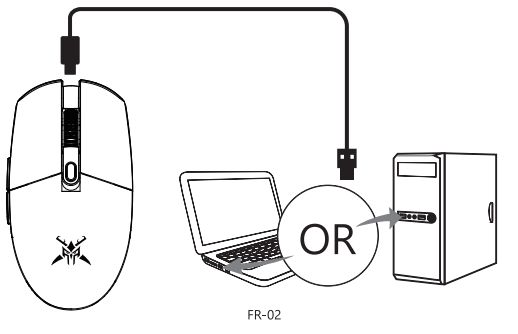 
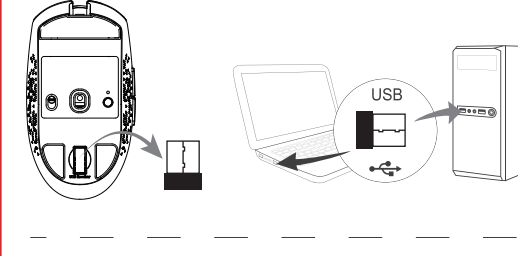 
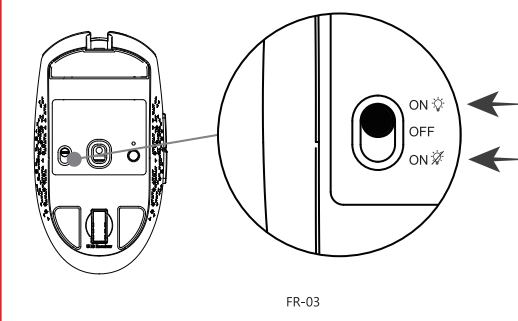 
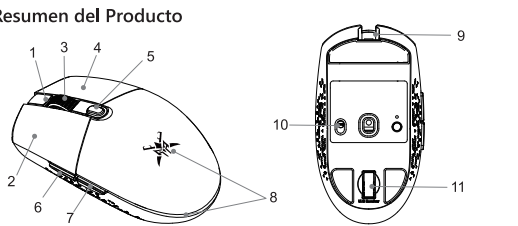 


TECKNET Gaming Mouse  Model: TK-GM001 User Manual EN DE FR ES IT Thank you for purchasing this product. Please read the User Manual thoroughly before use of the product and retain it for future reference. If you have any problem using this product, please contact us by email at support@inkworld.com. Package Contents  USB Receiver x 1  User Manual x1  Gaming Mouse x 1  USB-A to USB-C Cable x 1  Software Instruction x1 Product Overview  1. Charging Indicator 2. Left Button 3. Scroll Wheel 4. Right Button 5. DPI Button 6. Forward Button 7. Back Button 8. RGB Light 9. USB-C Port 10. Power Switch 11. USB Receiver EN-01	Specifications Operating voltage: 5V Operating current in 2.4G light-on mode: <26mA Operating current in 2.4G light-off mode: <12mA System Requirements 1. USB-A Port 2. Compatible Systems: Windows 98 /ME /2000 /XP /Vista /7 /8 /10 /11 3. Software compatible systems: Windows 10/11 For other Windows systems, you can try to download, but success is not guaranteed. Please note that the download is not available for macOS! How to Use Connecting with the USB Cable Plug the included USB cable into the mouse's USB-C port and connect it to your computer for use. 	Connecting via USB Receiver 1. Take out the USB receiver and plug it into a USB-A port on the computer.  2. Turn on the power switch. 	Disclaimers Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein, or workmanship. What the period of coverage is. Unichain warrants the TECKNET product for 12 Months. 	Correct Disposal of This Product (Waste Electricals Electronic Equipment) This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact their retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes (e.g. brownwaste or skips). non-authorized program, or system equipment modification or alteration.	Specifications Tension de fonctionnement : 5V Courant de fonctionnement en mode Lumière 2.4G allumée : < 26mA Courant de fonctionnement en mode Lumière 2.4G éteinte : < 12mA Exigences du Système 1. Port USB-A 2. Systèmes compatibles : Windows 98 /ME /2000 /XP /Vista /7 /8 /10 /11 3. Systèmes compatibles avec le logiciel : Windows 10/11 Pour les autres systèmes Windows, vous pouvez essayer de télécharger, mais le succès n'est pas garanti. Veuillez noter que le téléchargement n'est pas disponible pour macOS. Comment Utiliser Connexion avec le câble USB Branchez le câble USB inclus dans le port USB-C de la souris et connectez-le à votre ordinateur pour l'utiliser. 	Connexion via le récepteur USB 1. Sortez le récepteur USB et branchez-le dans un port USB-A sur l'ordinateur.  2. Allumez l'interrupteur d'alimentation. 	CONSIGNES DE SÉCURITÉ IMPORTANTES – RESPECTEZ SCRUPULEUSEMENT CES CONSIGNES. 1. CONSERVEZ CES CONSIGNES – Cette feuille contient des consignes de sécurité et d'utilisation importantes. 2. Avant d'utiliser ce produit, veuillez lire toutes les consignes et précautions sur le produit, les accessoires et l'appareil utilisant ce produit. 3. Cet appareil n'est pas destiné aux personnes (dont les enfants) ayant des capacités mentales, physiques ou sensorielles réduites, ou ayant un manque d'expérience ou de connaissances, à moins qu'elles aient reçu une supervision ou des consignes concernant l'utilisation de cet appareil d'une personne responsable de leur sécurité. 4. Les enfants devraient être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil. 5. Maintenez à l'écart du feu car il peut y avoir des risques d'explosion. 6. Ne pas placer le produit dans ou près de d'objets inflammables, explosifs ou dangereux. 7. Ne pas utiliser le produit avec un câble ou une prise abîmés. 8. Ne pas utiliser le produit si l'a été abîmé. 9. Ne pas démonter le produit. Le démontage peut provoquer des risques d'explosion. 10. Ne pas jeter ou secouer le produit. 11. Ne pas placer le produit dans ou près de l'eau, de la pluie, d'une humidité excessive ou d'une chaleur extrême.
Power Switch Switch Position ON  Mouse ON Mouse ON Light ON OFF  Mouse OFF Mouse ON Light OFF ON  Mouse ON Mouse ON Light OFF	Important Safety Instructions-Carefully Follow These Instructions. 1. RETAIN THESE INSTRUCTIONS - This sheet contains important safety and operating instructions. 2. Before using the product, read all instructions and caution markings on the product, accessories, and device. 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. 4. Children should be supervised to ensure that they do not play with the product. 5. Keep the product away from the fire to avoid an explosion. 6. Do not place the product in or near an inflammable, explosive, or hazardous object. 7. Do not operate the product with a damaged cord or plug. 8. Do not operate the product if it has been damaged in any way. 9. Do not disassemble the product. Disassembly may result in a risk of safety hazards. 10. Do not throw or shake the product. 11. Do not place the product in or near water, rain, excess moisture, or extreme heat.	Limited 12-Month Warranty What this warranty covers. Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TECKNET product that the product shall be free of defects in design, assembly, material, or workmanship. What the period of coverage is. Unichain warrants the TECKNET product for 12 Months. 	Contento del Paquete  Ratón Gaming x 1  Cable USB-A a USB-C x 1  Manual de Usuario x 1	Resumen del Producto  1. Indicador de Carga 2. Botón Izquierdo 3. Rueda de Desplazamiento 4. Botón Derecho 5. Botón DPI 6. Botón Adelante 7. Botón Atrás 8. Luz RGB 9. Puerto USB-C 10. Interruptor de Encendido 11. Receptor USB ES-01	Especificaciones Voltaje de operación 5V Corriente de operación en modo de luz 2.4G encendida: < 26mA Corriente de operación en modo de luz 2.4G apagada: < 12mA Requisitos del Sistema 1. Puerto USB-A 2. Sistemas Compatibles: Windows 98 /ME /2000 /XP /Vista /7 /8 /1		

尺寸: 80x100mm

材质：80g书写纸

颜色：黑白

其他：折叠(红色是刀模线,无需印刷)

