

## EN

1. **RETAIN THESE INSTRUCTIONS** - This sheet contains important safety and operating instructions.
2. Before using the product, read **all** instructions and caution markings on the product, accessories, and device.
3. This appliance is **not** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Keep the product away from the fire to avoid an explosion.
6. For proper insertion, please observe polarity indicators (+/-).
7. Do not place the product in or near an inflammable, explosive, or hazardous object.
8. Do not operate the product with a damaged cord or plug.
9. Do not operate the product if it has been damaged in any way.
10. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
11. Do not throw or shake the product.
12. Do not place the product in or near water, rain, excess moisture, or extreme heat.

<https://eu.tecknetonline.com/>

红色是刀模线,无需印刷)