

 
2 IN 1 USB Adapter Installation

CAUTION

- * Do not over-rotate the antennas to avoid breakage.
- * Do not exceed 180° rotation.

Step 1 Install the Adapter

Connect to a Computer

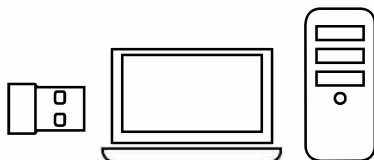

Step 2 Install Driver

a. Go to My Computer or This PC.

 


b. Double click the CD-ROM, then run SetupInstall.exe



Step 3 Join a Wireless Network

- Click the network icon () or () on the taskbar.
- Select your Wi-Fi network, enter the password when prompted.

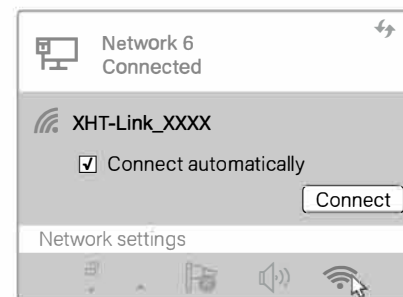


Notes: If you cannot find the setup program, please download the driver at:
<https://bit.ly/4tnJ8oF>



Check if there is built-in Bluetooth in your computer before use Bluetooth, need to disable :

 Press the " Windows"+"X" to select "Device Manager", If there is a "Bluetooth" icon in the " Device Manager", please follow the steps below to disable it, if not, please skip this part

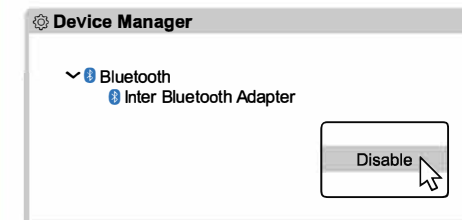

Pair With Bluetooth Devices

 
a. Right-click the (Bluetooth) icon on the taskbar

Note
if the Bluetooth icon is not displayed, refer to FAQ Q4

b. Select **Add a Bluetooth Device** or **Add a Device** to scan for available devices.

c. Select your Bluetooth device from the list and follow the onscreen instructions to complete pairing

Note:
Make sure your device's Bluetooth is enabled and discoverable.

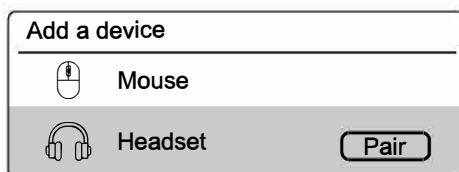

Frequently Asked Questions(FAQ)

1. Why Slow speed or Unstable connection?

- Check Wi-Fi signal strength. If signal is weak, move the computer closer to your router if possible
- Try to switch between the 2.4G and 5G channels, if it's a dual-band adapter.
- Connect to the USB 3.0 port on your computer (if it's a USB 3.0 network card).

2. Why cannot connect to Wi-Fi

- Try to turn off and turn on/reboot your wireless clients to connect to the Wi-Fi. (Computer and Router)
- If the IP address is not obtained automatically, change it to Obtain IP Address Automatically.
- Change router's wireless channel.

3. Why doesn't show WiFi6?

- If you purchased a Wi-Fi6 adapter, need pairing it with a Wi-Fi6 router, can achieve optimal performance

4. What should I do if the Bluetooth or Wi-Fi icon doesn't appear?

- Make sure you have turned on the Bluetooth or Wi-Fi in Windows settings

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the bottom of the unit.