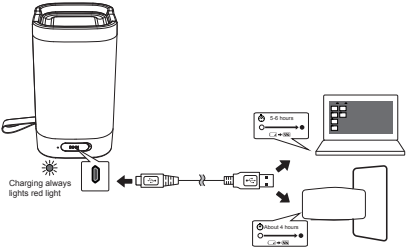


Rugged Speaker Model:21YX06 PRODUCT GUIDE FCC ID: 2AKI18-BLTSPK Ver.01	What's in box Rugged speaker x1 30cm USB charging cable x1 Manual x1	Specification Bluetooth version: V5.0 Product size: 102mm(H) X 63mm(W) Pairing name: 21YX06 Speaker diameter: 52mm Microphone_Sensitivity: -42 ± 3dB at 1mw 1kHz Operating range: 10m Battery capacity of earbuds: 1200mAh Working hour: upper than 10 hours Charging time: about 3 hrs Bluetooth profile:HFP A2DP HSP AVRCP	Power on/off Power on: press and hold for 2s until you hear the 'power on' prompt voice. Power off: press and hold for 2s until you hear the 'power off' prompt voice and LED light off. In pairing mode but not connected beyond 5 mins, the Rugged speaker will power off automatically.
---	---	---	---

Play music Press and hold to adjust previous/ next song. Play/pause music :Single click Previous song Next song Volume+ &-: Single click Volume - Volume +	Phone call Answer & hang up : Reject a call Single click Press & hold for 1s Volume+ &-: Single click Volume - Volume +	Charging Rugged speaker comes with a lithium-ion battery. For best result, fully charge Rugged speaker before use. (recommended output of charging device is 1A) To charge, plug the micro USB cable into Rugged speaker and plug the standard USB connector into your device into your power source (If power source is Laptop, Desktop, much more charging time(5-6 hours) will be needed) While charging the LED solid Red, fully charged, light off. 	FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, these limits are designed to provide reasonable protection against harmful interference in a residential installation, this equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. May cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment	Trouble Shooting and Common Situations Rugged Speaker cannot power on Battery drain, please charge the device for 30 minutes, and then powering on. Smart phone cannot search Bluetooth Rugged Speaker 1. Make sure the Rugged Speaker is in pairing mode (blue LED flashing alternately) 2. Delete pairing list in smart phone and searching WIRELESS SPEAKER again. 3. If it still cannot be found, please restart smart phone and Rugged Speaker again. Rugged Speaker will be disconnected from time to time 1. The battery drain. 2. The Rugged Speaker is beyond the communication range(10m). No sound on talking mode 1. Confirmed the Rugged Speaker connected to earpiece mode on talking. 2. Try to volume up Rugged Speaker or smart phone. No sound with music playing 1. Try to volume up Speaker or smart phone. 2. Rugged Speaker disconnected with smart phone, please reconnected again. Cannot charger for Rugged Speaker 1. The charger cable connected not well. 2. Charger line was damaged.
---	---	---	---	--