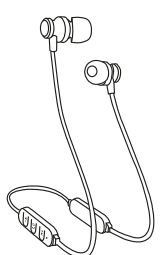
 
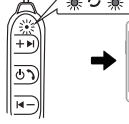
 
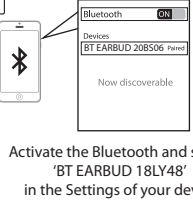
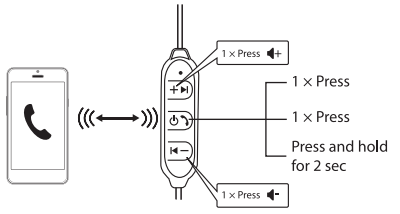
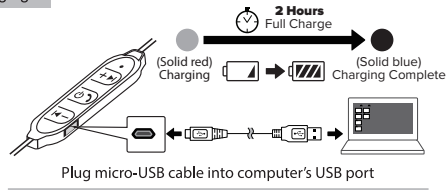
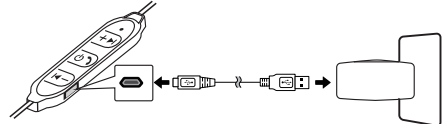


Front

Back

Size: 360*50mm
Foldable size: 72*50mm

Wireless earbuds with mic Model:20BS06 PRODUCT GUIDE Ver.01 12/11/18	What's in the Box  Product Guide Micro-USB Charging Cable 3 Earbud Sizes Bluetooth® In-Ear Headphone Ver.01 12/11/18	Power On  Press and hold for 2 sec  Blue light flashes Ver.01 12/11/18 Power Off  Press and hold 2 sec Ver.01 12/11/18	Bluetooth Pairing  Press and hold 5 sec when power off  LED will flash red and blue when ready to pair  Blue LED flashes when connected  Activate the Bluetooth and select 'BT EARBUD 18LY48' in the Settings of your device Ver.01 12/11/18	Play  1 x Press Play/Pause  Press & Hold 15 Siri/Google Assistant  1 x Press Stop  1 x Press Previous  1 x Press Next  1 x Press Volume Up  1 x Press Volume Down Ver.01 12/11/18
封面	P1	P2	P3	P4
Phone Controls  1 x Press Play/Pause 1 x Press Stop Press and hold for 2 sec 1 x Press Previous 1 x Press Next Answer Hang up Decline Ver.01 12/11/18	Charging  2 Hours Full Charge Plug micro-USB cable into computer's USB port  Plug micro-USB cable into USB wall charger Ver.01 12/11/18	Product Information 1) Product Name: Wireless earbuds with mic; 2) Pairing Name: BT EARBUD 20BS06 3) Speaker Rated Power Input: 3mW(0.31V); 4) Speakdr Maximum Input Power: 5mW(0.40V); 5) Loudspeaker Diameter:Φ10mm; 6) Speaker Impedance: 16±15% Ω; 7) Sensitivity: 93±3dB; 8) Charging Cable: 0.3m Ver.01 12/11/18	FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, these limits are designed to provide reasonable protection against harmful interference in a residential installation, this equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. May cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment Ver.01 12/11/18	Troubleshooting Headphones fail to turn on - Ensure headphones are fully charged before turning it on. My mobile device is unable to find the Bluetooth headphones - Check that the headphones is in pairing mode (blue/red indicator lights flashing). - Remove "BT EARBUD 20BS06" from Bluetooth settings list and setup again. - If still no search result, please restart the headset and phone, and try again. After successfully pairing, headphones disconnect - Check the battery level and recharge if low. - Ensure headphones are within 30ft of mobile device and free of obstructions. - The connection may be affected by obstructions such as walls or other electronic devices. Try moving closer to the device you are connected to. When answering a call, I cannot hear anything - Ensure the mobile device is connected to headphones and not on speakerphone mode. - Increase the volume on your mobile device. There is no sound when listening to music - Increase the volume on your mobile device. - Reconnect the headphones to your mobile device. - Check if the app has paused or stopped playback. Headphones fail to charge - Check whether the charging cable is functional. - Ensure the micro-USB charging cable is fully seated in the headphones and wall charger ports. - Ensure the charging cable and wall charger are functional. Ver.01 12/11/18
P5	P6	P7	P8	封底