

Ver.01



- Earbuds **Cannot power on**
 - 1. Battery drain, please charge device for 30 minutes, and then power on.
 - 2. Smart phone can't search Bluetooth Earbuds
- 1. Make sure the Earbuds is in pairing mode (red/blue LED flashing alternatively)
- 2. Delete pairing list in smart phone and searching Earbuds again.
- 3. Earbuds cannot be found, please reset Earbuds again
- Earbuds will be disconnected from time to time
- 1. The battery drain.
- 2. Earbuds is beyond the communication range(10m)
- **No sound on talking mode**
 - 1. Confirmed the Earbuds connected to smart phone mode on talking
 - 2. Try to volume up Earbuds or smart phone.
- **No sound with music playing**
 - 1. Try to volume up Earbuds or smart phone.
 - 2. Earbuds disconnected smart phone, please reconnect again.
- **Cannot charge for Earbuds**
 - 1. Make sure the Earbuds placed well in the charging case and the charging case is fully charged (redlightnly yellow)
 - 2. make sure LED lights red
 - 3. Check if the charging case is drain up
 - 4. Charge the charging case

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction