

iDFace Max – Quick Guide

Thank you for purchasing the iDFace Max Facial Recognition Access Controller! For detailed information on how to use your new iDFace Max, please refer to:

www.controlid.com.br/userguide/idface-max.pdf

By using Control iD products, you agree to the Terms and Conditions of Use and Personal Data Protection Information available at:

www.controlid.com.br/legal/eula.pdf

Required Material

To install your iDFace Max, you will need the following items: a drill, wall plugs with corresponding screws, a flathead or Phillips screwdriver, a 12V power supply with at least 2A, and an electric lock.

The device can also be powered via the Ethernet connection using PoE infrastructure compatible with IEEE 802.3af. In this case, the device will also provide power to the External Activation Module (EAM).¹


¹ The use of the 12V provided by PoE is exclusively for powering the EAM. Any other use (such as parallel connections with other devices) constitutes a warranty violation and exempts the manufacturer from liability.

Installation

For the optimal operation performance of your iDFace Max, the following precautions must be taken:

- Install in a location without direct sunlight exposure. Lighting should be considered for better image capture quality.
- Avoid placing metallic objects near the back of the device to prevent interference with the proximity card reader range. If unavoidable, use insulating spacers.
- Before securing the device, ensure all connection cables have been properly routed to the equipment.
- Mount the top of the iDFace Max at 1.5m from the ground for pedestrian use or at 1.35m for vehicle use.

Installing the equipment is simple and must follow the diagram below:

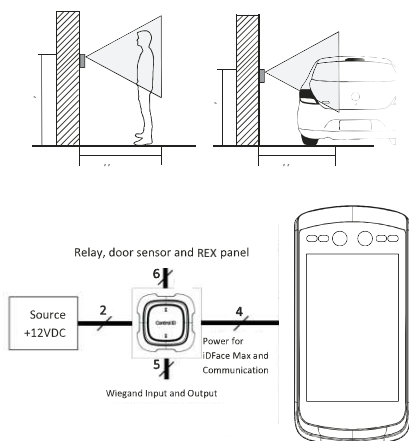

1. For increased installation security, place the External Activation Module (EAM) in a secure area (inside the premises).

The iDFace Max EAM is compatible with the rest of the Control iD product line, but EAMs manufactured before July 2024 are not compatible with the iDFace Max due to current consumption (2A peaks).


2. Use the template on the back of this guide to drill the 5 mounting holes for the iDFace Max and insert the wall plugs.
3. Connect the EAM to a +12V power source and to the lock being controlled using the provided cables.
4. Run a 4-conductor cable to interconnect the EAM and the iDFace Max. For distances greater than 5m, use thicker cables and twisted pairs for the data signals. If using a Cat5 cable to connect the EAM to the iDFace Max, use 3 pairs for power and 1 pair for data signals. In this case, the distance should not exceed 25m. Remember to use the same pair for signals A and B.

Recommended installation configuration for Cat5 cable:

+12V	Green+Orange+Brown
GND	Green/Wh + Orange/Wh + Brown/Wh
A	Blue
B	Blue/Wh

The iDFace Max can continuously consume over 1A, so use thick-gauge cables or combine multiple pairs to facilitate current conduction.


5. Connect the wiring harness provided with the iDFace Max to the 4-conductor cable from the previous step.
6. Remove the wall mount bracket from the iDFace Max.
7. Screw the wall mount bracket into the wall plugs.
8. Remove the sealing cover on the back and connect the iDFace Max to the 4-conductor cable.

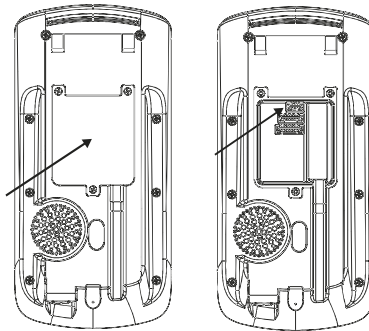

9. Reposition and secure the cover and sealing gasket.

The cover and sealing gasket are essential for ensuring IP65 protection. Make sure they are properly positioned and secured on the back of the product.

10. Place the iDFace Max on its wall mount and secure it with the screw and tool provided along with the connection cables.

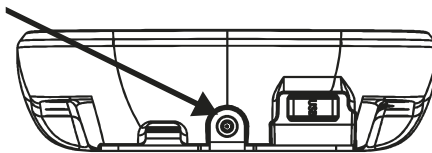

Description of Connection Pins

On your iDFace Max controller, there is a connector input on the back of the device in addition to the network (Ethernet) connector input. On the External Activation Module (EAM), there are 4 other connectors that will be used for connecting locks, REX, sensors, and readers as explained below.

iDFace Max - 4-pin connector (Power + Data)

GND	Black	Power supply ground
B	Blue/Wh	Communication B
A	Blue	Communication A
+12V	Red	+12 Power supply

iDFace Max - 7-pin connector (Expansion)

GPIO1	Yellow	Optional Pin 1
GPIO2	Yellow	Optional Pin 2
GPIO3	Yellow	Optional Pin 3
GND	Black	Ground (common)
NC	Green	Contact Normally Closed
COM	Orange	Common Contact
NO	Blue	Contact Normally Open

The GPIO pins and the relay integrated into the equipment are configurable via firmware.

iDFace Max - 8-pin connector (Expansion)

NC		Not Connected
NC		Not Connected
NC		Not Connected
GND	Black	Ground (common)
A	Purple	RS-485 Auxiliary – A
B	Purple/Wh	RS-485 Auxiliary – B
L-Out	Wh	Line-Out Audio
L-GND	Brown	Line-Out Terra

EAM - 4-pin connector (iDFace Max connection)

GND	Black	Power supply ground
B	Blue/Wh	Communication B
A	Blue	Communication A
+12V	Red	Output +12V

EAM - 2-pin connector (Power)

GND	Black	Power supply ground
+12V	Red	+12 Power supply

Connection to a +12V source of at least 2A is essential for the correct operation of the equipment

EAM - 5-pin connector (Wiegand In/Out)

WOUT0	Yellow/Wh	Wiegand output - DATA0
WOUT1	Yellow	Wiegand output - DATA1
GND	Black	Ground (Common)
WIN0	Green/Wh	Wiegand Input - DATA0
WIN1	Green	Wiegand Input - DATA1

External card readers must be connected to the Wiegand inputs WIN0 and WIN1. If there is a controller board, we can connect the Wiegand outputs WOUT0 and WOUT1 so that the user ID identified on the iDFace Max is transferred to the controller.

EAM - 6-pin connector (Door Control/Relay)

DNS	Purple	Door Sensor Input
GND	Black	Ground (common)
BT	Yellow	Entrance to REX
NC	Green	Contact Normally Closed
COM	Orange	Common Contact
NO	Blue	Contact Normally Open

The REX "door contacts" (sensors, relays, are configurable as NO or NC and must be connected to etc.) between GND and the respective pin.

EAM – Communication Modes

- Standard: EAM will communicate with any equipment
- Advanced: EAM will only communicate with the equipment to which it was configured in this mode

To reset the EAM to its default mode, turn it off, connect the WOUT1 pin to BT, and then turn it on. The LED will blink quickly 20 times, indicating that the reset has been completed.

Configuring your iDFace Max

All parameters of your new iDFace Max can be configured through the LCD display (Graphical User Interface – GUI) and/or through a standard web browser (provided the iDFace Max is connected to an Ethernet network and has this interface).

To configure, for example, the IP address, subnet mask, and gateway via the touchscreen, follow these steps: **Menu → Settings → Network**. Update the