 


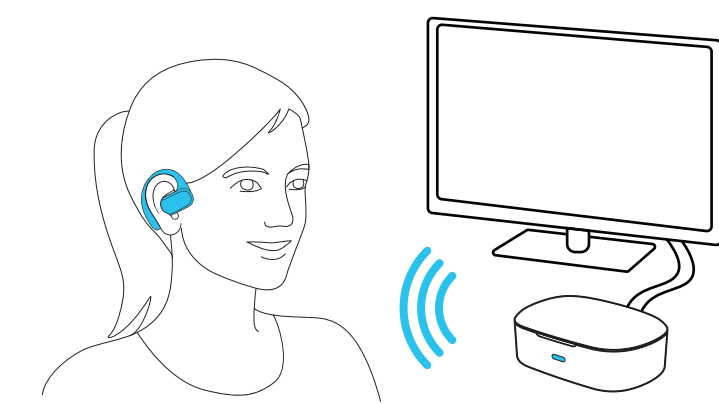

TV earphones
MODEL : H01

USER MANUAL
dcolorteam@gmail.com

1

Catalogue

- In The Box 03
- Earbud Diagram 04
- Wearing 05
- Charging Case & Transmitter 06
- OPTION 1: OPTICAL Port 07
- TV Settings for OPTICAL Port 08
- OPTION 2: AUX / RCA Port 09
- Charging 10
- Pairing Automatically 11
- Volume Control 12
- Factory RESET 13
- Trouble Shooting 14

2

In the Box

Open-Earbuds

Charging Case/
Transmitter

User Manual

Power Cable

Optical Audio Cable

AUX 3.5mm
Audio Cable

NOTE: No Power Adapter Included!

3

Earbud Diagram

 
Touch area

L Volume down

R Volume up

Battery level

- Battery full
- Battery Low

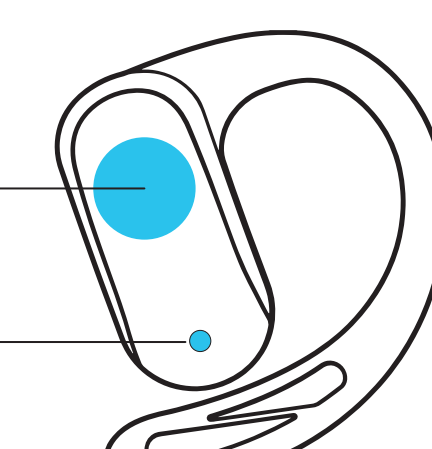

NOTE: No microphone function, No Bluetooth function

4

OPTION 2: AUX / RCA Port

AUX

AUX Cable

AUX 3.5mm

RCA

RCA Adapter

RCA

NOTE: RCA adapter is not included, recommend AUX Port.

9

Charging

A: TV USB


B: USB Adapter

Charge via TV's USB port (A) or a USB adapter (B, USB adapter not included)

10

Pairing Automatically

The charging case has a built-in transmitter. Open the lid of the charging case, and the earbuds will connect automatically to the charging case (transmitter).

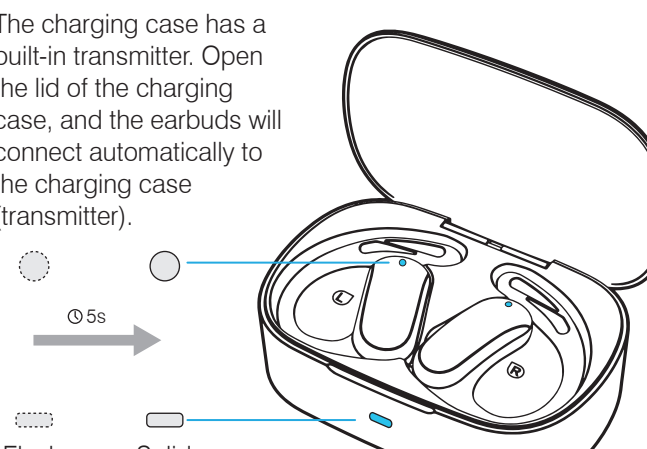

NOTE: No Bluetooth function! Only for TV watching.
If the connection fails, you can place the earbuds back into the charging case, close the cover, wait for 5 seconds, and then open the lid again, they will connect automatically.

11

Volume Control

L

Touch

R

Left

 
Volume

Right

Volume

12

Wearing

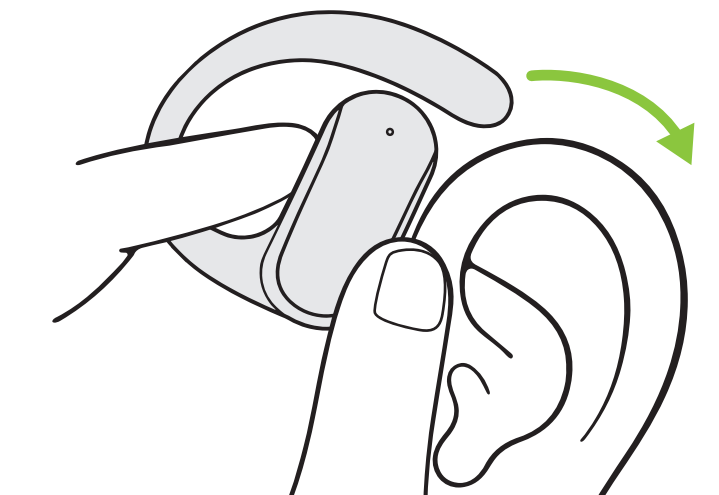

5

Charging Case & Transmitter

Indicator

Battery level / Pairing status

USB-C Power port

RESET Hole

AUX input from TV

OPTICAL input from TV

6

OPTION 1: OPTICAL Port

Recommend

OPTICAL

Optical Cable

OPT/OUT

NOTE: Go to TV settings if connect via the OPTICAL Port.
Most TVs audio output only one digital output at a time, so if TV's HDMI ARC port is in use, the OPTICAL port may be disabled.
You can either unplug the HDMI ARC or try connecting via AUX / RCA.

7

TV Settings for OPTICAL Port

Go to TV setting if connect via the OPTICAL Port

TV Settings > Sound > Audio Out > Optical / Digital Out / External Speaker

TV Settings > Sound > Expert Settings > Digital Output Audio Format > PMC / Stereo, or you can turn off Dolby

NOTE: If you still can't hear anything through the headphone, You can try AUX / RCA Port

8

Factory RESET

If the connection fails or the device doesn't work, please try performing a factory reset

Place the earbuds back into the charging case, close the lid, and use a thin needle to press the RESET hole once. Wait until the white light on the charging case turns off, then open the lid. The indicator lights on both the earbuds and the charging case will flash for approximately 5 seconds, after which a steady white light will appear—this confirms that the factory reset has been successfully completed.

13

Trouble Shooting

1. No sound from the headphones?

First, check if the charging case and headphones have sufficient battery power. Place the headphones back into the charging case—if both the headphones and the charging case light up with a white light, it indicates they have enough power. Then, check if the optical fiber is properly connected to the TV and if the TV is set up correctly (refer to the settings on Page 8). Use the TV remote control to turn up the TV volume, and at the same time, touch the right headphone to increase the headphone volume.

2. How to control the volume?

Touch the left headphone to decrease the volume, and touch the right headphone to increase the volume.

3. What to do if the headphones fail to connect to the charging case (transmitter)?

Place the headphones back into the charging case, close the lid, wait for 5 seconds, then open the lid. If the indicator lights of the headphones and the charging case first flash for 5 seconds and then stay on steadily, it means the automatic connection is successful. If the connection still fails, please reset the device to its factory settings (refer to the factory reset instructions on Page 13).

4. Is it better to charge with a USB charger or the TV's USB port?

It is recommended to power the charging case via the TV's USB port. If the TV does not have a USB port, you can use a 5V 1A USB charger for power supply.

14

EU REP

SUCCESS COURIER SL

CALLE RIO TORMES NUM. 1, PLANTA 1, DERECHA, OFICINA 3, Fuenlabrada, Madrid, 28947 Spain

LIDO_EU_20240128000080 successservice2@hotmail.com

UK REP

GOAL REACH CONSULTING LTD

OFFICE 1023 3 HARDMAN STREET 10TH FLOOR, SPINNINGFIELDS MANCHESTER, UK M3 3HF

LIDO_UK_20240129001657 goalreacheservice@hotmail.com

FR

ÉLÉMENTS D'EMBALLAGE À SÉPARER ET À DÉPOSER DANS LE BAC DE TRI

Model

H01

Product

TV earphones

FCC ID

2AKL3-H01

Batch Number

20251010

Manufacturer E-mail

dcolorteam@gmail.com

Manufacturer

Shenzhen Junus Electronics Co.Ltd

Manufacturer Address

Factory Building 401, No.36, Hezhou Road, Hezhou Community, Hangcheng Street, Baotou District, Shenzhen, China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

RoHS

FC

CE

15

dcolorteam@gmail.com

16