

 
 
 
REMOTE CONTROL SPEEDBOAT MANUAL

Product accessories





Instructions for using remote-controlled ships

Remote control speedboat battery installation: First, twist open the cockpit lock and battery cover lock, remove the battery cover, and place the battery into the battery holder. Insert the battery plug into the battery holder, then place it in place, cover the battery cover, and finally install the cockpit. Tighten the lock.

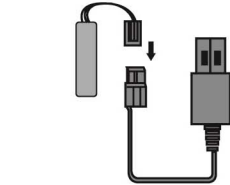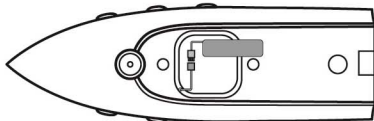

Remote control ship uses one 3.7V rechargeable battery

  Remote Control Instructions

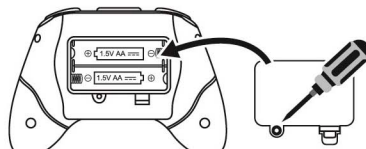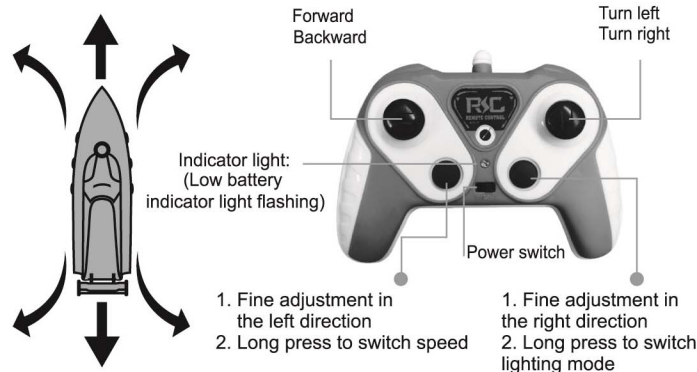

The remote control uses 2 1.5V "AA" batteries

Remote control battery installation:
Open the battery cover on the back of the remote control and insert 2 "AA" alkaline batteries. Pay attention to the + - pole mark in the battery box
(Battery must be purchased separately)

Reasonably maintain the product and use some water droplets or water in the hull. After use, the surface should be shaken and wiped dry to maintain a dry state.

Precautions and maintenance

- 1) The product uses a 3.7V rechargeable battery, and the remote control uses a 1.5V AA non rechargeable battery;
 - 2) The battery should be removed and installed correctly according to the polarity and voltage markings on the product box. The battery should not be short circuited;
 - 3) Non rechargeable batteries cannot be charged;
 - 4) When charging, the use of the product must be stopped;
 - 5) Different types of batteries or old and new batteries cannot be mixed;
 - 6) Only batteries that are the same or equivalent to the recommended batteries can be used;
 - 7) The exhausted battery should be removed from the product. If it is not used for a long time, please remove the battery from the product
 - 8) The power terminal must not be short circuited;
 - 9) The model can only use the recommended charger, which is not the model;
 - 10) Before cleaning the model, the transformer or charger should be disconnected;
 - 11) Regularly inspect the wires, plugs, casing, and other components of the charger for damage.
- If any damage is found, stop using it until it is fully repaired.
This product is a special product and must be kept dry.
If water enters the cabin, it must be dried to avoid accidents

WARNING

- 1) Please maintain a safe distance from high-speed rotating propellers to avoid the risk of twisting or cutting.
- 2) To ensure the electromagnetic environment requirements of aviation radio stations, it is prohibited to circle around the center point of the airport runway
- 3) The motor part is a heating component, please do not touch it to avoid the risk of burns.
- 4) During the period when relevant national departments issue radio control orders and in the area, the use of model remote controllers should be stopped as required.
- 5) This product is not a toy and is only suitable for children aged 6 and above
- 6) This packaging contains important information and must be retained

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.